
DTC: 26:Er84 [AUDIO]


id0902f6037200

Description	Microphone circuit malfunction
Detection condition	Microphone non-connection signal detected continuously.
Fail-safe	Not applicable
Possible cause	• Microphone connector or terminal malfunction • Bluetooth® unit connector or terminal malfunction • Short to ground in wiring harness between Bluetooth® unit terminal A and microphone terminal A • Open circuit in wiring harness between the following terminals: — Bluetooth® unit terminal E and microphone terminal E (L.H.D.) — Bluetooth® unit terminal E and microphone terminal F (R.H.D.) • Microphone malfunction • Bluetooth® unit malfunction


L.H.D.

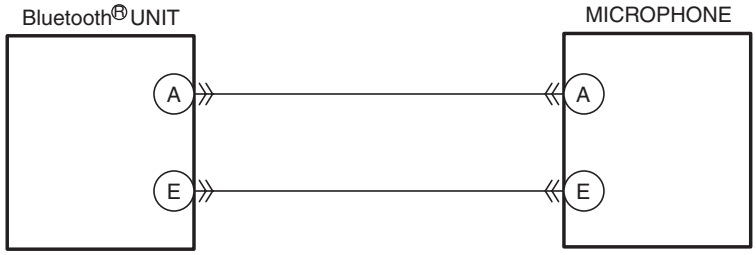


R.H.D.

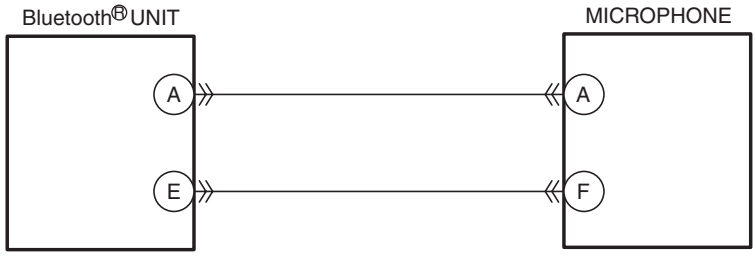



Bluetooth® UNIT
WIRING HARNESS-SIDE CONNECTOR

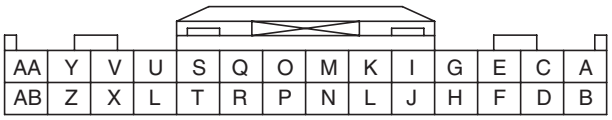



MICROPHONE
WIRING HARNESS-SIDE CONNECTOR





Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT MICROPHONE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the microphone connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.

Step	Inspection		Action
2	**INSPECT Bluetooth® UNIT CONNECTOR CONDITION** • Disconnect the Bluetooth® unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
3	**INSPECT MICROPHONE CIRCUIT FOR SHORT TO GROUND** • Verify that the microphone and Bluetooth® unit connectors are disconnected. • Inspect for continuity between microphone terminal A (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between Bluetooth® unit terminal A and microphone terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.
4	**INSPECT MICROPHONE CIRCUIT FOR OPEN CIRCUIT** • Verify that the microphone and Bluetooth® unit connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Bluetooth® unit terminal E and microphone terminal E (L.H.D.) — Bluetooth® unit terminal E and microphone terminal F (R.H.D.) • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Bluetooth® unit terminal E and microphone terminal E (L.H.D.) • Bluetooth® unit terminal E and microphone terminal F (R.H.D.) **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.
5	**VERIFY IF MALFUNCTIONING LOCATION IS MICROPHONE DEPENDING ON REPEATABILITY** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the Bluetooth® unit. (See CLEARING DTC [AUDIO].) • Perform the Bluetooth® unit DTC inspection. (See DTC INSPECTION [AUDIO].) • Is the same DTC present?	Yes	Replace the microphone, then go to the next step. (See MICROPHONE REMOVAL/INSTALLATION.)
		No	Go to Step 7.

Step	Inspection		Action
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the Bluetooth® unit. (See CLEARING DTC [AUDIO].) • Perform the DTC inspection for the Bluetooth® unit. (See DTC INSPECTION [AUDIO].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the Bluetooth® unit. (See Bluetooth® UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [AUDIO].)
		No	DTC troubleshooting completed.