

DTC: 28:Er09 [AUDIO]

id0902f6073500


Description	No USB playback function file/track
Detection condition	• When USB device connected, connection error detected. • When USB device connected, audio unit internal malfunction detected. • When USB device connected, read error detected.
Fail-safe	Not applicable
Possible cause	• USB device malfunction • Incompatible USB device (format) used • Auxiliary jack/USB port connector or terminal malfunction • Auxiliary jack/USB port malfunction • Audio unit connector or terminal malfunction • Open circuit in wiring harness between the following terminals: — Audio unit terminal 3C and auxiliary jack/USB port terminal UA — Audio unit terminal 3B and auxiliary jack/USB port terminal UC — Audio unit terminal 3D and auxiliary jack/USB port terminal UB — Audio unit terminal 3A and auxiliary jack/USB port terminal UD • Short to ground in wiring harness between the following terminals: — Audio unit terminal 3C and auxiliary jack/USB port terminal UA — Audio unit terminal 3B and auxiliary jack/USB port terminal UC — Audio unit terminal 3D and auxiliary jack/USB port terminal UB — Audio unit terminal 3A and auxiliary jack/USB port terminal UD • Audio unit malfunction

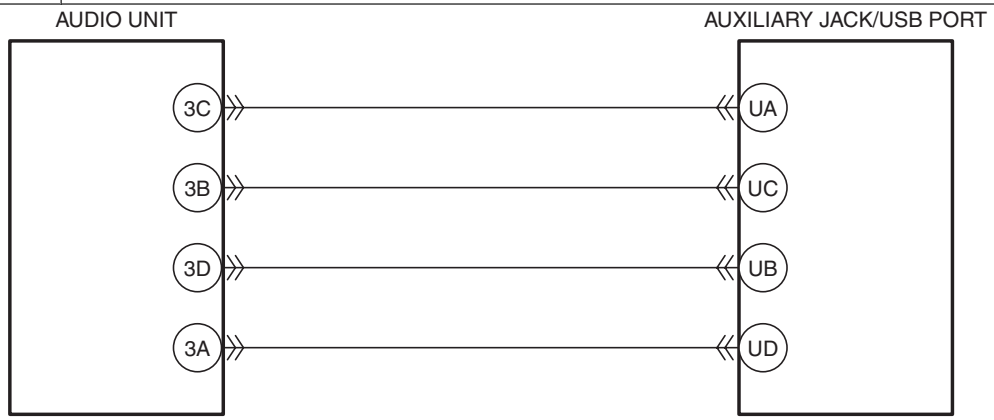

AUDIO UNIT
WIRING HARNESS-SIDE CONNECTOR

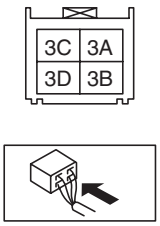

AUXILIARY JACK/USB PORT
WIRING HARNESS-SIDE CONNECTOR

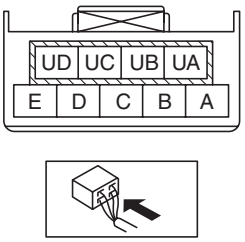

Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY IF MALFUNCTIONING LOCATION IS USB DEVICE** • After obtaining the customer's consent, connect a normal USB device that was not used when the malfunction occurred. • Is the connection detected?	Yes	System is normal. (Explain to the customer that there is a malfunction in the USB device which was used or a malfunction occurred due to use of an incompatible USB device (format).)
		No	Go to the next step.

Step	Inspection		Action
2	**INSPECT AUXILIARY JACK/USB PORT CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the auxiliary jack/USB port connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
3	**INSPECT AUXILIARY JACK/USB PORT** • Inspect the auxiliary jack/USB port. (See AUXILIARY JACK/USB PORT INSPECTION.) • Is the auxiliary jack/USB port normal?	Yes	Go to the next step.
		No	Replace the auxiliary jack/USB port, then go to Step 7. (See AUXILIARY JACK/USB PORT REMOVAL/ INSTALLATION.)
4	**INSPECT AUDIO UNIT CONNECTOR CONDITION** • Disconnect the audio unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
5	**INSPECT WIRING HARNESS BETWEEN AUDIO UNIT AND AUXILIARY JACK/USB PORT FOR OPEN CIRCUIT** • Verify that the auxiliary jack/USB port and audio unit connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Auxiliary jack/USB port terminal UA — Auxiliary jack/USB port terminal UC — Auxiliary jack/USB port terminal UB — Auxiliary jack/USB port terminal UD • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Audio unit terminal 3C and auxiliary jack/USB port terminal UA • Audio unit terminal 3B and auxiliary jack/USB port terminal UC • Audio unit terminal 3D and auxiliary jack/USB port terminal UB • Audio unit terminal 3A and auxiliary jack/USB port terminal UD **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
		No	Go to the next step.

Step	Inspection		Action
6	**INSPECT WIRING HARNESS BETWEEN AUDIO UNIT AND AUXILIARY JACK/USB PORT FOR SHORT TO GROUND** • Verify that the auxiliary jack/USB port and audio unit connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Audio unit terminal 3C and auxiliary jack/USB port terminal UA — Audio unit terminal 3B and auxiliary jack/USB port terminal UC — Audio unit terminal 3D and auxiliary jack/USB port terminal UB — Audio unit terminal 3A and auxiliary jack/USB port terminal UD • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Audio unit terminal 3C and auxiliary jack/USB port terminal UA • Audio unit terminal 3B and auxiliary jack/USB port terminal UC • Audio unit terminal 3D and auxiliary jack/USB port terminal UB • Audio unit terminal 3A and auxiliary jack/USB port terminal UD **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 7.
		No	Go to the next step.
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the audio unit DTCs. (See CLEARING DTC [AUDIO].) • Switch the ignition ON (engine off or on). • Perform the audio unit DTC inspection. (See DTC INSPECTION [AUDIO].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the audio unit. (See AUDIO UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [AUDIO].)
		No	DTC troubleshooting completed.