
DIAGNOSTIC ASSIST FUNCTION [AUDIO]

id0902f6804500

LCD Inspection

1. Switch the ignition to ACC or ON (engine off or on).
2. Turn the audio unit power on.
3. While pressing the POWER/VOLUME button, press the TUNE button (up) for **0.5 s or more**.

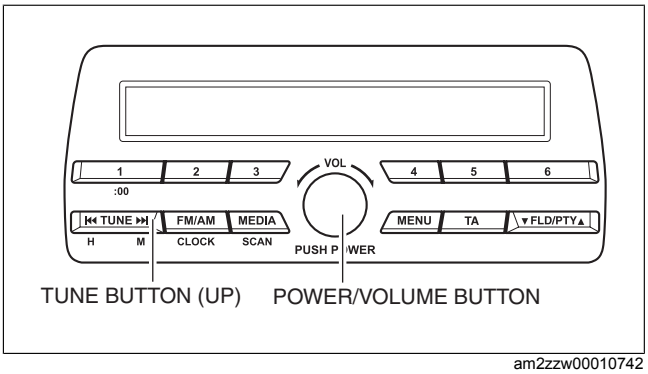


am2zzw00010742

4. Inspect according to the following table:

Inspection	Display	Action	
• Verify the displayed screen. • Is the LCD content truncated or faint?	Appended figure	Yes	Replace the audio unit. (See AUDIO UNIT REMOVAL/ INSTALLATION.)
		No	Display is normal.

Appended figure


5. Switch the audio unit power supply off or switch the ignition off to end the diagnostic assist function.

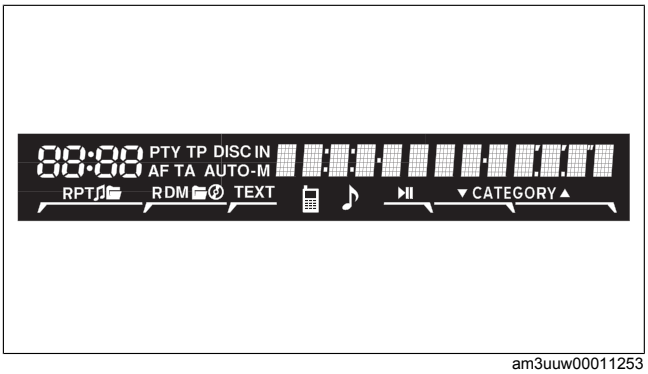

am3uuw00011253

Button Inspection

1. Switch the ignition to ACC or ON (engine off or on).
2. Turn the audio unit power on.
3. While pressing the POWER/VOLUME button, press the Preset button 3 for **0.5 s or more**.
4. Inspect according to the following table:

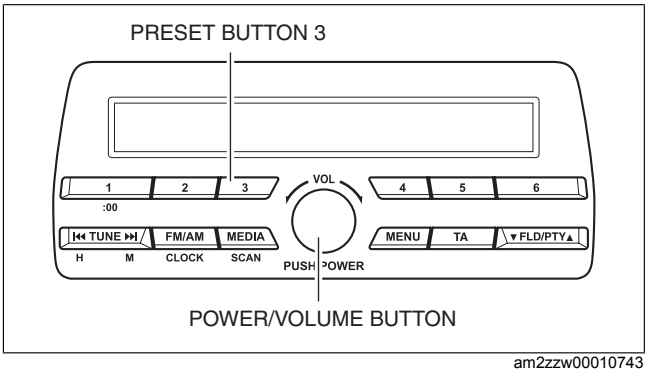

am2zzw00010743


Inspection	Display	Action	
• Press all buttons. • Does the buzzer sound?	—	Yes	All of the buttons are normal.
		No	Replace the audio unit. (See AUDIO UNIT REMOVAL/ INSTALLATION.)

5. Switch the audio unit power supply off or switch the ignition off to end the diagnostic assist function.

Speaker Inspection

1. Switch the ignition to ACC or ON (engine off or on).
2. Turn the audio unit power on.
3. While pressing the POWER/VOLUME button, press the TA button (European (L.H.D. U.K.) specs.)/AUTO-M button (Except European (L.H.D. U.K.) specs.) for **0.5 s or more**.


European (L.H.D. U.K.) specs.

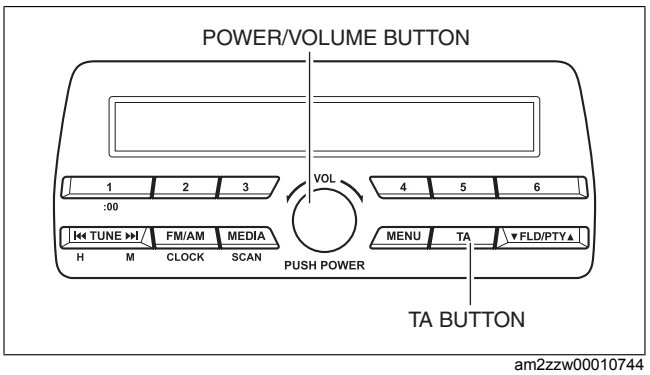

am2zzw00010744

Except European (L.H.D. U.K.) specs.

4. Inspect according to the following table:

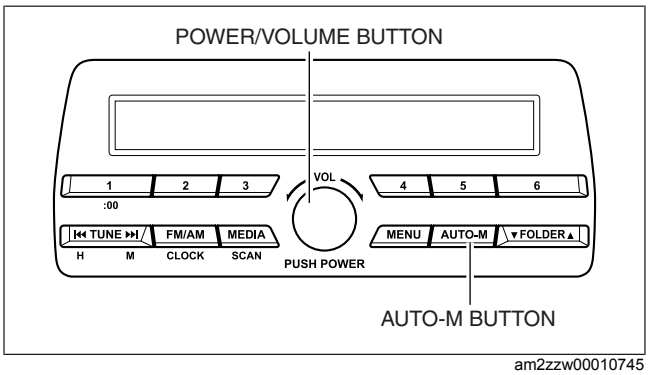

am2zzw00010745

Inspection	Display	Action	
• Does each speaker output sound in the following order?: 1. Front door speaker (LH) 2. Front door speaker (RH) 3. Rear door speaker (RH) 4. Rear door speaker (LH)	—	Yes	The speakers and the wiring harness between the audio unit and speakers are normal.
		No	Refer to the symptom troubleshooting. (See NO SOUND OUTPUT IN ALL MODES [ENTERTAINMENT SYSTEM [WITHOUT CENTER DISPLAY]].)


5. Switch the audio unit power supply off or switch the ignition off to end the diagnostic assist function.

Radio Reception Condition Inspection

1. Switch the ignition to ACC or ON (engine off or on).
2. Turn the audio unit power on.
3. Tune in the radio.
4. While pressing the POWER/VOLUME button, press the Preset button 2 for **0.5 s or more**.
5. Inspect according to the following table:

Caution

- **Even if the system is normal, radio reception may be difficult depending on where the system is inspected (indoors/ outdoors, or conditions at the location). Before inspecting the system, verify that radio reception is adequate.**
- **When performing the inspection, select the best area for receiving radio frequencies.**

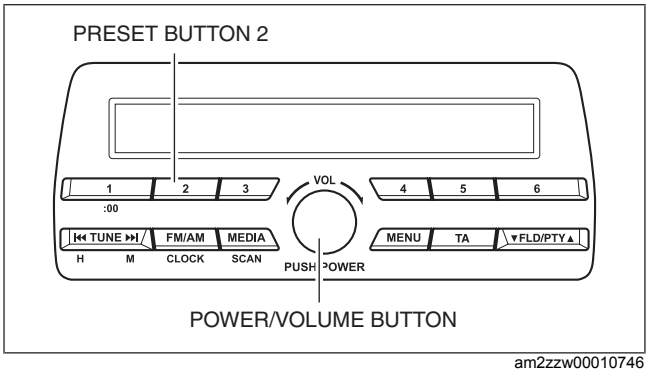


am2zzw00010746

Inspection	Display	Action
Verify the displayed screen.	LEV 10 — LEV 5	Glass antenna, AM/FM antenna amplifier (4SD)/ center roof antenna (5HB), antenna feeder, and audio unit are normal.
	LEV 4 — LEV 3	Change frequencies and re-perform the inspection.
	LEV 2 — LEV 0	Inspect the glass antenna, AM/FM antenna amplifier (4SD)/center roof antenna (5HB), and antenna feeder. (See GLASS ANTENNA INSPECTION.) (See AM/FM ANTENNA AMPLIFIER INSPECTION.) (See CENTER ROOF ANTENNA INSPECTION.) (See ANTENNA FEEDER NO.1 INSPECTION.) (See ANTENNA FEEDER NO.2 INSPECTION.) (See ANTENNA FEEDER NO.3 INSPECTION.) • If the glass antenna, AM/FM antenna amplifier (4SD)/center roof antenna (5HB), or antenna feeder is malfunctioning: — Replace the malfunctioning part. (See REAR WINDOW DEFOGGER REPAIR.) (See AM/FM ANTENNA AMPLIFIER REMOVAL/INSTALLATION.) (See CENTER ROOF ANTENNA REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.1 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.2 REMOVAL.) (See ANTENNA FEEDER NO.2 INSTALLATION.) (See ANTENNA FEEDER NO.3 REMOVAL/ INSTALLATION.) • If the glass antenna, AM/FM antenna amplifier (4SD)/center roof antenna (5HB), and antenna feeder are normal: — Replace the audio unit. (See AUDIO UNIT REMOVAL/ INSTALLATION.)

6. Switch the audio unit power supply off or switch the ignition off to end the diagnostic assist function.

Antenna Control Inspection

1. Switch the ignition to ACC or ON (engine off or on).
2. Turn the audio unit power on.
3. While pressing the POWER/VOLUME button, press the FM/AM/CLOCK button for **0.5 s or more**.
4. Inspect according to the following table:

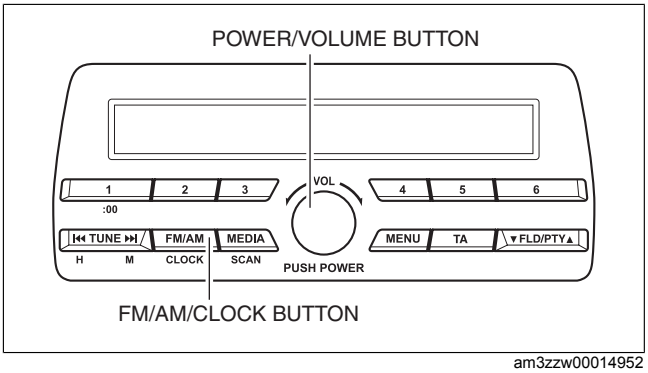

am3zzw00014952


Inspection	Display	Action	
• Verify the displayed screen. • Take action according to the display and sound quality.	ANT—ON	Good sound quality	System is normal.
		Bad sound quality	Inspect the glass antenna, AM/FM antenna amplifier (4SD)/center roof antenna (5HB), and antenna feeder. (See GLASS ANTENNA INSPECTION.) (See AM/FM ANTENNA AMPLIFIER INSPECTION.) (See CENTER ROOF ANTENNA INSPECTION.) (See ANTENNA FEEDER NO.1 INSPECTION.) (See ANTENNA FEEDER NO.2 INSPECTION.) (See ANTENNA FEEDER NO.3 INSPECTION.) • If the glass antenna, AM/FM antenna amplifier (4SD)/center roof antenna (5HB), or antenna feeder is malfunctioning: — Replace the malfunctioning part. (See REAR WINDOW DEFOGGER REPAIR.) (See AM/FM ANTENNA AMPLIFIER REMOVAL/INSTALLATION.) (See CENTER ROOF ANTENNA REMOVAL/INSTALLATION.) (See ANTENNA FEEDER NO.1 REMOVAL/INSTALLATION.) (See ANTENNA FEEDER NO.2 REMOVAL.) (See ANTENNA FEEDER NO.2 INSTALLATION.) (See ANTENNA FEEDER NO.3 REMOVAL/INSTALLATION.) • If the glass antenna, AM/FM antenna amplifier (4SD)/center roof antenna (5HB), and antenna feeder are normal: — Replace the audio unit. (See AUDIO UNIT REMOVAL/INSTALLATION.)
	ANT—OFF	Replace the audio unit. (See AUDIO UNIT REMOVAL/INSTALLATION.)	

5. Switch the audio unit power supply off or switch the ignition off to end the diagnostic assist function.

Dial Inspection

1. Switch the ignition to ACC or ON (engine off or on).
2. Turn the audio unit power on.
3. While pressing the TA button (European (L.H.D. U.K.) specs.)/AUTO-M button (Except European (L.H.D. U.K.) specs.), press the Preset button 1 for **3 s or more**.


European (L.H.D. U.K.) specs.

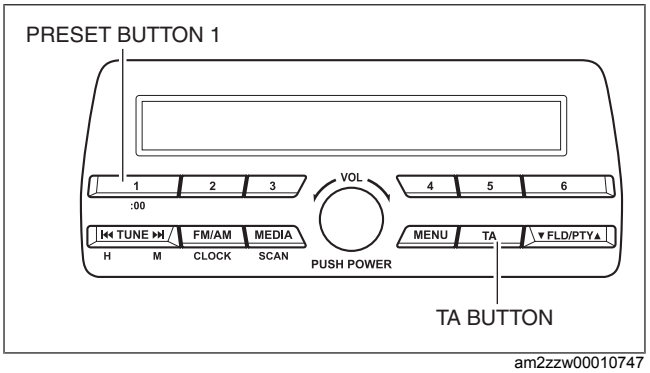

am2zzw00010747

Except European (L.H.D. U.K.) specs.

4. Inspect according to the following table:

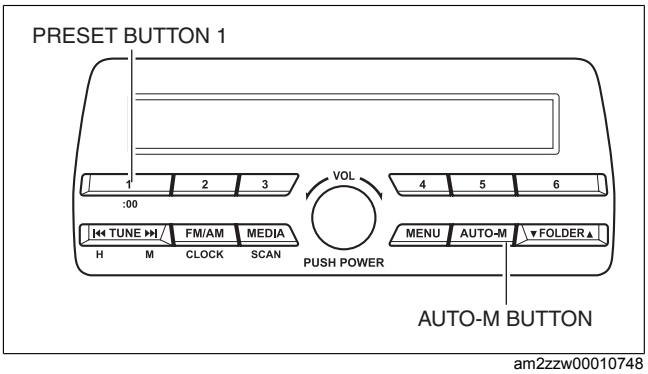


am2zzw00010748

Inspection	Display	Action	
• Turn the POWER/VOLUME button. • Does the button rotation direction correspond to the direction indicated in the display?	→ ←	Yes	System is normal.
		No	Replace the audio unit. (See AUDIO UNIT REMOVAL/ INSTALLATION.)

5. Switch the audio unit power supply off or switch the ignition off to end the diagnostic assist function.

Audio Amplifier Specification Verification

1. Switch the ignition to ACC or ON (engine off or on).
2. Turn the audio unit power on.
3. While pressing the POWER/VOLUME button, press the TUNE button (down) for **3 s or more**.
4. Inspect according to the following table:

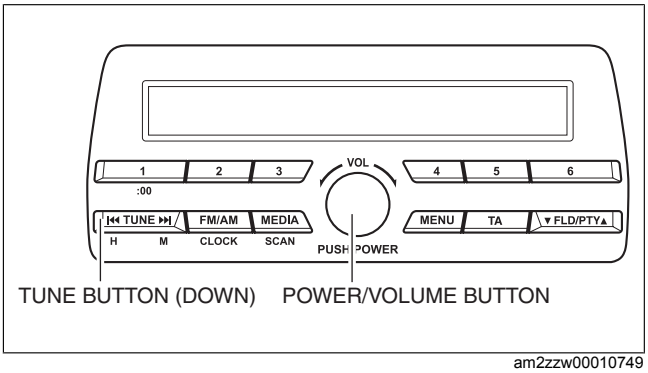

am2zzw00010749

Inspection	Display	Action	
• Verify the audio amplifier specifications. • Are the audio amplifier specifications correct?	**Vehicle without Bose ®** • N (Normal)	Yes	System is normal.
		No	Replace the audio unit. (See AUDIO UNIT REMOVAL/ INSTALLATION.)

5. Switch the audio unit power supply off or switch the ignition off to end the diagnostic assist function.

CD Inspection


Note

- To perform this diagnostic assist function, it is necessary for vehicles with the CD player and the audio unit to recognize that the CD player is connected.

1. Switch the ignition to ACC or ON (engine off or on).
2. Turn the audio unit power on.

3. While pressing the POWER/VOLUME button, press the Preset button 6 for **3 s or more**.
4. Verify that LOAD NEWDISC is displayed and insert a CD.

Note
- If TEST REJECTED is displayed, return to the normal mode because an on-market installed CD player cannot transition to the CD troubleshooting mode.

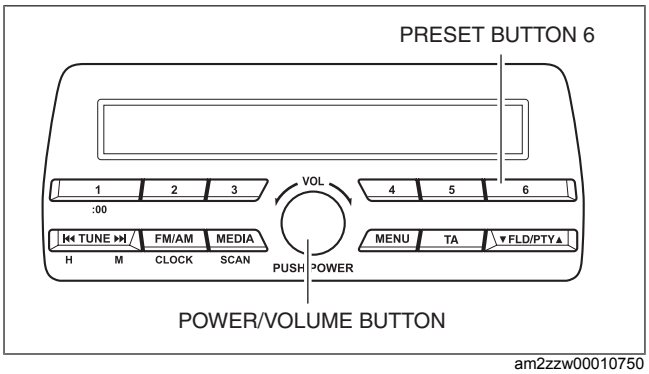

am2zzw00010750

5. CHECKING is displayed and enters troubleshooting status.
6. Inspect according to the following table:

Inspection	Display	Action
Verify the displayed screen.	CD DEFECTIVE	System is normal. • CD is malfunctioning.
	DRIVE FAILURE	Replace the audio unit. (See AUDIO UNIT REMOVAL/INSTALLATION.)


7. Switch the audio unit power supply off or switch the ignition off to end the diagnostic assist function.

Hands-free Password Clearing

Note
- To perform this diagnostic assist function, it is necessary for vehicles with the Bluetooth® unit and the audio unit to recognize that the Bluetooth® unit is connected.

1. Switch the ignition to ACC or ON (engine off or on).
2. While pressing TA button (European (L.H.D. U.K.) specs.)/AUTO-M button (Except European (L.H.D. U.K.) specs.), press the Preset button 2 for **3 s or more**.


European (L.H.D. U.K.) specs.

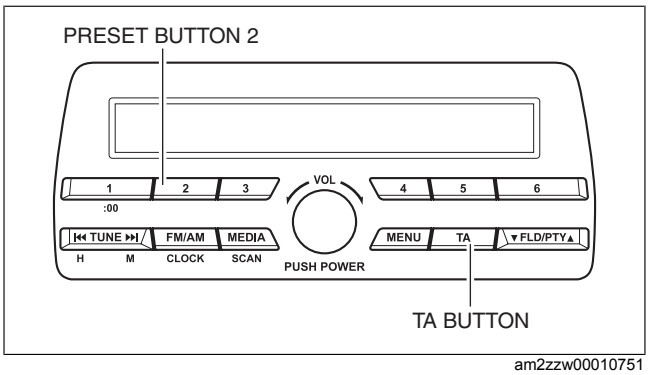

am2zzw00010751

Except European (L.H.D. U.K.) specs.

3. "Cleared" is indicated in the display, and verify that the password is cleared.
4. Switch the ignition off to end the diagnostic assist function.

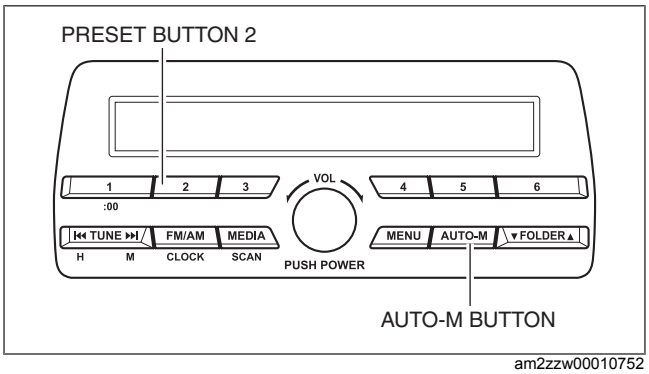


am2zzw00010752

CD Part Number Verification

Note
- To perform this diagnostic assist function, it is necessary for vehicles with the CD player and the audio unit to recognize that the CD player is connected.

1. Switch the ignition to ACC or ON (engine off or on).
2. While pressing the TA button (European (L.H.D. U.K.) specs.)/AUTO-M button (Except European (L.H.D. U.K.) specs.), press the Preset button 3 for **3 s or more**.

European (L.H.D. U.K.) specs.

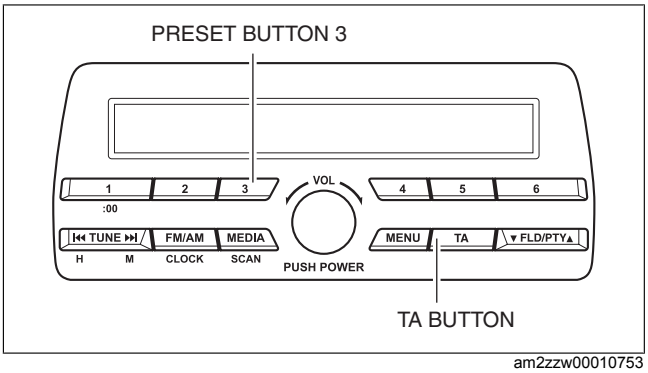


am2zzw00010753

Except European (L.H.D. U.K.) specs.

Note
- The CD part number is displayed in the audio unit display.

3. Switch the audio unit power supply on/off or switch the ignition off to end the diagnostic assist function.

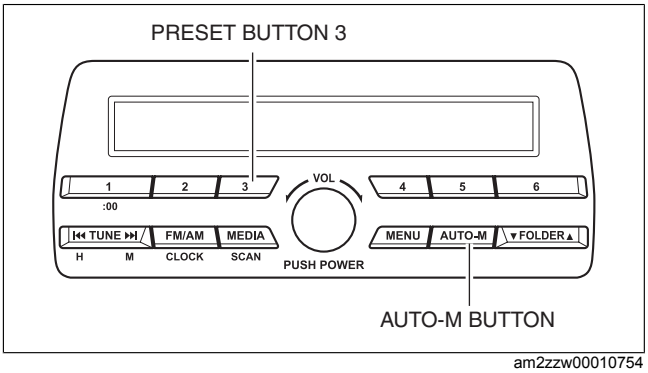

am2zzw00010754