## CLEARING DTC [AUDIO]

id0902f6855600


**Note**
- The audio system DTC can be verified using the on-board diagnostic test mode to activate the on-board diagnostic function by operating the audio unit.
- Before clearing the memory, be sure to enter all of the DTCs displayed by the DTC inspection in the Audio Repair Order Form.
- If an audio unit DTC is cleared, select For Audio Unit below.
- If a Bluetooth® unit DTC is cleared, select For Bluetooth® Unit below. (With Bluetooth® unit)
- If a CD player DTC is cleared, select For CD Player below. (With CD player)

**For Audio Unit**

1. DTCs are displayed. (See DTC INSPECTION [AUDIO].)
2. While pressing the POWER/VOLUME button, press the MENU button for **3 s or more**.

   **Note**
   - After clearing the DTCs, "No Err" is displayed and a beep sounds.

3. Switch the ignition off to end the on-board diagnostic test mode.

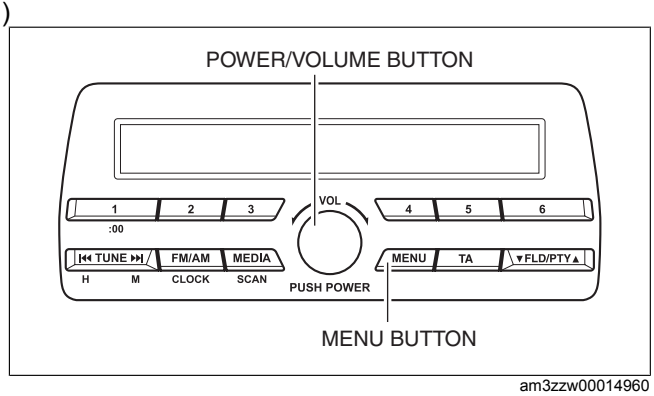



am3zzw00014960

**For Bluetooth® Unit**

**Note**
- To clear a Bluetooth® unit DTC, it is necessary for vehicles with the Bluetooth® unit and the audio unit to recognize that the Bluetooth® unit is connected.


1. DTCs are displayed. (See DTC INSPECTION [AUDIO].)
2. While pressing the TA button (European (L.H.D. U.K.) specs.)/AUTO-M button (Except European (L.H.D. U.K.) specs.), press the Preset button 4 for **3 s or more**.

**European (L.H.D. U.K.) specs.**

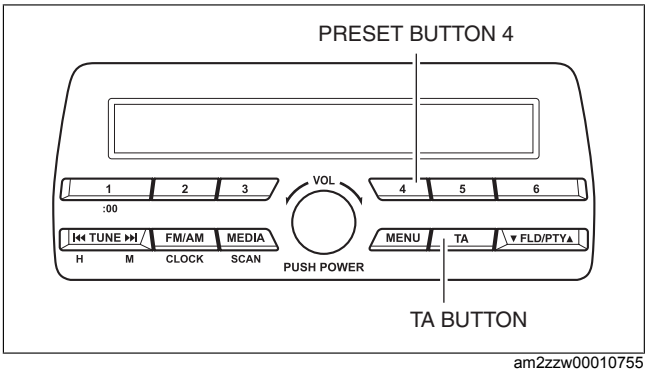


am2zzw00010755

**Except European (L.H.D. U.K.) specs.**

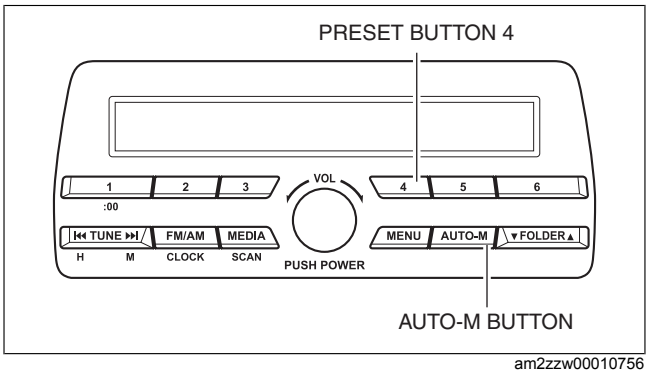

am2zzw00010756

**Note**
- After clearing, "No Err" is displayed.


3. Switch the ignition off to end the on-board diagnostic test mode.

**For CD Player**

**Note**
- To clear a CD player DTC, it is necessary for vehicles with the CD player and the audio unit to recognize that the CD player is connected.


1. DTCs are displayed. (See DTC INSPECTION [AUDIO].)
2. While pressing the TA button (European (L.H.D. U.K.) specs.)/AUTO-M button (Except European (L.H.D. U.K.) specs.), press the Preset button 6 for **3 s or more**.

**European (L.H.D. U.K.) specs.**

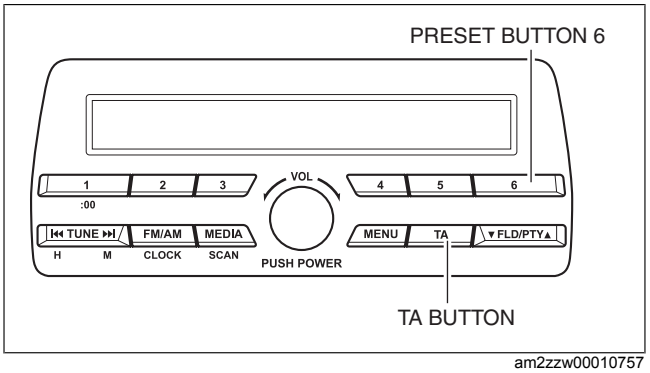

am2zzw00010757

**Except European (L.H.D. U.K.) specs.**

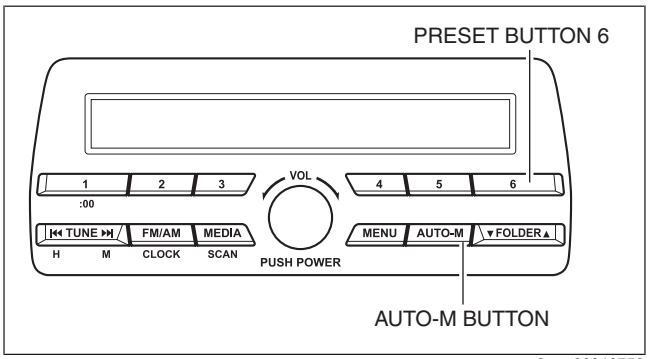

am2zzw00010758

**Note**
- After clearing the DTCs, "No Err" is displayed.

3. Switch the ignition off to end the diagnostic assist function.