
DTC B1098:11 [ELECTRICAL SUPPLY UNIT (ESU)]

id0902ff060700

Description	Parking light (LH) or taillight (RH) circuit malfunction
Detection condition	• The electrical supply unit (ESU) detects a short to ground in the parking light (LH) or taillight (RH) circuit.
Fail-safe	Not applicable
Possible cause	• Electrical supply unit (ESU) connector or terminal malfunction • Parking light bulb (LH) malfunction • Front combination light (LH) connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Front combination light (LH) terminal C—Electrical supply unit (ESU) terminal 4I (With front combination light (bulb type) and without headlight manual leveling system) — Front combination light (LH) terminal D—Electrical supply unit (ESU) terminal 4I (With front combination light (LED type) or headlight manual leveling system) • Front combination light (LH) malfunction • Taillight bulb (RH) malfunction • Taillight (RH) connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Taillight (RH) terminal B—Electrical supply unit (ESU) terminal 2A (4SD) — Taillight (RH) terminal C—Electrical supply unit (ESU) terminal 2A (5HB) • Rear combination light (RH) malfunction • Electrical supply unit (ESU) malfunction

Description	Parking light (LH) or taillight (RH) circuit malfunction

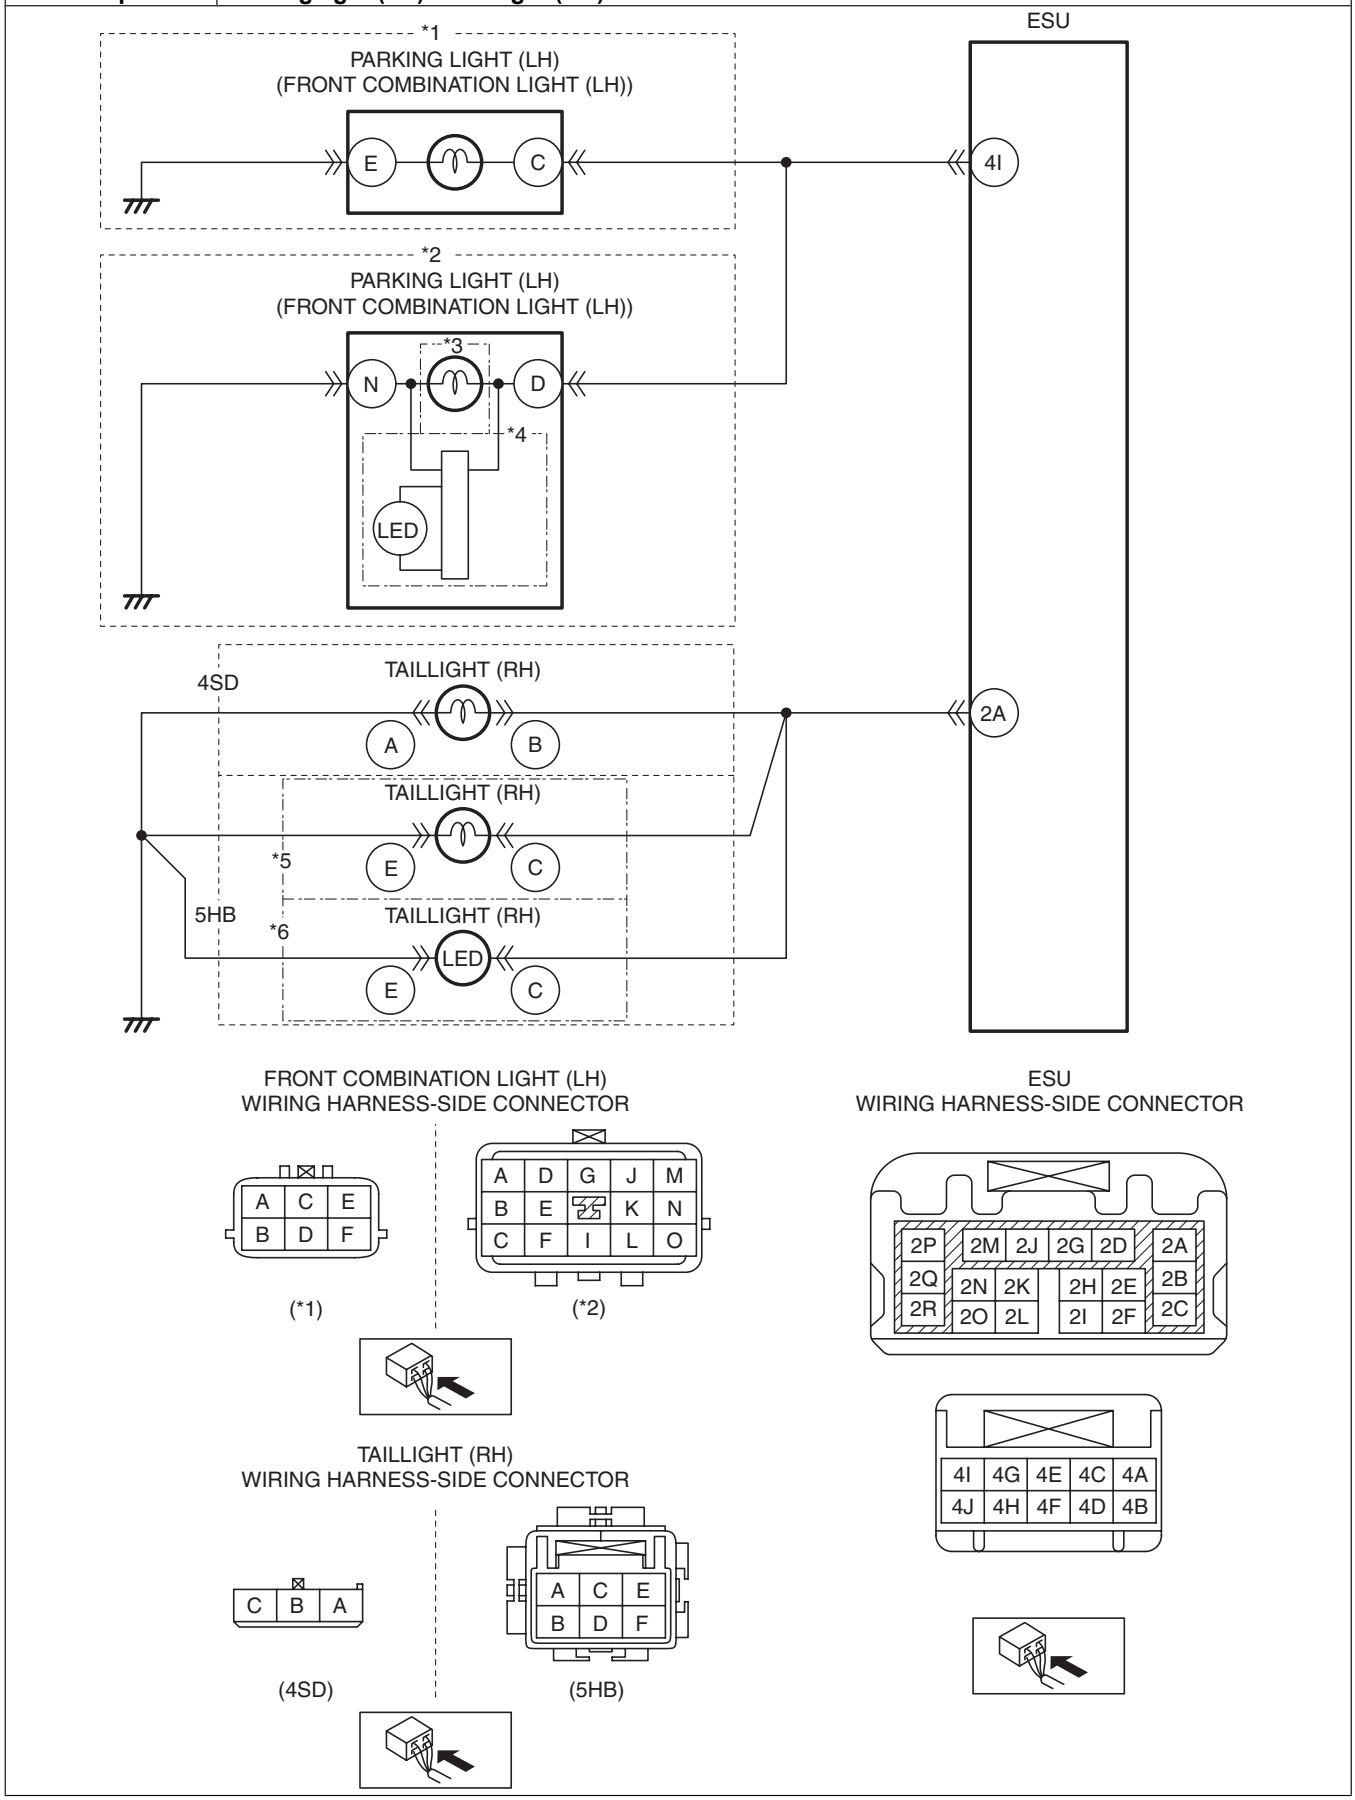

*1 : With front combination light (bulb type) and without headlight manual leveling system

*2 : With front combination light (LED type) or headlight manual leveling system
*3 : With front combination light (bulb type)
*4 : With front combination light (LED type)
*5 : With rear combination light (bulb type)
*6 : With rear combination light (LED type)

Diagnostic Procedure

Step	Inspection		Action
1	**DETERMINE MALFUNCTIONING LIGHT** • Operate the light switch to the TNS position. • Are there any lights among the following which are not illuminated? — Parking light (LH) — Taillight (RH)	Yes	If all lights do not turn on: • Go to the next step. If parking light (LH) does not turn on: • With front combination light (bulb type) and without headlight manual leveling system: — Go to Step 3. • With front combination light (LED type) or headlight manual leveling system: — Go to Step 4. If taillight (RH) does not turn on: • With rear combination light (bulb type): — Go to Step 8. • With rear combination light (LED type): — Go to Step 9.
		No	Go to Step 13.
2	**INSPECT ELECTRICAL SUPPLY UNIT (ESU) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the electrical supply unit (ESU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to Step 13.
		No	Repair or replace the connector, then go to Step 13.
3	**VISUALLY INSPECT PARKING LIGHT BULB (LH)** • Visually inspect the parking light bulb (LH). • Is the parking light bulb (LH) normal?	Yes	Go to the next step.
		No	Replace the parking light bulb (LH), then go to Step 13. (See PARKING LIGHT BULB REMOVAL/ INSTALLATION.)
4	**INSPECT FRONT COMBINATION LIGHT (LH) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the front combination light (LH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 13.
5	**INSPECT ELECTRICAL SUPPLY UNIT (ESU) CONNECTOR CONDITION** • Disconnect the electrical supply unit (ESU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 13.

Step	Inspection		Action
6	**INSPECT PARKING LIGHT (LH) CONTROL CIRCUIT FOR SHORT TO GROUND** • Verify that the front combination light (LH) and electrical supply unit (ESU) connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Front combination light (LH) terminal C (With front combination light (bulb type) and without headlight manual leveling system) — Front combination light (LH) terminal D (With front combination light (LED type) or headlight manual leveling system) • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Front combination light (LH) terminal C—Electrical supply unit (ESU) terminal 4I (With front combination light (bulb type) and without headlight manual leveling system) • Front combination light (LH) terminal D—Electrical supply unit (ESU) terminal 4I (With front combination light (LED type) or headlight manual leveling system) **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 13.
		No	**With front combination light (bulb type):** • Go to Step 13. **With front combination light (LED type):** • Go to the next step.
7	**VERIFY IF MALFUNCTIONING LOCATION IS FRONT COMBINATION LIGHT (LH) DEPENDING ON REPEATABILITY** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the electrical supply unit (ESU) using the M-MDS. (See CLEARING DTC [ELECTRICAL SUPPLY UNIT (ESU)].) • Operate the light switch to the TNS position. • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is the same DTC displayed?	Yes	Replace the front combination light (LH), then go to Step 13. (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
		No	Go to Step 14.
8	**VISUALLY INSPECT TAILLIGHT BULB (RH)** • Visually inspect the taillight bulb (RH). • Is the taillight bulb (RH) normal?	Yes	Go to the next step.
		No	Replace the taillight bulb (RH), then go to Step 13. (See BRAKE LIGHT/TAILLIGHT BULB REMOVAL/INSTALLATION.)
9	**INSPECT TAILLIGHT (RH) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the taillight (RH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 13.
10	**INSPECT ELECTRICAL SUPPLY UNIT (ESU) CONNECTOR CONDITION** • Disconnect the electrical supply unit (ESU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 13.

Step	Inspection		Action
11	**INSPECT TAILLIGHT (RH) CONTROL CIRCUIT FOR SHORT TO GROUND** • Verify that the taillight (RH) and electrical supply unit (ESU) connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Taillight (RH) terminal B (4SD) — Taillight (RH) terminal C (5HB) • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between following terminals: • Taillight (RH) terminal B—Electrical supply unit (ESU) terminal 2A (4SD) • Taillight (RH) terminal C—Electrical supply unit (ESU) terminal 2A (5HB) **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 13.
		No	**With rear combination light (bulb type):** • Go to Step 13. **With rear combination light (LED type):** • Go to the next step.
12	**VERIFY IF MALFUNCTIONING LOCATION IS REAR COMBINATION LIGHT (RH) DEPENDING ON REPEATABILITY** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the electrical supply unit (ESU) using the M-MDS. (See CLEARING DTC [ELECTRICAL SUPPLY UNIT (ESU)].) • Operate the light switch to the TNS position. • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is the same DTC displayed?	Yes	Replace the rear combination light (RH), then go to the next step. (See REAR COMBINATION LIGHT REMOVAL/ INSTALLATION.)
		No	Go to Step 14.
13	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the electrical supply unit (ESU) using the M-MDS. (See CLEARING DTC [ELECTRICAL SUPPLY UNIT (ESU)].) • Operate the light switch to the TNS position. • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the electrical supply unit (ESU). (See ELECTRICAL SUPPLY UNIT (ESU) REMOVAL/ INSTALLATION.) Go to the next step.
		No	Go to the next step.
14	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [ELECTRICAL SUPPLY UNIT (ESU)].)
		No	DTC troubleshooting completed.