
DTC B1277:11 [ELECTRICAL SUPPLY UNIT (ESU)]

id0902ff061400

Description	Back-up light circuit malfunction
Detection condition	• Electrical supply unit (ESU) detects a short to ground in the back-up light circuit with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Back-up light bulb (LH) malfunction • Back-up light bulb (RH) malfunction • Back-up light (LH) connector or terminal malfunction • Back-up light (RH) connector or terminal malfunction • Electrical supply unit (ESU) connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Electrical supply unit (ESU) terminal 2Q—Back-up light (LH) terminal A — Electrical supply unit (ESU) terminal 2Q—Back-up light (RH) terminal A • Electrical supply unit (ESU) malfunction

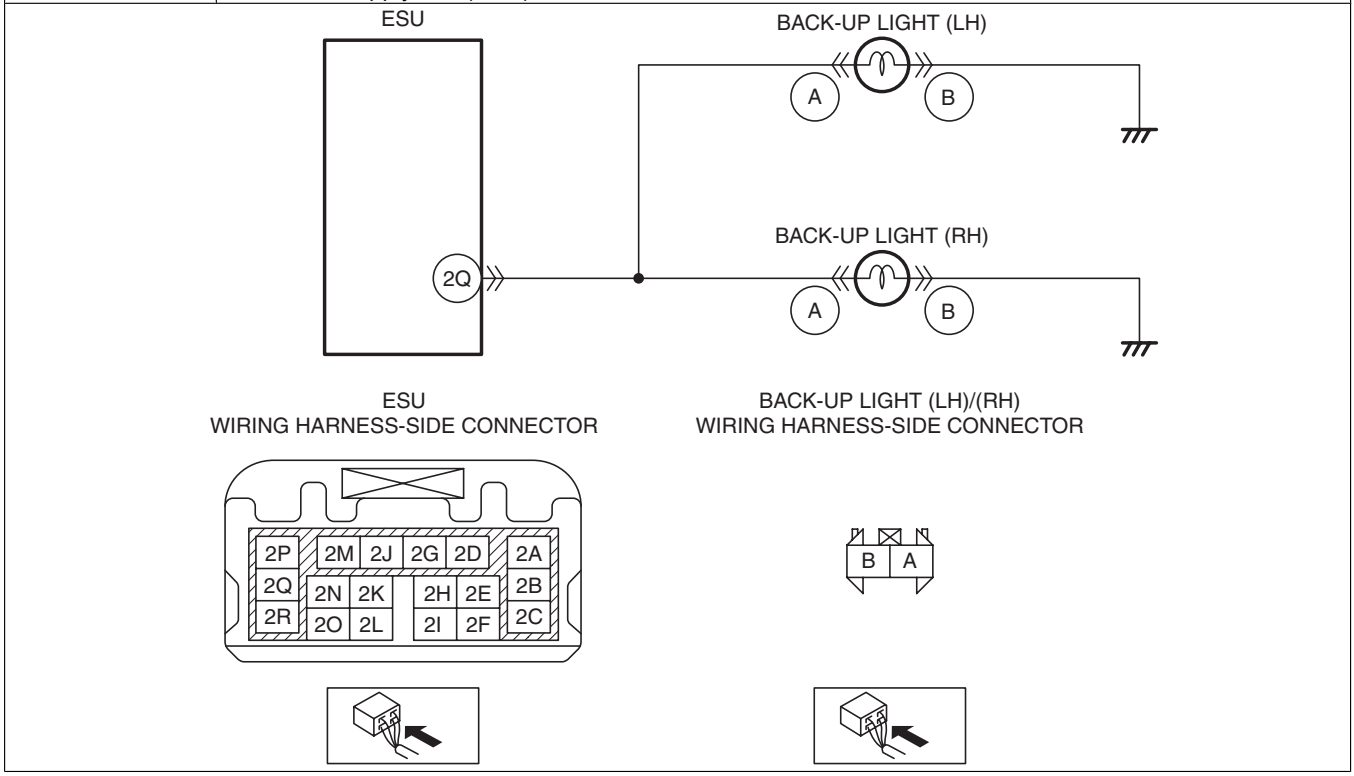

Diagnostic Procedure

Step	Inspection		Action
1	**VISUALLY INSPECT BACK-UP LIGHT BULB (LH)** • Visually inspect the back-up light bulb (LH). • Is the back-up light bulb (LH) normal?	Yes	Go to the next step.
		No	Replace the back-up light bulb (LH), then go to Step 7. (See BACK-UP LIGHT BULB REMOVAL/INSTALLATION.)
2	**VISUALLY INSPECT BACK-UP LIGHT BULB (RH)** • Visually inspect the back-up light bulb (RH). • Is the back-up light (RH) normal?	Yes	Go to the next step.
		No	Replace the back-up light bulb (RH), then go to Step 7. (See BACK-UP LIGHT BULB REMOVAL/INSTALLATION.)
3	**INSPECT BACK-UP LIGHT (LH) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the back-up light (LH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.

Step	Inspection		Action
4	**INSPECT BACK-UP LIGHT (RH) CONNECTOR CONDITION** • Disconnect the back-up light (RH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
5	**INSPECT ELECTRICAL SUPPLY UNIT (ESU) CONNECTOR CONDITION** • Disconnect the electrical supply unit (ESU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
6	**INSPECT BACK-UP LIGHT CONTROL CIRCUIT FOR SHORT TO GROUND** • Verify that the back-up light (LH)/(RH) and electrical supply unit (ESU) connectors are disconnected. • Inspect for continuity between electrical supply unit (ESU) terminal 2Q (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Electrical supply unit (ESU) terminal 2Q—Back-up light (LH) terminal A • Electrical supply unit (ESU) terminal 2Q—Back-up light (RH) terminal A **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to the next step.
		No	Go to the next step.
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the electrical supply unit (ESU) using the M-MDS. (See CLEARING DTC [ELECTRICAL SUPPLY UNIT (ESU)].) • Perform the following operation. — Shift the selector lever to the R position. (ATX) — Shift the shift lever to the reverse position. (MTX) • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the electrical supply unit (ESU). (See ELECTRICAL SUPPLY UNIT (ESU) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [ELECTRICAL SUPPLY UNIT (ESU)].)
		No	DTC troubleshooting completed.