
DTC B1A79:11 [ELECTRICAL SUPPLY UNIT (ESU)]

id0902ff061800

Description	Rear fog light circuit malfunction
Detection condition	• Electrical supply unit (ESU) detects a short to ground in the rear fog light circuit with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Rear fog light bulb malfunction • Rear fog light connector or terminal malfunction • Electrical supply unit (ESU) connector or terminal malfunction • Short to ground in wiring harness between rear fog light terminal A and electrical supply unit (ESU) terminal 2C • Electrical supply unit (ESU) malfunction

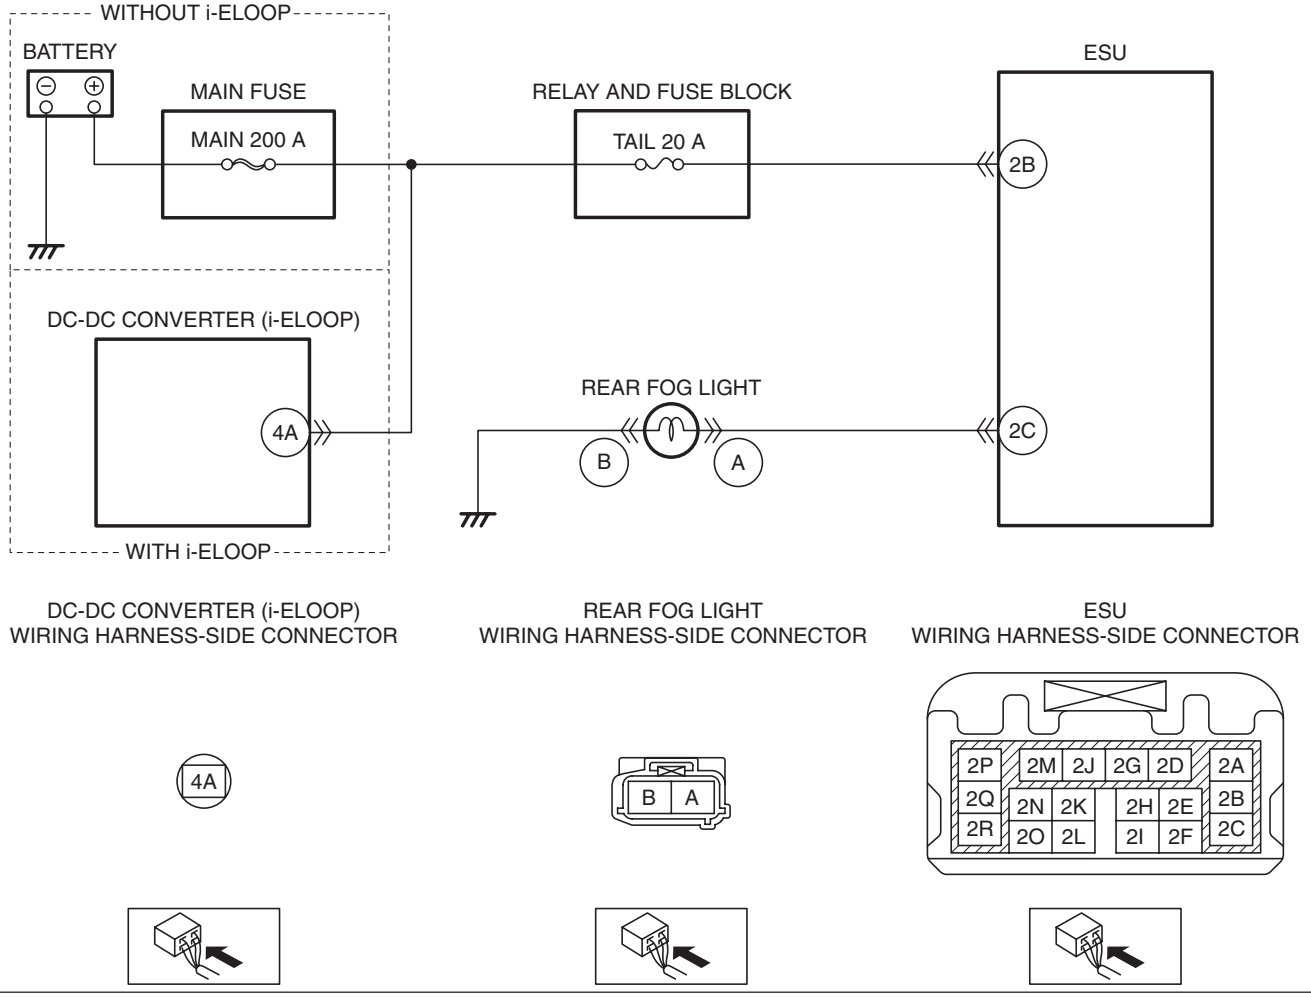

Diagnostic Procedure

Step	Inspection		Action
1	**VISUALLY INSPECT REAR FOG LIGHT BULB** • Visually inspect the rear fog light bulb. • Is the rear fog light bulb normal?	Yes	Go to the next step.
		No	Replace the rear fog light bulb, then go to Step 5. (See REAR FOG LIGHT BULB REMOVAL/ INSTALLATION.)

Step	Inspection		Action
2	**INSPECT REAR FOG LIGHT CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the rear fog light connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
3	**INSPECT ELECTRICAL SUPPLY UNIT (ESU) CONNECTOR CONDITION** • Disconnect the electrical supply unit (ESU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
4	**INSPECT REAR FOG LIGHT CIRCUIT FOR SHORT TO GROUND** • Verify that the rear fog light and electrical supply unit (ESU) connectors are disconnected. • Inspect for continuity between rear fog light terminal A (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between rear fog light terminal A and electrical supply unit (ESU) terminal 2C. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to the next step.
		No	Go to the next step.
5	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the electrical supply unit (ESU) using the M-MDS. (See CLEARING DTC [ELECTRICAL SUPPLY UNIT (ESU)].) • Perform the following operation. — Operate the light switch to the TNS position. — Operate the fog light switch to the R.FOG position. • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the electrical supply unit (ESU). (See ELECTRICAL SUPPLY UNIT (ESU) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
6	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [ELECTRICAL SUPPLY UNIT (ESU)].)
		No	DTC troubleshooting completed.