
DTC B1A79:13 [ELECTRICAL SUPPLY UNIT (ESU)]


id0902ff061900

Description	Rear fog light circuit malfunction
Detection condition	• Electrical supply unit (ESU) detects an open circuit in the rear fog light circuit with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• DTCs are stored in the PCM. — Electrical supply unit (ESU) power supply circuit malfunction • Rear fog light bulb malfunction • Rear fog light connector or terminal malfunction • Electrical supply unit (ESU) connector or terminal malfunction • Open circuit in wiring harness between rear fog light terminal A and electrical supply unit (ESU) terminal 2C • Electrical supply unit (ESU) malfunction

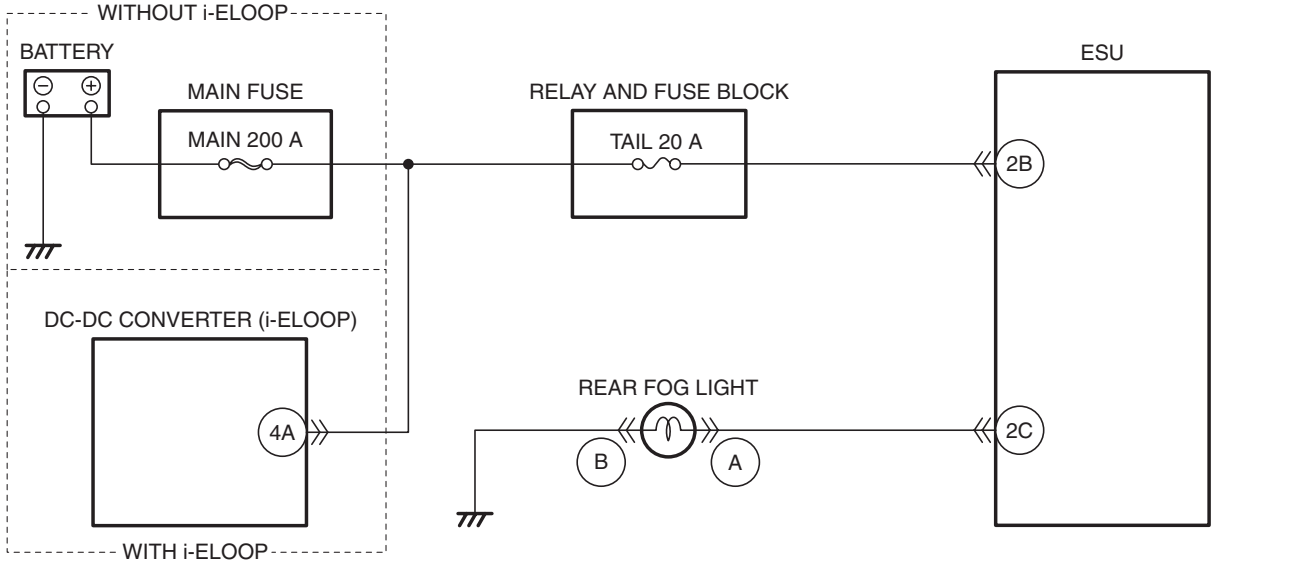



DC-DC CONVERTER (i-ELOOP) WIRING HARNESS-SIDE CONNECTOR







REAR FOG LIGHT WIRING HARNESS-SIDE CONNECTOR





ESU WIRING HARNESS-SIDE CONNECTOR

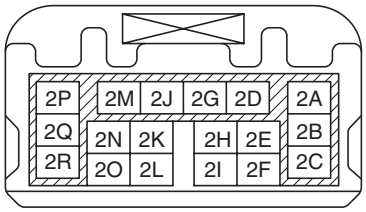



Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY OTHER ELECTRICAL SUPPLY UNIT (ESU) DTCs** • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is DTC U3006:16 displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [ELECTRICAL SUPPLY UNIT (ESU)].)
		No	Go to the next step.
2	**VISUALLY INSPECT REAR FOG LIGHT BULB** • Visually inspect the rear fog light bulb. • Is the rear fog light bulb normal?	Yes	Go to the next step.
		No	Replace the rear fog light bulb, then go to Step 7. (See REAR FOG LIGHT BULB REMOVAL/ INSTALLATION.)

Step	Inspection		Action
3	**INSPECT REAR FOG LIGHT CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the rear fog light connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
4	**INSPECT REAR FOG LIGHT GROUND CIRCUIT FOR OPEN CIRCUIT** • Verify that the rear fog light connector is disconnected. • Inspect the wiring harness for continuity between rear fog light terminal B (wiring harness-side) and body ground. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between rear fog light terminal B and body ground. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 7.
5	**INSPECT ELECTRICAL SUPPLY UNIT (ESU) CONNECTOR CONDITION** • Disconnect the electrical supply unit (ESU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
6	**INSPECT REAR FOG LIGHT CIRCUIT FOR OPEN CIRCUIT** • Verify that the rear fog light and electrical supply unit (ESU) connectors are disconnected. • Inspect for continuity between rear fog light terminal A (wiring harness-side) and electrical supply unit (ESU) terminal 2C (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between rear fog light terminal A and electrical supply unit (ESU) terminal 2C. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.

Step	Inspection		Action
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the electrical supply unit (ESU) using the M-MDS. (See CLEARING DTC [ELECTRICAL SUPPLY UNIT (ESU)].) • Perform the following operation. — Operate the light switch to the TNS position. — Operate the fog light switch to the R.FOG position. • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the electrical supply unit (ESU). (See ELECTRICAL SUPPLY UNIT (ESU) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [ELECTRICAL SUPPLY UNIT (ESU)].)
		No	DTC troubleshooting completed.