
DTC B1C79:13 [ELECTRICAL SUPPLY UNIT (ESU)]

id0902ff062000

Description	Washer motor circuit malfunction
Detection condition	• Electrical supply unit (ESU) detects an open circuit in the washer motor circuit with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Washer motor connector or terminal malfunction • Washer motor malfunction • Electrical supply unit (ESU) connector or terminal malfunction • Open circuit in wiring harness between the following terminals: — Washer motor terminal B—Electrical supply unit (ESU) terminal 4B — Washer motor terminal A—Electrical supply unit (ESU) terminal 4H • Electrical supply unit (ESU) malfunction

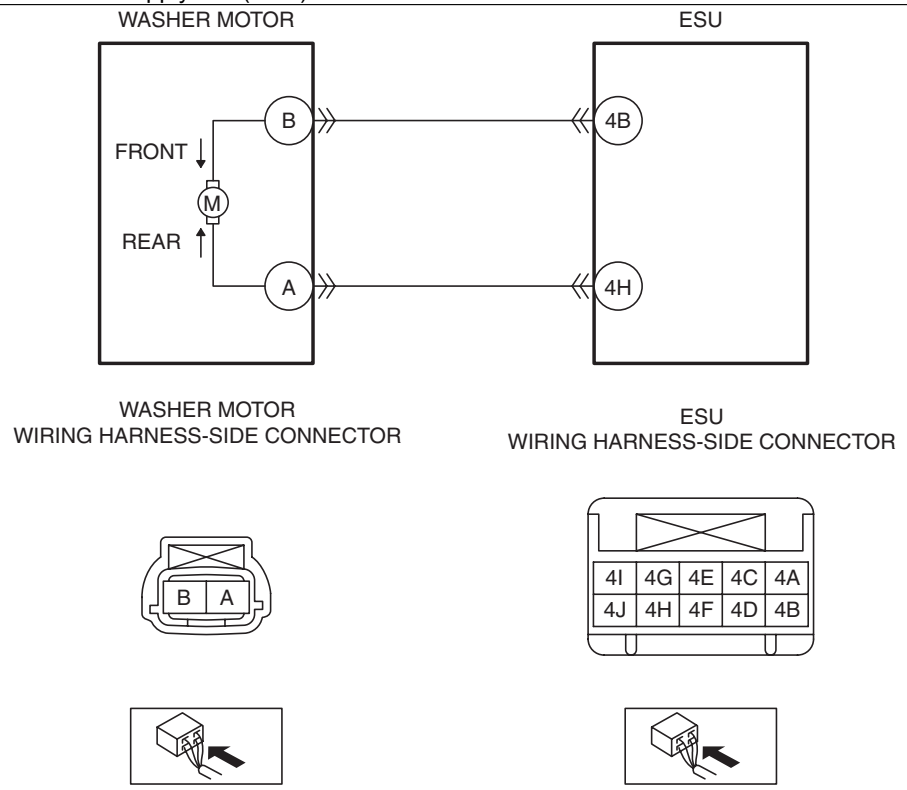

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT WASHER MOTOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the washer motor connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
2	**INSPECT WASHER MOTOR** • Inspect the washer motor. (See WASHER MOTOR INSPECTION.) • Is the washer motor normal?	Yes	Go to the next step.
		No	Replace the washer motor, then go to Step 5. (See WASHER MOTOR REMOVAL/INSTALLATION.)

Step	Inspection		Action
3	**INSPECT ELECTRICAL SUPPLY UNIT (ESU) CONNECTOR CONDITION** • Disconnect the electrical supply unit (ESU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
4	**INSPECT WASHER MOTOR CIRCUIT FOR OPEN CIRCUIT** • Verify that the washer motor and electrical supply unit (ESU) connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Washer motor terminal B—Electrical supply unit (ESU) terminal 4B — Washer motor terminal A—Electrical supply unit (ESU) terminal 4H • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Washer motor terminal B—Electrical supply unit (ESU) terminal 4B • Washer motor terminal A—Electrical supply unit (ESU) terminal 4H **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
5	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the electrical supply unit (ESU) using the M-MDS. (See CLEARING DTC [ELECTRICAL SUPPLY UNIT (ESU)].) • Operate the windshield washer switch to ON position. • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the electrical supply unit (ESU). (See ELECTRICAL SUPPLY UNIT (ESU) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
6	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [ELECTRICAL SUPPLY UNIT (ESU)].)
		No	DTC troubleshooting completed.