
DTC B1D39:13 [ELECTRICAL SUPPLY UNIT (ESU)]

id0902ff063000

Description	Rear wiper motor circuit malfunction
Detection condition	• Electrical supply unit (ESU) detects an open circuit in the rear wiper motor circuit with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Rear wiper motor connector or terminal malfunction • Rear wiper motor malfunction • Open circuit in wiring harness between rear wiper motor terminal C and body ground • Electrical supply unit (ESU) connector or terminal malfunction • Open circuit in wiring harness between rear wiper motor terminal A and electrical supply unit (ESU) terminal 2M • Electrical supply unit (ESU) malfunction

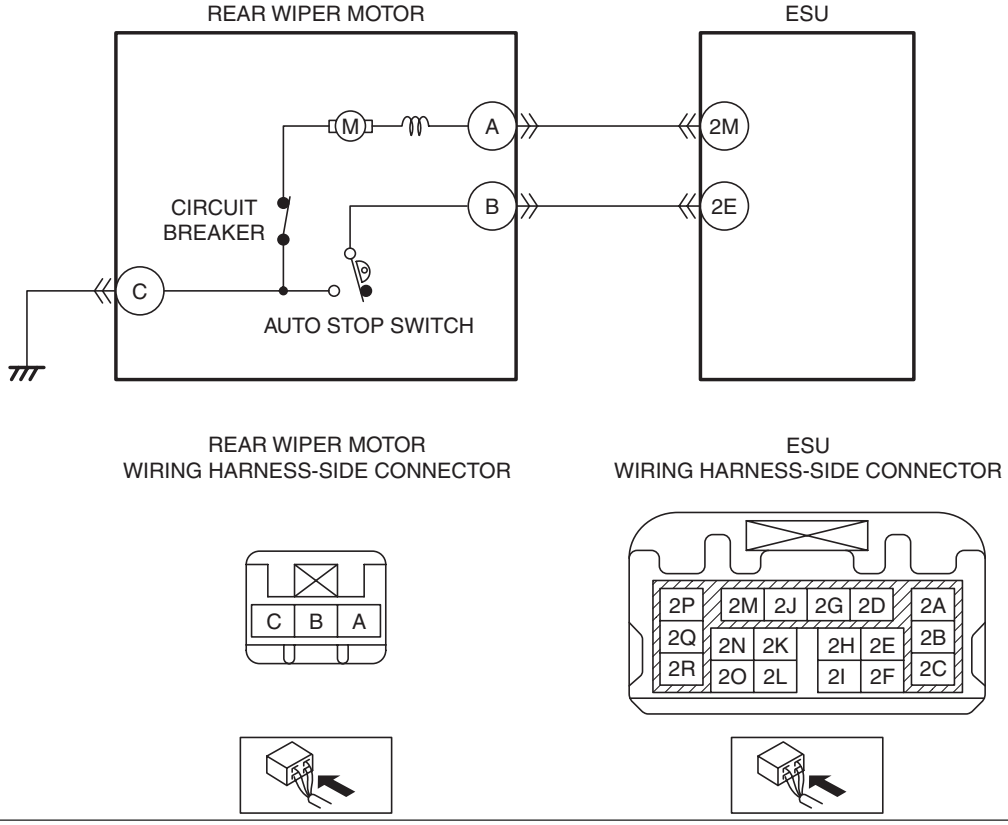

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT REAR WIPER MOTOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the rear wiper motor connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
2	**INSPECT REAR WIPER MOTOR** • Inspect the rear wiper motor. (See REAR WIPER MOTOR INSPECTION.) • Is the rear wiper motor normal?	Yes	Go to the next step.
		No	Replace the rear wiper motor, then go to Step 6. (See REAR WIPER MOTOR REMOVAL/ INSTALLATION.)

Step	Inspection		Action
3	**INSPECT REAR WIPER MOTOR GROUND CIRCUIT FOR OPEN CIRCUIT** • Verify that the rear wiper motor connector is disconnected. • Inspect the wiring harness for continuity between rear wiper motor terminal C (wiring harness-side) and body ground. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between rear wiper motor terminal C and body ground. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.
4	**INSPECT ELECTRICAL SUPPLY UNIT (ESU) CONNECTOR CONDITION** • Disconnect the electrical supply unit (ESU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
5	**INSPECT REAR WIPER MOTOR CIRCUIT FOR OPEN CIRCUIT** • Verify that the rear wiper motor and electrical supply unit (ESU) connectors are disconnected. • Inspect the wiring harness for continuity between electrical supply unit (ESU) terminal 2M (wiring harness-side) and rear wiper motor terminal A (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between rear wiper motor terminal A and electrical supply unit (ESU) terminal 2M. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the electrical supply unit (ESU) using the M-MDS. (See CLEARING DTC [ELECTRICAL SUPPLY UNIT (ESU)].) • Retrieve the electrical supply unit (ESU) DTCs using the M-MDS. (See DTC INSPECTION [ELECTRICAL SUPPLY UNIT (ESU)].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the electrical supply unit (ESU). (See ELECTRICAL SUPPLY UNIT (ESU) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [ELECTRICAL SUPPLY UNIT (ESU)].)
		No	DTC troubleshooting completed.