
DTC TABLE [HEADLIGHT AUTO LEVELING SYSTEM]

id0902i7960500

Note

- Auto leveling control module flashes the LED headlight warning light as follows if there is a malfunction in the system.

LED HEADLIGHT WARNING LIGHT FLASHING PATTERN

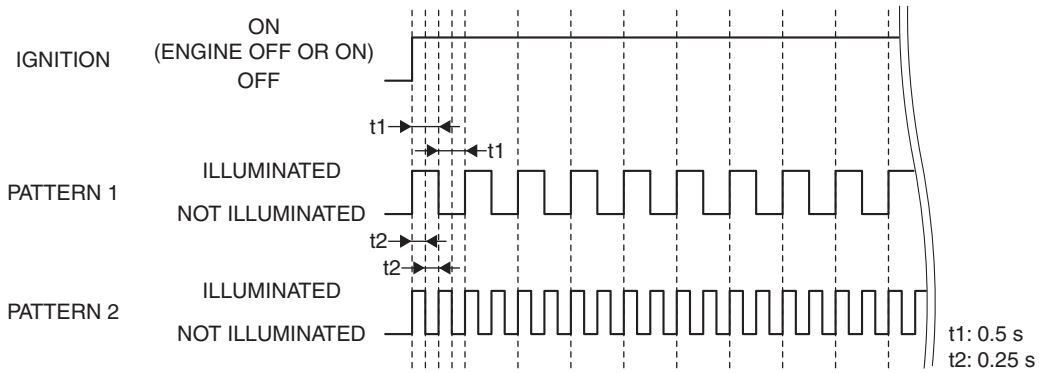

am2zzw00009059

×: Applicable
—: Not applicable

DTC No.	LED headlight warning light	Description	Fail-safe	Drive cycle	Self test type*1	Memory function	Page
B1041:54	Flash (Pattern 2)	Headlight auto leveling system initialization error	×	—	—	×	(See DTC B1041:54 [HEADLIGHT AUTO LEVELING SYSTEM].)
B1044:01	Flash (Pattern 1)	Auto leveling sensor circuit malfunction	×	—	—	×	(See DTC B1044:01 [HEADLIGHT AUTO LEVELING SYSTEM].)
B1D00:13	Flash (Pattern 1)	Headlight (LH) circuit malfunction	×	—	C	×	(See DTC B1D00:13 [HEADLIGHT AUTO LEVELING SYSTEM].)
B1D01:13	Flash (Pattern 1)	Headlight (RH) circuit malfunction	×	—	C	×	(See DTC B1D01:13 [HEADLIGHT AUTO LEVELING SYSTEM].)
U0001:88	Flash (Pattern 1)	Unit communication error (HS-CAN)	×	—	C	×	(See DTC U0001:88/ U0100:00/U0140:00/ U0155:00 [HEADLIGHT AUTO LEVELING SYSTEM].)
U0100:00	Flash (Pattern 1)	Communication error with PCM	×	—	C	×	
U0140:00	Flash (Pattern 1)	Communication error with BCM	×	—	C	×	
U0155:00	Flash (Pattern 1)	Communication error with instrument cluster	×	—	C	×	
U0423:68	—	Error signal received from instrument cluster	×	—	C	—	(See DTC U0423:68 [HEADLIGHT AUTO LEVELING SYSTEM].)
U2005:86	Flash (Pattern 1)	Error signal received from PCM	×	—	C	×	(See DTC U2005:86 [HEADLIGHT AUTO LEVELING SYSTEM].)
U2300:54	Flash (Pattern 1)	Error configuration data received from instrument cluster	×	—	C	×	(See DTC U2300:54 [HEADLIGHT AUTO LEVELING SYSTEM].)
U2300:55	Flash (Pattern 1)	Instrument cluster configuration not implemented	×	—	C	×	(See DTC U2300:55 [HEADLIGHT AUTO LEVELING SYSTEM].)

DTC No.	LED headlight warning light	Description	Fail-safe	Drive cycle	Self test type*1	Memory function	Page
U2300:56	Flash (Pattern 1)	Configuration data unmatched with instrument cluster	×	—	C	×	(See DTC U2300:56 [HEADLIGHT AUTO LEVELING SYSTEM].)
U3000:42	Flash (Pattern 1)	Auto leveling control module internal malfunction	×	—	C	×	(See DTC U3000:42 [HEADLIGHT AUTO LEVELING SYSTEM].)
U3000:49	Flash (Pattern 1)	Auto leveling control module internal malfunction	×	—	C	—	(See DTC U3000:49 [HEADLIGHT AUTO LEVELING SYSTEM].)
U3003:16	—	Auto leveling control module low power supply voltage input	×	—	C	—	(See DTC U3003:16 [HEADLIGHT AUTO LEVELING SYSTEM].)
U3003:17	—	Auto leveling control module high power supply voltage input	×	—	C	—	(See DTC U3003:17 [HEADLIGHT AUTO LEVELING SYSTEM].)

*1 : C: CMDTC self test, D: ODDTC self test