
DTC B116A:12 [CONNECTIVITY MASTER UNIT]


id0902n7103700

Description	Microphone circuit malfunction
Detection condition	• The connectivity master unit (CMU) detected a short to power supply in the microphone circuit for **5 s or more** with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Microphone connector or terminal malfunction • Connectivity master unit (CMU) connector or terminal malfunction • Short to power supply in wiring harness between the following terminals: — Connectivity master unit (CMU) terminal 1S and microphone terminal A — Connectivity master unit (CMU) terminal 1T and microphone terminal B • Microphone malfunction • Connectivity master unit (CMU) malfunction


L.H.D.

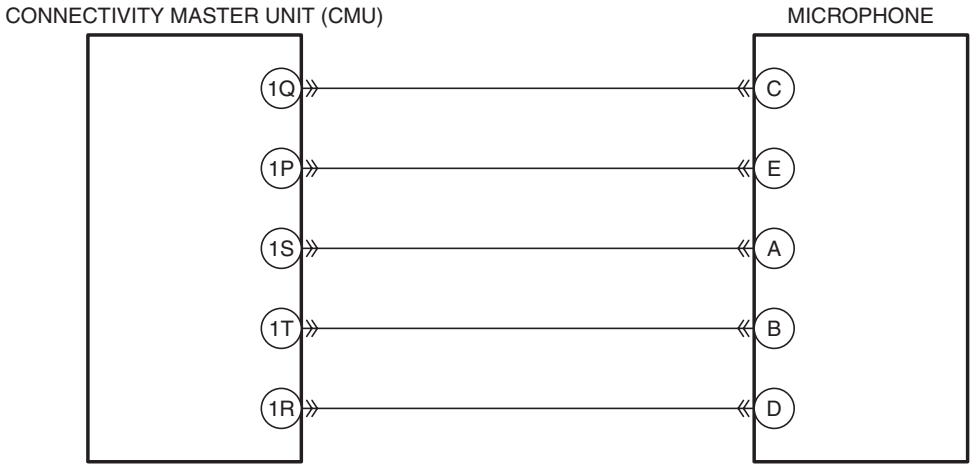


R.H.D.

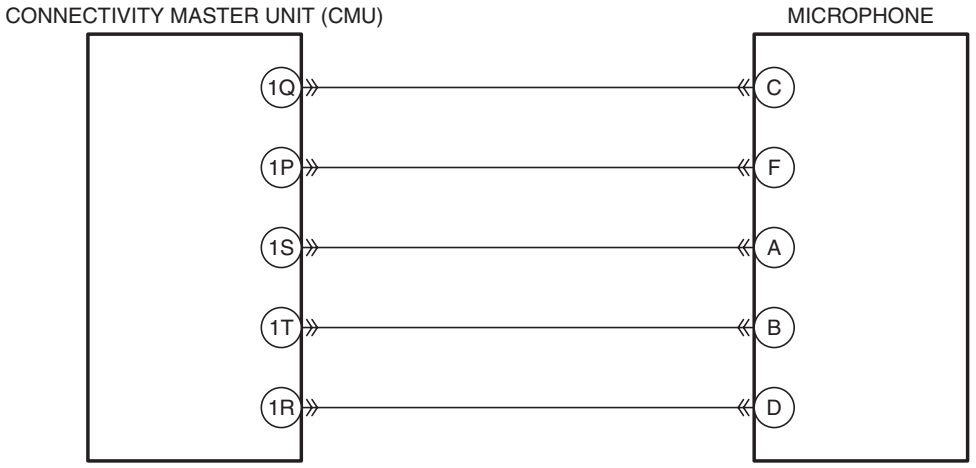


CONNECTIVITY MASTER UNIT (CMU)
WIRING HARNESS-SIDE CONNECTOR

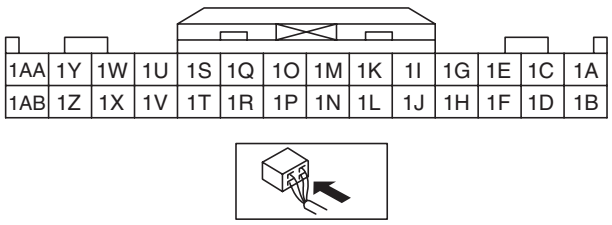

MICROPHONE
WIRING HARNESS-SIDE CONNECTOR





Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT MICROPHONE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the microphone connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
2	**INSPECT CONNECTIVITY MASTER UNIT (CMU) CONNECTOR CONDITION** • Disconnect the connectivity master unit (CMU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
3	**INSPECT MICROPHONE CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the microphone and connectivity master unit (CMU) connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side). — Microphone terminal A — Microphone terminal B • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Connectivity master unit (CMU) terminal 1S and microphone terminal A • Connectivity master unit (CMU) terminal 1T and microphone terminal B **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. Go to Step 5.
4	**VERIFY IF MALFUNCTIONING LOCATION IS MICROPHONE DEPENDING ON REPEATABILITY** • Always reconnect all disconnected connectors. • Clear the DTC for the connectivity master unit (CMU) using the M-MDS. (See CLEARING DTC [CONNECTIVITY MASTER UNIT].) • Switch the ignition ON (engine off or on) and wait for **12 s or more**. • Retrieve the connectivity master unit (CMU) DTCs using the M-MDS. (See DTC INSPECTION [CONNECTIVITY MASTER UNIT].) • Is the same DTC displayed?	Yes	Replace the microphone, then go to the next step. (See MICROPHONE REMOVAL/INSTALLATION.)
		No	Go to Step 6.

Step	Inspection		Action
5	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the connectivity master unit (CMU) using the M-MDS. (See CLEARING DTC [CONNECTIVITY MASTER UNIT].) • Switch the ignition ON (engine off or on) and wait for **12 s or more**. • Retrieve the connectivity master unit (CMU) DTCs using the M-MDS. (See DTC INSPECTION [CONNECTIVITY MASTER UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the connectivity master unit (CMU). (See CONNECTIVITY MASTER UNIT (CMU) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
6	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [CONNECTIVITY MASTER UNIT].)
		No	DTC troubleshooting completed.