

DTC B11BA:15 [CONNECTIVITY MASTER UNIT]

id0902n7104300


Description	Steering switch circuit malfunction
Detection condition	• The connectivity master unit (CMU) detected an open circuit or a short to the power supply in the steering switch circuit for **5 s or more** with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Clock spring connector or terminal malfunction • Connectivity master unit (CMU) connector or terminal malfunction • Clock spring malfunction • Short to power supply in wiring harness between connectivity master unit (CMU) terminal 1M and clock spring terminal 1G • Open circuit in wiring harness between the following terminals: — Connectivity master unit (CMU) terminal 1M and clock spring terminal 1G — Connectivity master unit (CMU) terminal 1N and clock spring terminal 1E • Steering switch malfunction • Connectivity master unit (CMU) malfunction

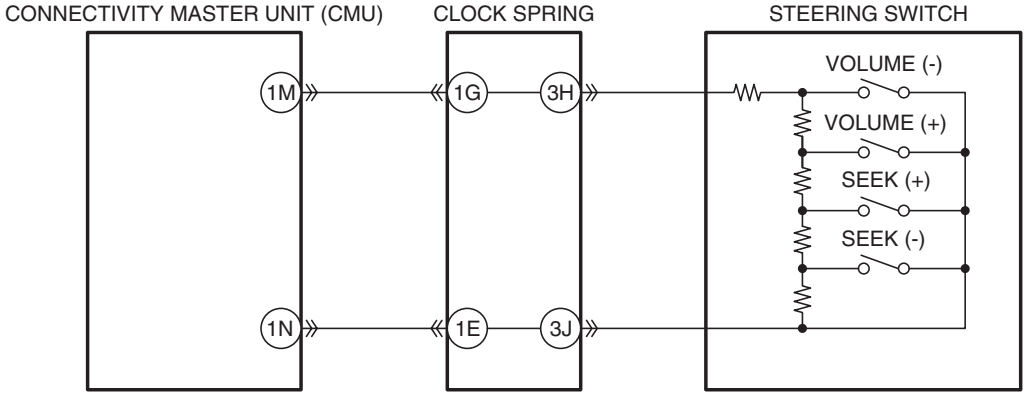

CONNECTIVITY MASTER UNIT (CMU)
WIRING HARNESS-SIDE CONNECTOR

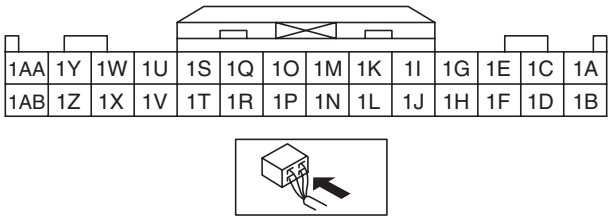

CLOCK SPRING
WIRING HARNESS-SIDE CONNECTOR

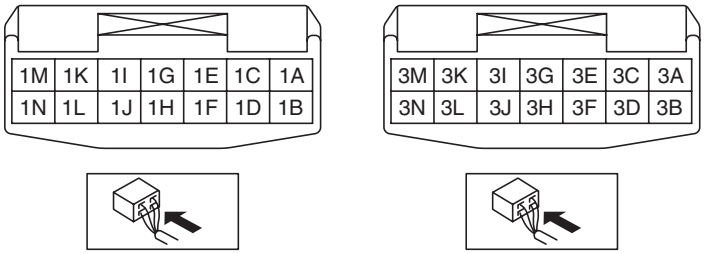

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT CLOCK SPRING CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the clock spring connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
2	**INSPECT CONNECTIVITY MASTER UNIT (CMU) CONNECTOR CONDITION** • Disconnect the connectivity master unit (CMU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
3	**INSPECT CLOCK SPRING** • Inspect the clock spring. (See CLOCK SPRING INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Is the clock spring normal?	Yes	Go to the next step.
		No	Replace the clock spring, then go to Step 7. (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
4	**INSPECT STEERING SWITCH CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the clock spring and connectivity master unit (CMU) connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at clock spring terminal 1G (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify if there is a common connector between connectivity master unit (CMU) terminal 1M and clock spring terminal 1G. **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. Go to Step 7.
5	**INSPECT STEERING SWITCH CIRCUIT FOR OPEN CIRCUIT** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Verify that the clock spring and connectivity master unit (CMU) connectors are disconnected. • Inspect the wiring harness for continuity between the following terminals (wiring harness-side). — Connectivity master unit (CMU) terminal 1M and clock spring terminal 1G — Connectivity master unit (CMU) terminal 1N and clock spring terminal 1E • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Connectivity master unit (CMU) terminal 1M and clock spring terminal 1G • Connectivity master unit (CMU) terminal 1N and clock spring terminal 1E **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for an open circuit to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 7.

Step	Inspection		Action
6	**INSPECT STEERING SWITCH** • Inspect the steering switch. (See STEERING SWITCH INSPECTION.) • Is the steering switch normal?	Yes	Go to the next step.
		No	Replace the steering switch, then go to the next step. (See STEERING SWITCH REMOVAL/INSTALLATION.)
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the connectivity master unit (CMU) using the M-MDS. (See CLEARING DTC [CONNECTIVITY MASTER UNIT].) • Switch the ignition ON (engine off or on) and wait for **12 s or more**. • Retrieve the connectivity master unit (CMU) DTCs using the M-MDS. (See DTC INSPECTION [CONNECTIVITY MASTER UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the connectivity master unit (CMU). (See CONNECTIVITY MASTER UNIT (CMU) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [CONNECTIVITY MASTER UNIT].)
		No	DTC troubleshooting completed.