
DTC B1238:01 [CONNECTIVITY MASTER UNIT]


id0902n7104800

Description	Speaker circuit malfunction
Detection condition	• The connectivity master unit (CMU) detected a short to ground or short to power supply in the speaker circuit with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Tuner and amp unit (TAU) connector or terminal malfunction • Front door speaker (LH) connector or terminal malfunction • Tweeter (LH) connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 2A and front door speaker (LH) terminal C — Tuner and amp unit (TAU) terminal 2C and front door speaker (LH) terminal B — Tuner and amp unit (TAU) terminal 2A and tweeter (LH) terminal B — Tuner and amp unit (TAU) terminal 2C and tweeter (LH) terminal A • Short to power supply in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 2A and front door speaker (LH) terminal C — Tuner and amp unit (TAU) terminal 2C and front door speaker (LH) terminal B — Tuner and amp unit (TAU) terminal 2A and tweeter (LH) terminal B — Tuner and amp unit (TAU) terminal 2C and tweeter (LH) terminal A • Front door speaker (LH) malfunction • Tweeter (LH) malfunction • Front door speaker (RH) connector or terminal malfunction • Tweeter (RH) connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 2D and front door speaker (RH) terminal C — Tuner and amp unit (TAU) terminal 2F and front door speaker (RH) terminal B — Tuner and amp unit (TAU) terminal 2D and tweeter (RH) terminal B — Tuner and amp unit (TAU) terminal 2F and tweeter (RH) terminal A • Short to power supply in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 2D and front door speaker (RH) terminal C — Tuner and amp unit (TAU) terminal 2F and front door speaker (RH) terminal B — Tuner and amp unit (TAU) terminal 2D and tweeter (RH) terminal B — Tuner and amp unit (TAU) terminal 2F and tweeter (RH) terminal A • Front door speaker (RH) malfunction • Tweeter (RH) malfunction • Rear door speaker (LH) connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 2S and rear door speaker (LH) terminal C — Tuner and amp unit (TAU) terminal 2U and rear door speaker (LH) terminal B • Short to power supply in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 2S and rear door speaker (LH) terminal C — Tuner and amp unit (TAU) terminal 2U and rear door speaker (LH) terminal B • Rear door speaker (LH) malfunction • Rear door speaker (RH) connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 2V and rear door speaker (RH) terminal C — Tuner and amp unit (TAU) terminal 2X and rear door speaker (RH) terminal B • Short to power supply in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 2V and rear door speaker (RH) terminal C — Tuner and amp unit (TAU) terminal 2X and rear door speaker (RH) terminal B • Rear door speaker (RH) malfunction • Tuner and amp unit (TAU) malfunction

Description	Speaker circuit malfunction

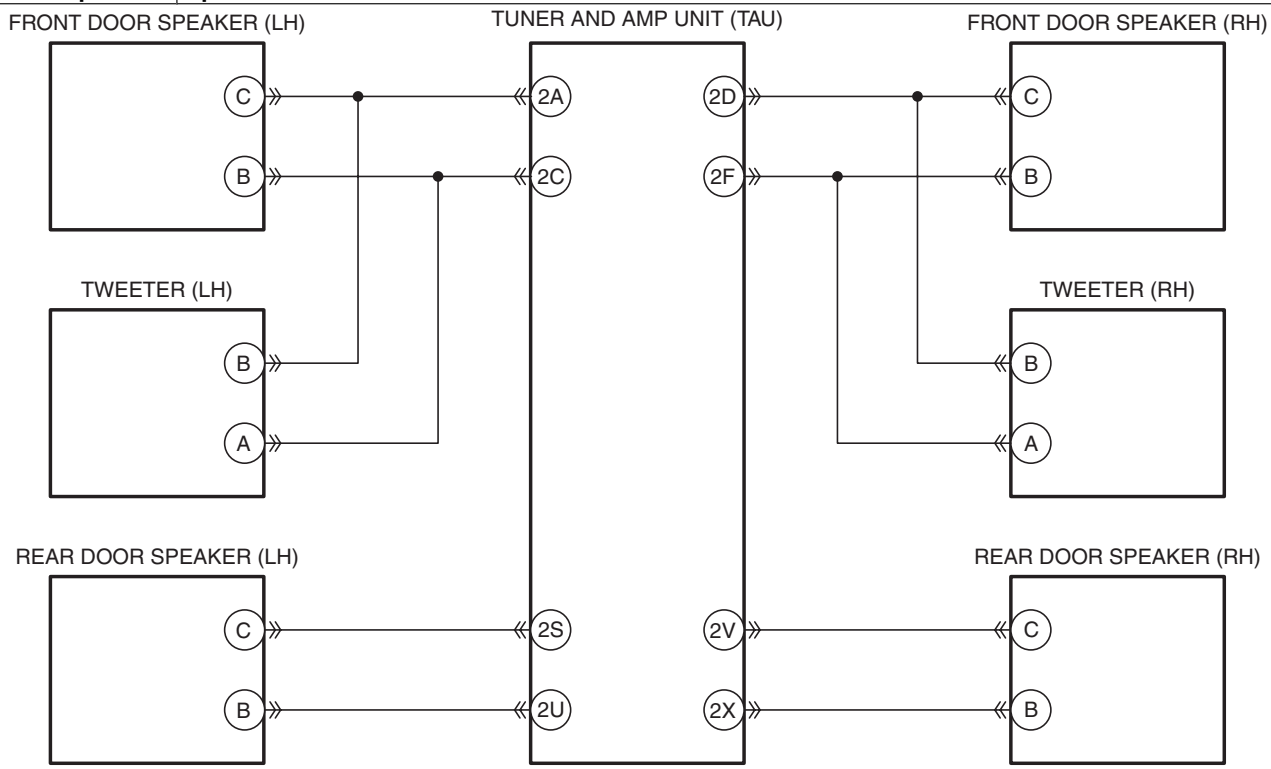


FRONT DOOR SPEAKER (LH)/(RH)/
REAR DOOR SPEAKER (LH)/(RH)
WIRING HARNESS-SIDE CONNECTOR

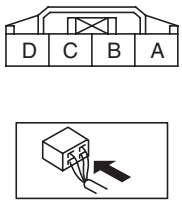

TWEETER (LH)/(RH)
WIRING HARNESS-SIDE CONNECTOR



TUNER AND AMP UNIT (TAU)
WIRING HARNESS-SIDE CONNECTOR

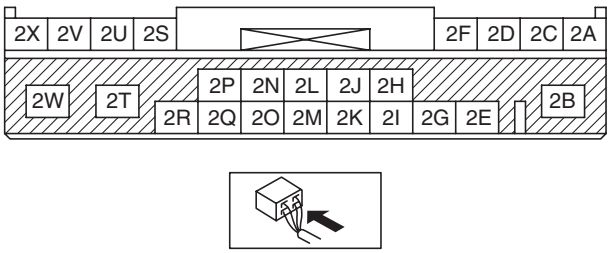

Diagnostic Procedure

Step	Inspection		Action
1	**DETERMINE MALFUNCTIONING SPEAKER** • Perform diagnostic assist code “94” speaker inspection. (See DIAGNOSTIC ASSIST FUNCTION [CONNECTIVITY MASTER UNIT].) • Is audio produced from each speaker in order?	Yes	Go to Step 27.
		No	No audio produced from front door speaker (LH) and tweeter (LH) • Go to the next step. No audio produced from front door speaker (RH) and tweeter (RH) • Go to Step 9. No sound produced from rear door speaker (LH) • Go to Step 16. No audio produced from rear door speaker (RH) • Go to Step 21. No audio produced from all speakers. • Go to Step 26.
2	**INSPECT TUNER AND AMP UNIT (TAU) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the tuner and amp unit (TAU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.
3	**INSPECT FRONT DOOR SPEAKER (LH) CONNECTOR CONDITION** • Disconnect the front door speaker (LH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.
4	**INSPECT TWEETER (LH) CONNECTOR CONDITION** • Disconnect the tweeter (LH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.

Step	Inspection		Action
5	**INSPECT FRONT DOOR SPEAKER (LH) CIRCUIT FOR SHORT TO GROUND** • Verify that the following connectors are disconnected. — Tuner and amp unit (TAU) — Front door speaker (LH) — Tweeter (LH) • Inspect for continuity between the following terminals (wiring harness-side) and body ground. — Front door speaker (LH) terminal C — Front door speaker (LH) terminal B • Is there continuity?	Yes	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Tuner and amp unit (TAU) terminal 2A and front door speaker (LH) terminal C • Tuner and amp unit (TAU) terminal 2C and front door speaker (LH) terminal B • Tuner and amp unit (TAU) terminal 2A and tweeter (LH) terminal B • Tuner and amp unit (TAU) terminal 2C and tweeter (LH) terminal A **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. Go to Step 27.
		No	Go to the next step.
6	**INSPECT FRONT DOOR SPEAKER (LH) CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the following connectors are disconnected. — Tuner and amp unit (TAU) — Front door speaker (LH) — Tweeter (LH) • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side). — Front door speaker (LH) terminal C — Front door speaker (LH) terminal B • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Tuner and amp unit (TAU) terminal 2A and front door speaker (LH) terminal C • Tuner and amp unit (TAU) terminal 2C and front door speaker (LH) terminal B • Tuner and amp unit (TAU) terminal 2A and tweeter (LH) terminal B • Tuner and amp unit (TAU) terminal 2C and tweeter (LH) terminal A **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. Go to Step 27.
7	**INSPECT FRONT DOOR SPEAKER (LH)** • Inspect the front door speaker (LH). (See FRONT DOOR SPEAKER INSPECTION.) • Is the front door speaker (LH) normal?	Yes	Go to the next step.
		No	Replace the front door speaker (LH), then go to Step 27. (See FRONT DOOR SPEAKER REMOVAL/INSTALLATION.)
8	**INSPECT TWEETER (LH)** • Inspect the tweeter (LH) (See TWEETER INSPECTION.) • Is the tweeter (LH) normal?	Yes	Go to Step 27.
		No	Replace the tweeter (LH), then go to Step 27. (See TWEETER REMOVAL/INSTALLATION.)
9	**INSPECT TUNER AND AMP UNIT (TAU) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the tuner and amp unit (TAU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.

Step	Inspection		Action
10	**INSPECT FRONT DOOR SPEAKER (RH) CONNECTOR CONDITION** • Disconnect the front door speaker (RH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.
11	**INSPECT TWEETER (RH) CONNECTOR CONDITION** • Disconnect the tweeter (RH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.
12	**INSPECT FRONT DOOR SPEAKER (RH) CIRCUIT FOR SHORT TO GROUND** • Verify that the following connectors are disconnected. — Tuner and amp unit (TAU) — Front door speaker (RH) — Tweeter (RH) • Inspect for continuity between the following terminals (wiring harness-side) and body ground. — Front door speaker (RH) terminal C — Front door speaker (RH) terminal B • Is there continuity?	Yes	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Tuner and amp unit (TAU) terminal 2D and front door speaker (RH) terminal C • Tuner and amp unit (TAU) terminal 2F and front door speaker (RH) terminal B • Tuner and amp unit (TAU) terminal 2D and tweeter (RH) terminal B • Tuner and amp unit (TAU) terminal 2F and tweeter (RH) terminal A **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. Go to Step 27.
		No	Go to the next step.
13	**INSPECT FRONT DOOR SPEAKER (RH) CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the following connectors are disconnected. — Tuner and amp unit (TAU) — Front door speaker (RH) — Tweeter (RH) • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side). — Front door speaker (RH) terminal C — Front door speaker (RH) terminal B • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Tuner and amp unit (TAU) terminal 2D and front door speaker (RH) terminal C • Tuner and amp unit (TAU) terminal 2F and front door speaker (RH) terminal B • Tuner and amp unit (TAU) terminal 2D and tweeter (RH) terminal B • Tuner and amp unit (TAU) terminal 2F and tweeter (RH) terminal A **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. Go to Step 27.
14	**INSPECT FRONT DOOR SPEAKER (RH)** • Inspect the front door speaker (RH). (See FRONT DOOR SPEAKER INSPECTION.) • Is the front door speaker (RH) normal?	Yes	Go to the next step.
		No	Replace the front door speaker (RH), then go to Step 27. (See FRONT DOOR SPEAKER REMOVAL/INSTALLATION.)

Step	Inspection		Action
15	**INSPECT TWEETER (RH)** • Inspect the tweeter (RH). (See TWEETER INSPECTION.) • Is the tweeter (RH) normal?	Yes	Go to Step 27.
		No	Replace the tweeter (RH), then go to Step 27. (See TWEETER REMOVAL/INSTALLATION.)
16	**INSPECT TUNER AND AMP UNIT (TAU) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the tuner and amp unit (TAU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.
17	**INSPECT REAR DOOR SPEAKER (LH) CONNECTOR CONDITION** • Disconnect the rear door speaker (LH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.
18	**INSPECT REAR DOOR SPEAKER (LH) CIRCUIT FOR SHORT TO GROUND** • Verify that the tuner and amp unit (TAU) and rear door speaker (LH) connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground. — Rear door speaker (LH) terminal C — Rear door speaker (LH) terminal B • Is there continuity?	Yes	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Tuner and amp unit (TAU) terminal 2S and rear door speaker (LH) terminal C • Tuner and amp unit (TAU) terminal 2U and rear door speaker (LH) terminal B **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. Go to Step 27.
		No	Go to the next step.
19	**INSPECT REAR DOOR SPEAKER (LH) CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the tuner and amp unit (TAU) and rear door speaker (LH) connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side). — Rear door speaker (LH) terminal C — Rear door speaker (LH) terminal B • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Tuner and amp unit (TAU) terminal 2S and rear door speaker (LH) terminal C • Tuner and amp unit (TAU) terminal 2U and rear door speaker (LH) terminal B **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. Go to Step 27.
20	**INSPECT REAR DOOR SPEAKER (LH)** • Inspect the rear door speaker (LH). (See REAR DOOR SPEAKER INSPECTION.) • Is the rear door speaker (LH) normal?	Yes	Go to Step 27.
		No	Replace the rear door speaker (LH), then go to Step 27. (See REAR DOOR SPEAKER REMOVAL/ INSTALLATION.)

Step	Inspection		Action
21	**INSPECT TUNER AND AMP UNIT (TAU) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the tuner and amp unit (TAU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.
22	**INSPECT REAR DOOR SPEAKER (RH) CONNECTOR CONDITION** • Disconnect the rear door speaker (RH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 27.
23	**INSPECT REAR DOOR SPEAKER (RH) CIRCUIT FOR SHORT TO GROUND** • Verify that the tuner and amp unit (TAU) and rear door speaker (RH) connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground. — Rear door speaker (RH) terminal C — Rear door speaker (RH) terminal B • Is there continuity?	Yes	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Tuner and amp unit (TAU) terminal 2V and rear door speaker (RH) terminal C • Tuner and amp unit (TAU) terminal 2X and rear door speaker (RH) terminal B **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. Go to Step 27.
		No	Go to the next step.
24	**INSPECT REAR DOOR SPEAKER (RH) CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the tuner and amp unit (TAU) and rear door speaker (RH) connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side). — Rear door speaker (RH) terminal C — Rear door speaker (RH) terminal B • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify if there is a common connector between the following terminals. • Tuner and amp unit (TAU) terminal 2V and rear door speaker (RH) terminal C • Tuner and amp unit (TAU) terminal 2X and rear door speaker (RH) terminal B **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. Go to Step 27.
25	**INSPECT REAR DOOR SPEAKER (RH)** • Inspect the rear door speaker (RH). (See REAR DOOR SPEAKER INSPECTION.) • Is the rear door speaker (RH) normal?	Yes	Go to Step 27.
		No	Replace the rear door speaker (RH), then go to Step 27. (See REAR DOOR SPEAKER REMOVAL/ INSTALLATION.)

Step	Inspection		Action
26	**INSPECT TUNER AND AMP UNIT (TAU) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the tuner and amp unit (TAU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to the next step.
27	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the connectivity master unit (CMU) using the M-MDS. (See CLEARING DTC [CONNECTIVITY MASTER UNIT].) • Switch the ignition ON (engine off or on) and wait for **7 s or more**. • Retrieve the connectivity master unit (CMU) DTCs using the M-MDS. (See DTC INSPECTION [CONNECTIVITY MASTER UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the tuner and amp unit (TAU). (See TUNER AND AMP UNIT (TAU) REMOVAL/ INSTALLATION.) Go to the next step.
		No	Go to the next step.
28	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [CONNECTIVITY MASTER UNIT].)
		No	DTC troubleshooting completed.