
DTC U3003:16 [CONNECTIVITY MASTER UNIT]


id0902n7106800

Description	Low ACC power supply voltage input to connectivity master unit (CMU)
Detection condition	• The connectivity master unit (CMU) detects ACC power supply circuit voltage of **8.0 ± 0.8 V or less** for **10 s or more** with the ignition switched to ACC or ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• DTCs are stored in the PCM. • Battery malfunction • Generator malfunction • Connectivity master unit (CMU) connector or terminal malfunction • Connectivity master unit (CMU) ACC power supply circuit malfunction — Short to ground in wiring harness between MIRROR 7.5 A fuse and connectivity master unit (CMU) terminal 2Q — MIRROR 7.5 A fuse malfunction — Open circuit in wiring harness between ACC relay and connectivity master unit (CMU) terminal 2Q • Connectivity master unit (CMU) malfunction

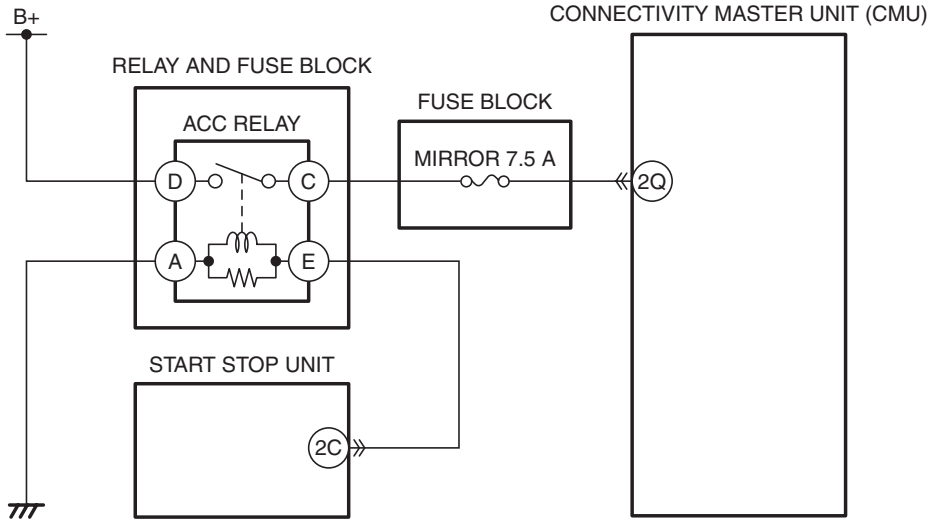



ACC RELAY
(RELAY AND FUSE BLOCK)







CONNECTIVITY MASTER UNIT (CMU)
WIRING HARNESS-SIDE CONNECTOR

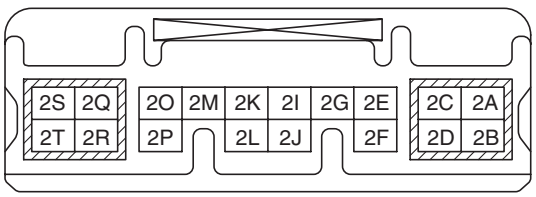



START STOP UNIT
WIRING HARNESS-SIDE CONNECTOR

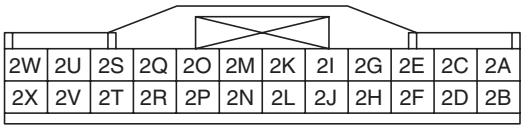



Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY PCM DTCs** • Retrieve the PCM DTCs using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.
2	**INSPECT BATTERY** • Inspect the battery. (See BATTERY INSPECTION.) • Is the battery normal?	Yes	Go to the next step.
		No	Recharge or replace the battery, then go to Step 6. (See BATTERY RECHARGING.) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3	**INSPECT GENERATOR** • Inspect the generator. (See GENERATOR INSPECTION [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See GENERATOR INSPECTION [WITHOUT i-ELOOP (SKYACTIV-D 1.5)].) (See GENERATOR INSPECTION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See GENERATOR INSPECTION [WITH i-ELOOP (SKYACTIV-D 1.5)].) • Is the generator normal?	Yes	Go to the next step.
		No	Replace the generator, then go to Step 6. (See GENERATOR REMOVAL/INSTALLATION [WITHOUT i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See GENERATOR REMOVAL/INSTALLATION [WITHOUT i-ELOOP (SKYACTIV-D 1.5)].) (See GENERATOR REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See GENERATOR REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)].)
4	**INSPECT CONNECTIVITY MASTER UNIT (CMU) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connectivity master unit (CMU) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.

Step	Inspection		Action
5	**VERIFY CONNECTIVITY MASTER UNIT (CMU) ACC POWER SUPPLY VOLTAGE** • Verify that the connectivity master unit (CMU) connector is disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Measure the voltage at connectivity master unit (CMU) terminal 2Q (wiring harness-side). • Is the voltage **B+**?	Yes	Go to the next step.
		No	Inspect the MIRROR 7.5 A fuse. • If the fuse is blown: — Refer to the wiring diagram and verify if there is a common connector between MIRROR 7.5 A fuse and connectivity master unit (CMU) terminal 2Q. **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. • Replace the fuse. • If the fuse is damaged: — Replace the fuse. • If the fuse is normal: — Refer to the wiring diagram and verify if there is a common connector between ACC relay and connectivity master unit (CMU) terminal 2Q. **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for an open circuit to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the connectivity master unit (CMU) using the M-MDS. (See CLEARING DTC [CONNECTIVITY MASTER UNIT].) • Switch the ignition ON (engine off or on) and wait for **17 s or more**. • Retrieve the connectivity master unit (CMU) DTCs using the M-MDS. (See DTC INSPECTION [CONNECTIVITY MASTER UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the connectivity master unit (CMU). (See CONNECTIVITY MASTER UNIT (CMU) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [CONNECTIVITY MASTER UNIT].)
		No	DTC troubleshooting completed.