
DTC B108B:23 [START STOP UNIT]

id0902p6019300

Description	Push button start switch 1 circuit malfunction
Detection condition	• Start stop unit detects that the push button start switch 1 is stuck on for **120 s or more**.
Fail-safe	• Perform the control with the push button start switch 1 turned off.
Possible cause	• Push button start connector or terminal malfunction • Start stop unit connector or terminal malfunction • Short to ground in wiring harness between start stop unit terminal 1H and push button start terminal C • Push button start switch 1 malfunction • Start stop unit malfunction

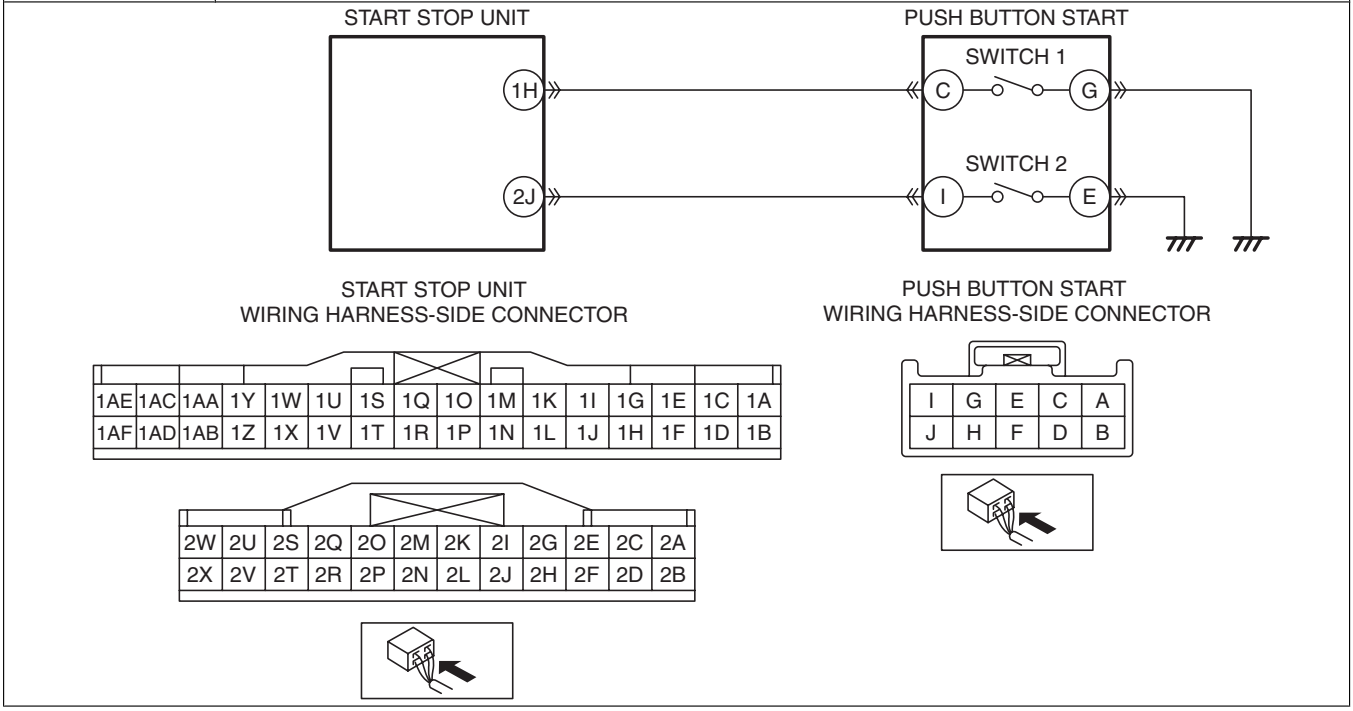

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT PUSH BUTTON START CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the push button start connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
2	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.

Step	Inspection		Action
3	**INSPECT PUSH BUTTON START SWITCH 1 CIRCUIT FOR SHORT TO GROUND** • Verify that the push button start and start stop unit connectors are disconnected. • Inspect for continuity between push button start terminal C (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between start stop unit terminal 1H and push button start terminal C. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 5.
		No	Go to the next step.
4	**INSPECT PUSH BUTTON START SWITCH 1** • Inspect the push button start switch 1. (See PUSH BUTTON START INSPECTION.) • Is the push button start switch 1 normal?	Yes	Go to the next step.
		No	Replace the push button start, then go to the next step. (See PUSH BUTTON START REMOVAL/INSTALLATION.)
5	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Switch the ignition ON (engine off or on) and wait for **120 s or more**. • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
6	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].)
		No	DTC troubleshooting completed.