
## DTC B108B:24 [START STOP UNIT]

id0902p6019400

| Description | Push button start switch 1 circuit malfunction |
|---|---|
| Detection condition | • Start stop unit detects that the push button start switch 1 is kept in an off condition **5 times or more** even though the push button start switch 2 is on. |
| Fail-safe | Not applicable |
| Possible cause | • Push button start connector or terminal malfunction<br>• Open circuit in wiring harness between push button start terminal G and body ground<br>• Start stop unit connector or terminal malfunction<br>• Open circuit in wiring harness between start stop unit terminal 1H and push button start terminal C<br>• Push button start switch 1 malfunction<br>• Start stop unit malfunction |

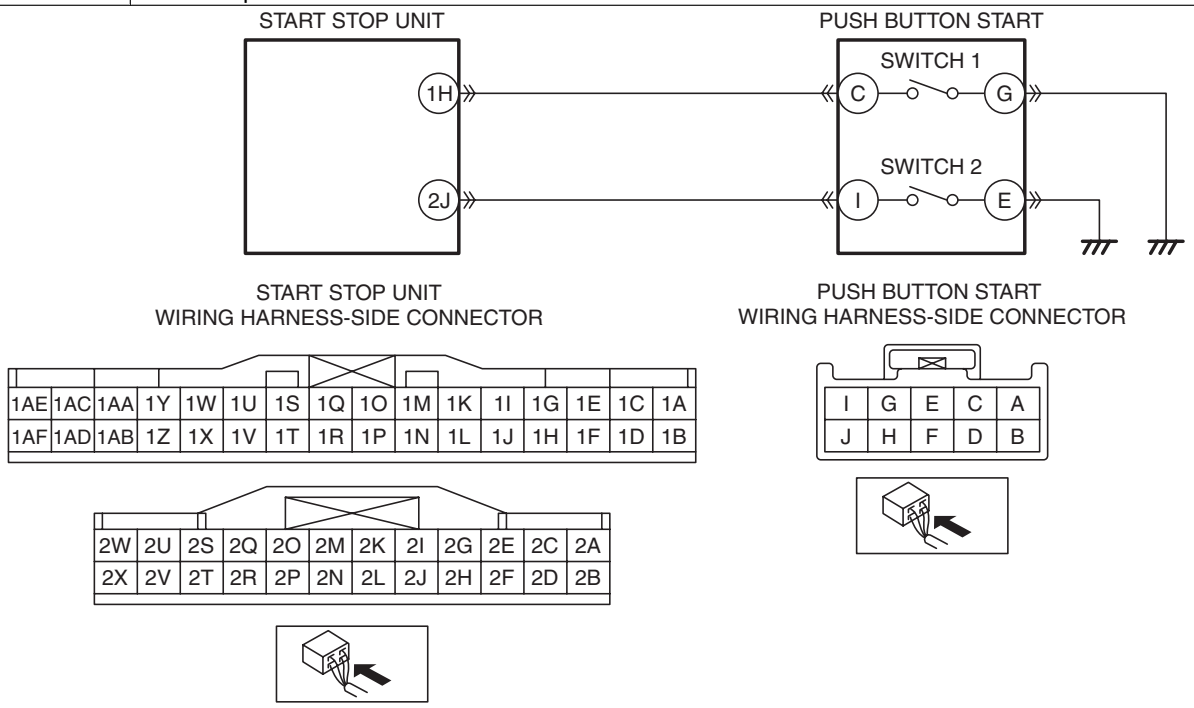


### Diagnostic Procedure

| Step | Inspection | | Action |
|---|---|---|---|
| 1 | **INSPECT PUSH BUTTON START CONNECTOR CONDITION**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Disconnect the push button start connector.<br>• Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection.<br>• Is the connector normal? | Yes | Go to the next step. |
| | | No | Repair or replace the connector, then go to Step 6. |

| Step | Inspection | | Action |
|---|---|---|---|
| 2 | **INSPECT PUSH BUTTON START SWITCH 1 GROUND CIRCUIT FOR OPEN CIRCUIT**<br>• Verify that the push button start connector is disconnected.<br>• Inspect for continuity between push button start terminal G (wiring harness-side) and body ground.<br>• Is there continuity? | Yes | Go to the next step. |
| | | No | Refer to the wiring diagram and verify whether or not there is a common connector between push button start terminal G and body ground.<br>**If there is a common connector:**<br>• Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit.<br>• Repair or replace the malfunctioning part.<br>**If there is no common connector:**<br>• Repair or replace the wiring harness which has an open circuit.<br>Go to Step 6. |
| 3 | **INSPECT START STOP UNIT CONNECTOR CONDITION**<br>• Disconnect the start stop unit connector.<br>• Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection.<br>• Is the connector normal? | Yes | Go to the next step. |
| | | No | Repair or replace the connector, then go to Step 6. |
| 4 | **INSPECT PUSH BUTTON START SWITCH 1 CIRCUIT FOR OPEN CIRCUIT**<br>• Verify that the push button start and start stop unit connectors are disconnected.<br>• Inspect for continuity between start stop unit terminal 1H (wiring harness-side) and push button start terminal C (wiring harness-side).<br>• Is there continuity? | Yes | Go to the next step. |
| | | No | Refer to the wiring diagram and verify whether or not there is a common connector between start stop unit terminal 1H and push button start terminal C.<br>**If there is a common connector:**<br>• Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit.<br>• Repair or replace the malfunctioning part.<br>**If there is no common connector:**<br>• Repair or replace the wiring harness which has an open circuit.<br>Go to Step 6. |
| 5 | **INSPECT PUSH BUTTON START SWITCH 1**<br>• Inspect the push button start switch 1. (See PUSH BUTTON START INSPECTION.)<br>• Is the push button start switch 1 normal? | Yes | Go to the next step. |
| | | No | Replace the push button start, then go to the next step. (See PUSH BUTTON START REMOVAL/INSTALLATION.) |
| 6 | **VERIFY THAT REPAIRS HAVE BEEN COMPLETED**<br>• Always reconnect all disconnected connectors.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].)<br>• Switch the ignition ON (engine off or on) and press the push button start **5 times or more**.<br>• Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].)<br>• Is the same DTC displayed? | Yes | Repeat the inspection from Step 1.<br>• If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.)<br>Go to the next step. |
| | | No | Go to the next step. |
| 7 | **VERIFY IF OTHER DTCs DISPLAYED**<br>• Are any other DTCs displayed? | Yes | Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].) |
| | | No | DTC troubleshooting completed. |