

DTC B10AC:13 [START STOP UNIT]

id0902p6019700


Description	Cruise control switch circuit malfunction
Detection condition	• Start stop unit detected an open circuit in the cruise control switch circuit for **5 s or more** with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Instrument cluster configuration error • Clock spring connector or terminal malfunction • Clock spring malfunction • Start stop unit connector or terminal malfunction • Open circuit in wiring harness between the following terminals: — Start stop unit terminal 1Y—Clock spring terminal 1J — Start stop unit terminal 1Z—Clock spring terminal 1N • Cruise control switch malfunction • Start stop unit malfunction

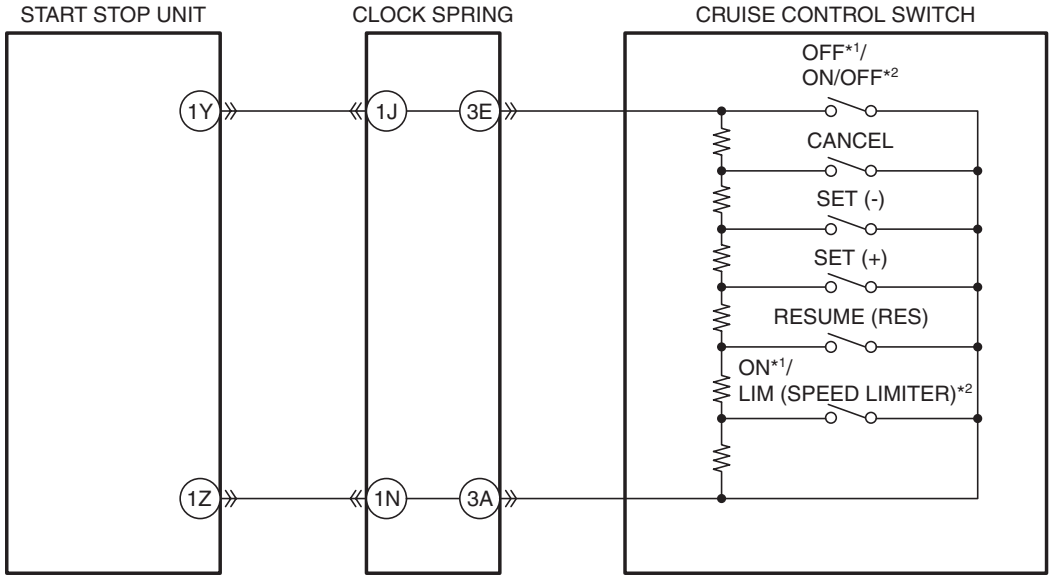


START STOP UNIT
WIRING HARNESS-SIDE CONNECTOR

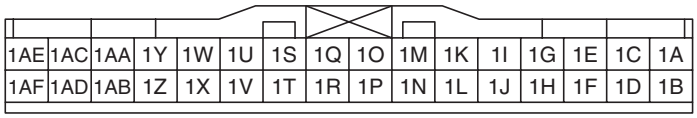

1AE	1AC	1AA	1Y	1W	1U	1S	1Q	1O	1M	1K	1I	1G	1E	1C	1A
1AF	1AD	1AB	1Z	1X	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B

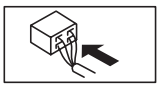


CLOCK SPRING
WIRING HARNESS-SIDE CONNECTOR

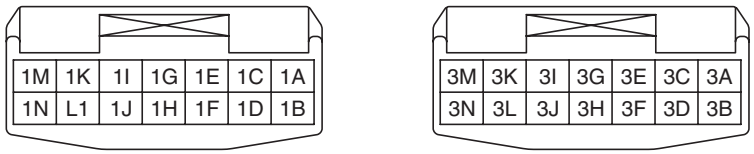

1M	1K	1I	1G	1E	1C	1A
1N	L1	1J	1H	1F	1D	1B

3M	3K	3I	3G	3E	3C	3A
3N	3L	3J	3H	3F	3D	3B

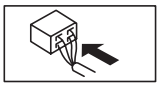

*1 : Without adjustable speed limiter (ASL)

*2 : With adjustable speed limiter (ASL)

Diagnostic Procedure

Step	Inspection		Action
1	**PERFORM INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA)** • Using the M-MDS, perform the instrument cluster configuration (using As-Built data). (See INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA).) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Switch the ignition ON (engine off or on) and wait for **5 s or more**. • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Using the M-MDS, perform the instrument cluster configuration (using As-Built data) again, then go to the next step. (See INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA).)
		No	Go to Step 8.
2	**INSPECT CLOCK SPRING CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the clock spring connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
3	**INSPECT CLOCK SPRING** • Inspect the clock spring. (See CLOCK SPRING INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Is the clock spring normal?	Yes	Go to the next step.
		No	Replace the clock spring, then go to Step 7. (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
4	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
5	**INSPECT CRUISE CONTROL SWITCH CIRCUIT FOR OPEN CIRCUIT** • Verify that the start stop unit and clock spring connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Start stop unit terminal 1Y—Clock spring terminal 1J — Start stop unit terminal 1Z—Clock spring terminal 1N • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Start stop unit terminal 1Y—Clock spring terminal 1J • Start stop unit terminal 1Z—Clock spring terminal 1N **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 7.

Step	Inspection		Action
6	**INSPECT CRUISE CONTROL SWITCH** • Inspect the cruise control switch. (See CRUISE CONTROL SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CRUISE CONTROL SWITCH INSPECTION [SKYACTIV-D 1.5].) • Is the cruise control switch normal?	Yes	Go to the next step.
		No	Replace the cruise control switch, then go to the next step. (See STEERING SWITCH REMOVAL/INSTALLATION.)
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Switch the ignition ON (engine off or on) and wait for **5 s or more**. • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].)
		No	DTC troubleshooting completed.