

DTC B10AC:23 [START STOP UNIT]


id0902p6019800

Description	Cruise control switch circuit malfunction
Detection condition	• Start stop unit detects any cruise control switch stuck on for **120 s or more** with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Instrument cluster configuration error • Clock spring connector or terminal malfunction • Clock spring malfunction • Start stop unit connector or terminal malfunction • Short to power supply in wiring harness between start stop unit terminal 1Y and clock spring terminal 1J • Cruise control switch malfunction • Start stop unit malfunction

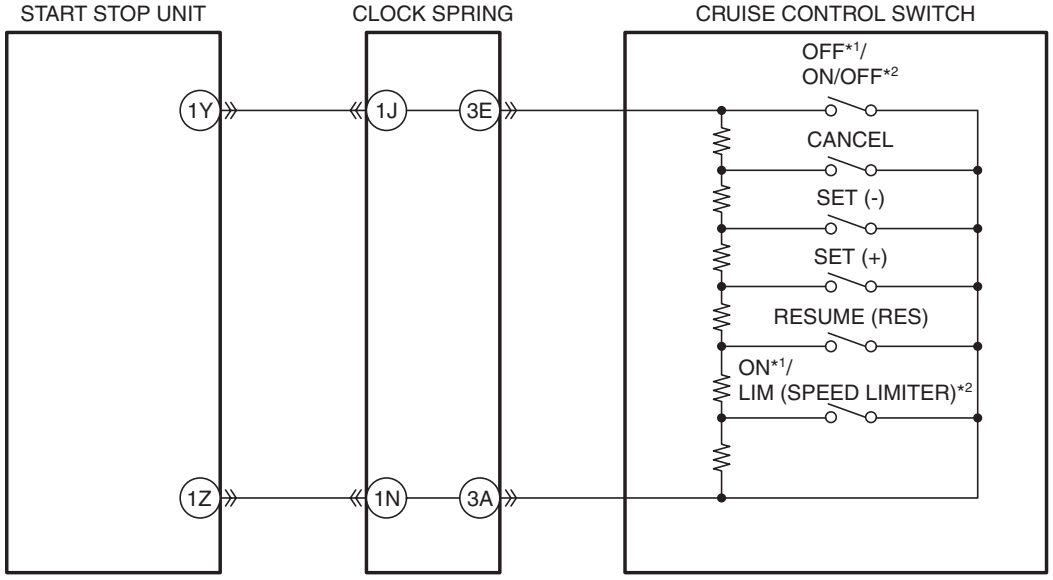



START STOP UNIT
WIRING HARNESS-SIDE CONNECTOR





CLOCK SPRING
WIRING HARNESS-SIDE CONNECTOR

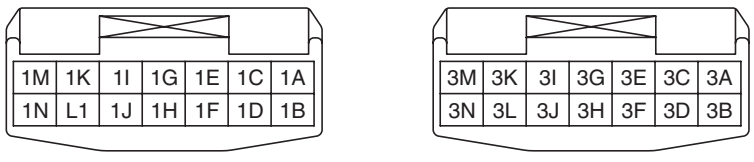



*1 : Without adjustable speed limiter (ASL)

*2 : With adjustable speed limiter (ASL)

Diagnostic Procedure

Step	Inspection		Action
1	**PERFORM INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA)** • Using the M-MDS, perform the instrument cluster configuration (using As-Built data). (See INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA).) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Switch the ignition ON (engine off or on) and wait for **120 s or more**. • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Using the M-MDS, perform the instrument cluster configuration (using As-Built data) again, then go to the next step. (See INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA).)
		No	Go to Step 8.
2	**INSPECT CLOCK SPRING CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the clock spring connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
3	**INSPECT CLOCK SPRING** • Inspect the clock spring. (See CLOCK SPRING INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Is the clock spring normal?	Yes	Go to the next step.
		No	Replace the clock spring, then go to Step 7. (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
4	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
5	**INSPECT CRUISE CONTROL SWITCH CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the start stop unit and clock spring connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the clock spring terminal 1J (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between start stop unit terminal 1Y and clock spring terminal 1J. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 7.

Step	Inspection		Action
6	**INSPECT CRUISE CONTROL SWITCH** • Inspect the cruise control switch. (See CRUISE CONTROL SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CRUISE CONTROL SWITCH INSPECTION [SKYACTIV-D 1.5].) • Is the cruise control switch normal?	Yes	Go to the next step.
		No	Replace the cruise control switch, then go to the next step. (See STEERING SWITCH REMOVAL/INSTALLATION.)
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Switch the ignition ON (engine off or on) and wait for **120 s or more**. • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].)
		No	DTC troubleshooting completed.