
DTC C0052:14 [START STOP UNIT]

id0902p6021400

Description	Steering angle sensor A signal circuit malfunction
Detection condition	• Start stop unit detects an open circuit or short to ground in the steering angle sensor A signal circuit.
Fail-safe	Not applicable
Possible cause	• Steering angle sensor connector or terminal malfunction • Start stop unit connector or terminal malfunction • Short to ground in wiring harness between start stop unit terminal 1U and steering angle sensor terminal A • Open circuit in wiring harness between start stop unit terminal 1U and steering angle sensor terminal A • Steering angle sensor malfunction • Start stop unit malfunction

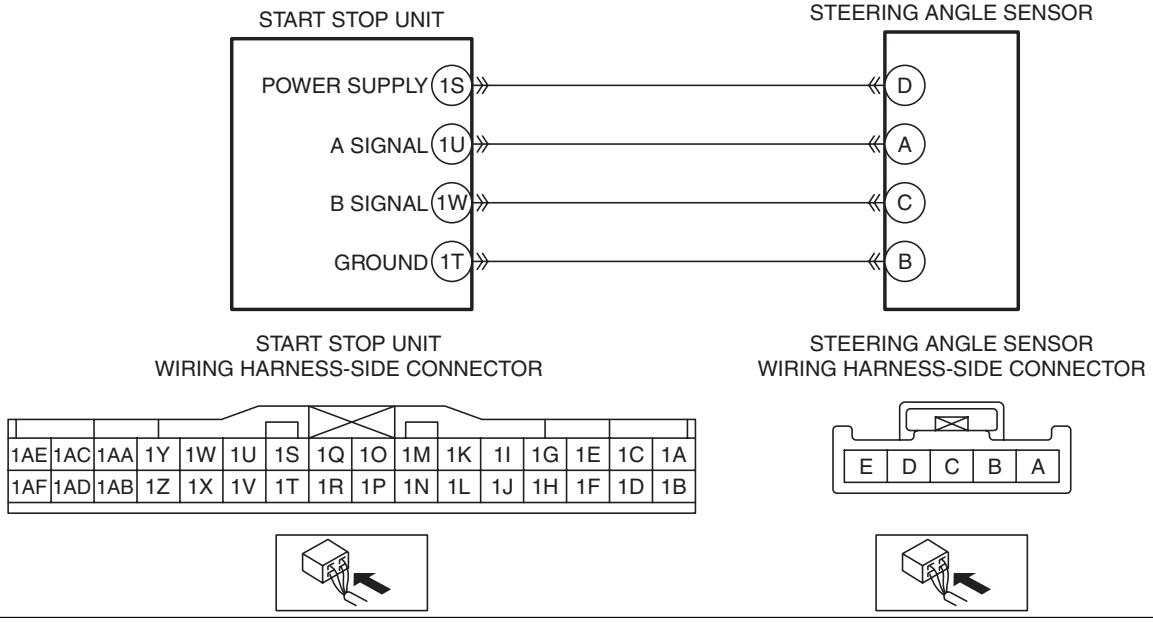

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT STEERING ANGLE SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the steering angle sensor connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
2	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.

Step	Inspection		Action
3	**INSPECT STEERING ANGLE SENSOR A SIGNAL CIRCUIT FOR SHORT TO GROUND** • Verify that the steering angle sensor and start stop unit connectors are disconnected. • Inspect for continuity between steering angle sensor terminal A (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between start stop unit terminal 1U and steering angle sensor terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.
4	**INSPECT STEERING ANGLE SENSOR A SIGNAL CIRCUIT FOR OPEN CIRCUIT** • Verify that the steering angle sensor and start stop unit connectors are disconnected. • Inspect for continuity between start stop unit terminal 1U (wiring harness-side) and steering angle sensor terminal A (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between start stop unit terminal 1U and steering angle sensor terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.
5	**INSPECT STEERING ANGLE SENSOR** • Inspect the steering angle sensor. (See STEERING ANGLE SENSOR INSPECTION.) • Is the steering angle sensor normal?	Yes	Go to the next step.
		No	Replace the steering angle sensor, then go to the next step. (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].)
		No	DTC troubleshooting completed.