

## DTC C2003:13 [START STOP UNIT]

id0902p6021800

| Description | Open circuit in steering switch |
|---|---|
| Detection condition | • Start stop unit detects an open circuit in the steering switch circuit for **5 s or more** with the ignition switched ON (engine off or on). |
| Fail-safe | Not applicable |
| Possible cause | • Clock spring connector or terminal malfunction<br>• Clock spring malfunction<br>• Start stop unit connector or terminal malfunction<br>• Open circuit in wiring harness between the following terminals:<br>— Start stop unit terminal 1AA—Clock spring terminal 1K<br>— Start stop unit terminal 1AB—Clock spring terminal 1C<br>• Steering switch malfunction<br>• Start stop unit malfunction |

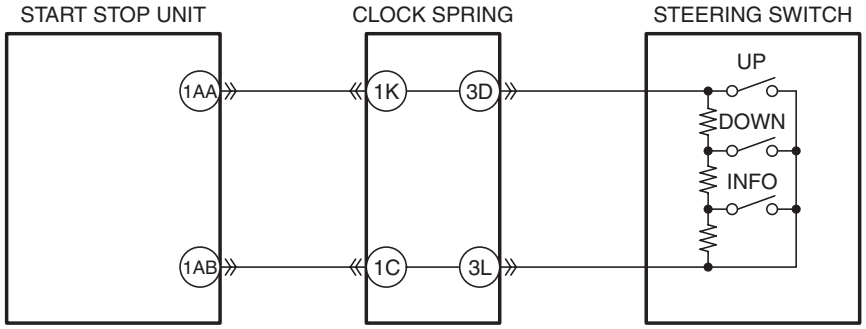



START STOP UNIT
WIRING HARNESS-SIDE CONNECTOR

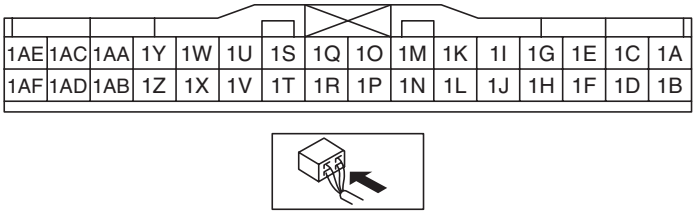




CLOCK SPRING
WIRING HARNESS-SIDE CONNECTOR

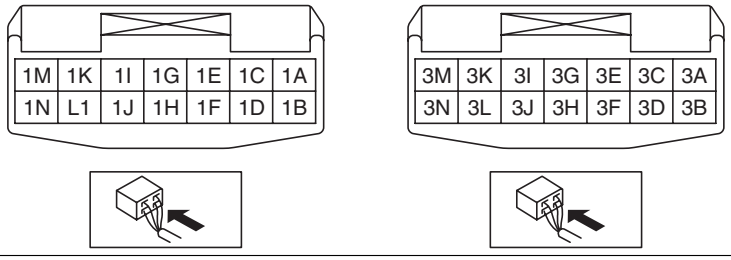


### Diagnostic Procedure

| Step | Inspection | | Action |
|---|---|---|---|
| 1 | **INSPECT CLOCK SPRING CONNECTOR CONDITION**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Disconnect the clock spring connector.<br>• Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection.<br>• Is the connector normal? | Yes | Go to the next step. |
| | | No | Repair or replace the connector, then go to Step 6. |

| Step | Inspection | | Action |
|---|---|---|---|
| 2 | **INSPECT CLOCK SPRING**<br>• Inspect the clock spring.<br>(See CLOCK SPRING INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].)<br>(See CLOCK SPRING INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)<br>• Is the clock spring normal? | Yes | Go to the next step. |
| | | No | Replace the clock spring, then go to Step 6.<br>(See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)<br>(See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) |
| 3 | **INSPECT START STOP UNIT CONNECTOR CONDITION**<br>• Disconnect the start stop unit connector.<br>• Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection.<br>• Is the connector normal? | Yes | Go to the next step. |
| | | No | Repair or replace the connector, then go to Step 6. |
| 4 | **INSPECT STEERING SWITCH CIRCUIT FOR OPEN CIRCUIT**<br>• Verify that the clock spring and start stop unit connectors are disconnected.<br>• Inspect for continuity between the following terminals (wiring harness-side):<br>— Start stop unit terminal 1AA—Clock spring terminal 1K<br>— Start stop unit terminal 1AB—Clock spring terminal 1C<br>• Is there continuity? | Yes | Go to the next step. |
| | | No | Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals:<br>• Start stop unit terminal 1AA—Clock spring terminal 1K<br>• Start stop unit terminal 1AB—Clock spring terminal 1C<br>**If there is a common connector:**<br>• Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit.<br>• Repair or replace the malfunctioning part.<br>**If there is no common connector:**<br>• Repair or replace the wiring harness which has an open circuit.<br>Go to Step 6. |
| 5 | **INSPECT STEERING SWITCH**<br>• Inspect the steering switch.<br>(See STEERING SWITCH INSPECTION.)<br>• Is the steering switch normal? | Yes | Go to the next step. |
| | | No | Replace the steering switch, then go to the next step.<br>(See STEERING SWITCH REMOVAL/INSTALLATION.) |
| 6 | **VERIFY THAT REPAIRS HAVE BEEN COMPLETED**<br>• Always reconnect all disconnected connectors.<br>• Connect the negative battery cable.<br>(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Clear the DTC for the start stop unit using the M-MDS.<br>(See CLEARING DTC [START STOP UNIT].)<br>• Switch the ignition ON (engine off or on) and wait for **5 s or more**.<br>• Retrieve the start stop unit DTCs using the M-MDS.<br>(See DTC INSPECTION [START STOP UNIT].)<br>• Is the same DTC displayed? | Yes | Repeat the inspection from Step 1.<br>• If the malfunction recurs, replace the start stop unit.<br>(See START STOP UNIT REMOVAL/INSTALLATION.)<br>Go to the next step. |
| | | No | Go to the next step. |
| 7 | **VERIFY IF OTHER DTCs DISPLAYED**<br>• Are any other DTCs displayed? | Yes | Repair or replace the malfunctioning part according to the applicable DTC troubleshooting.<br>(See DTC TABLE [START STOP UNIT].) |
| | | No | DTC troubleshooting completed. |