
DTC P0615:16 [START STOP UNIT]

- Starter relay malfunction
- Start stop unit connector or terminal malfunction
- Short to ground in wiring harness between starter relay terminal A and start stop unit terminal 2V
- Start stop unit malfunction

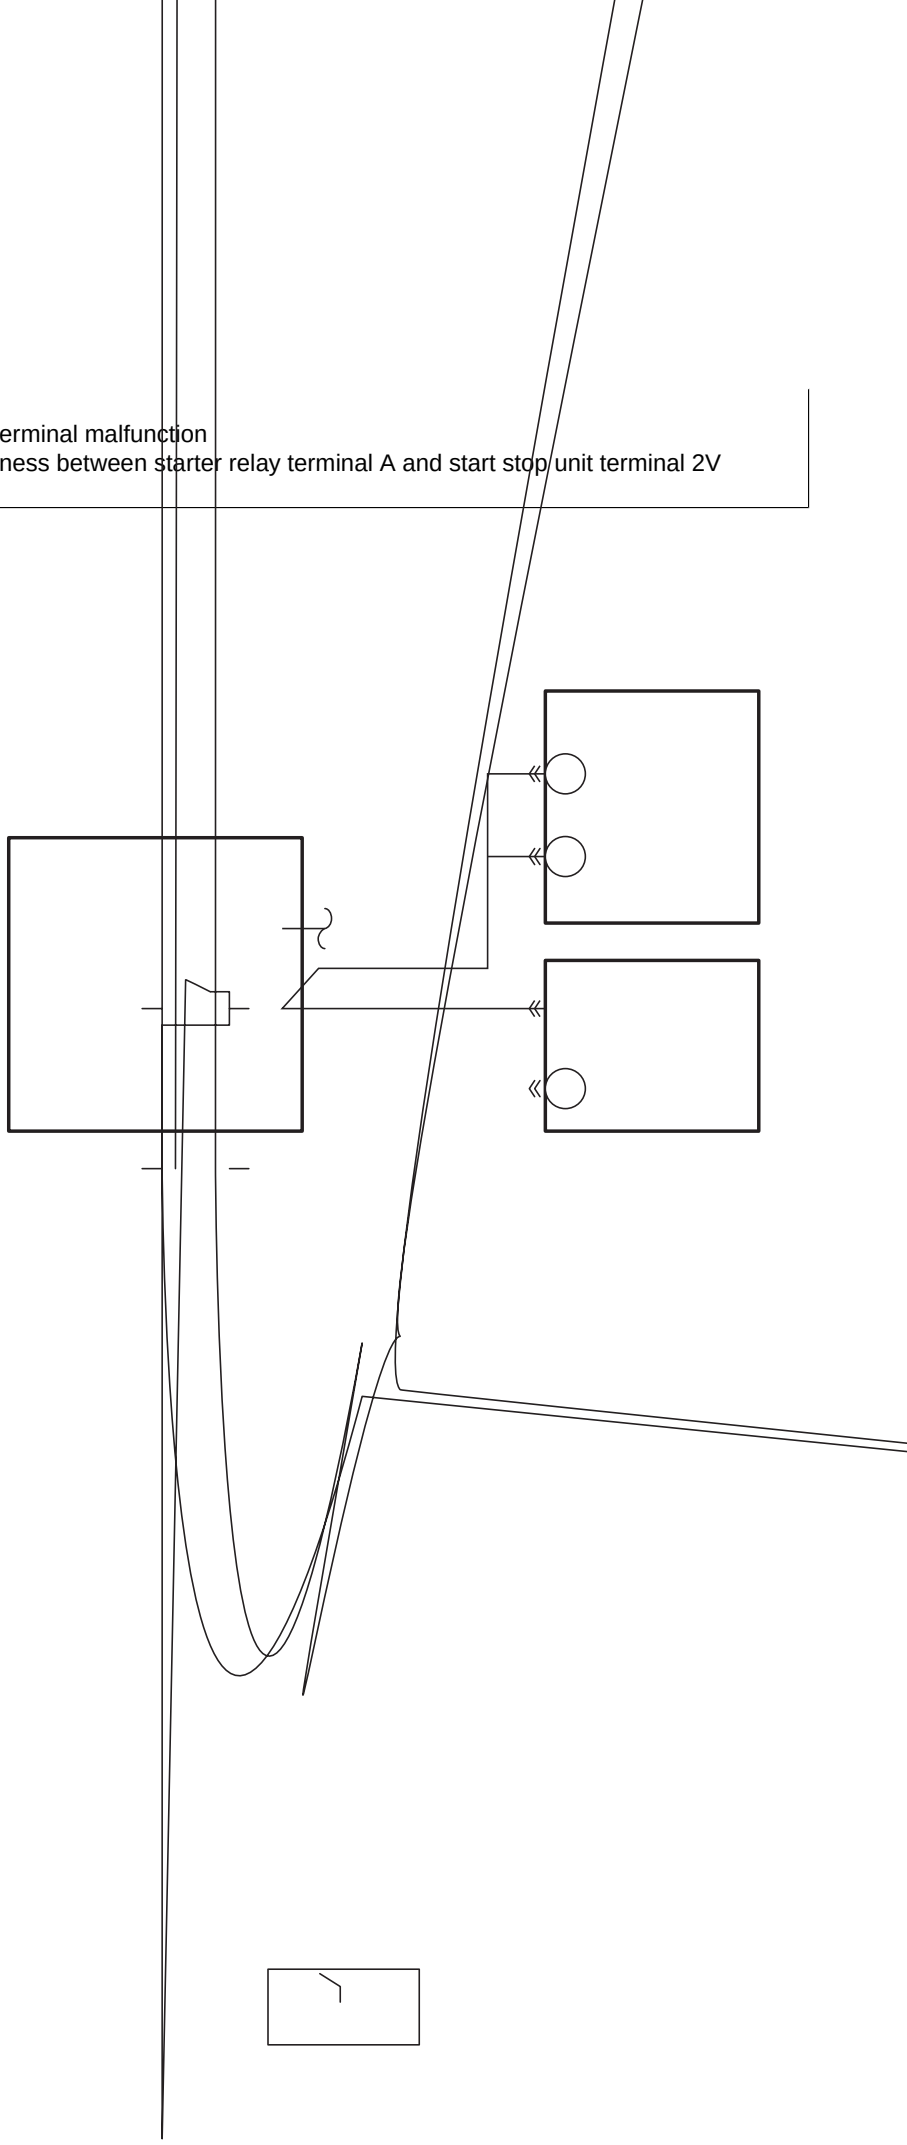

Diagnostic Procedure

Step