
DTC P1708:24 [START STOP UNIT]

id0902p6023500

Description	Starter interlock switch circuit malfunction
Detection condition	• Start stop unit detects an open circuit in the starter interlock switch circuit for **0.5 s or more** for a continuous **5 times** with the ignition switched ON (engine off or on).
Fail-safe	• Change to the back-up mode.
Possible cause	• Starter interlock switch connector or terminal malfunction • Open circuit in wiring harness between starter interlock switch terminal B and body ground • Starter interlock switch malfunction • Start stop unit connector or terminal malfunction • Open circuit in wiring harness between start stop unit terminal 1F and starter interlock switch terminal A • Start stop unit malfunction

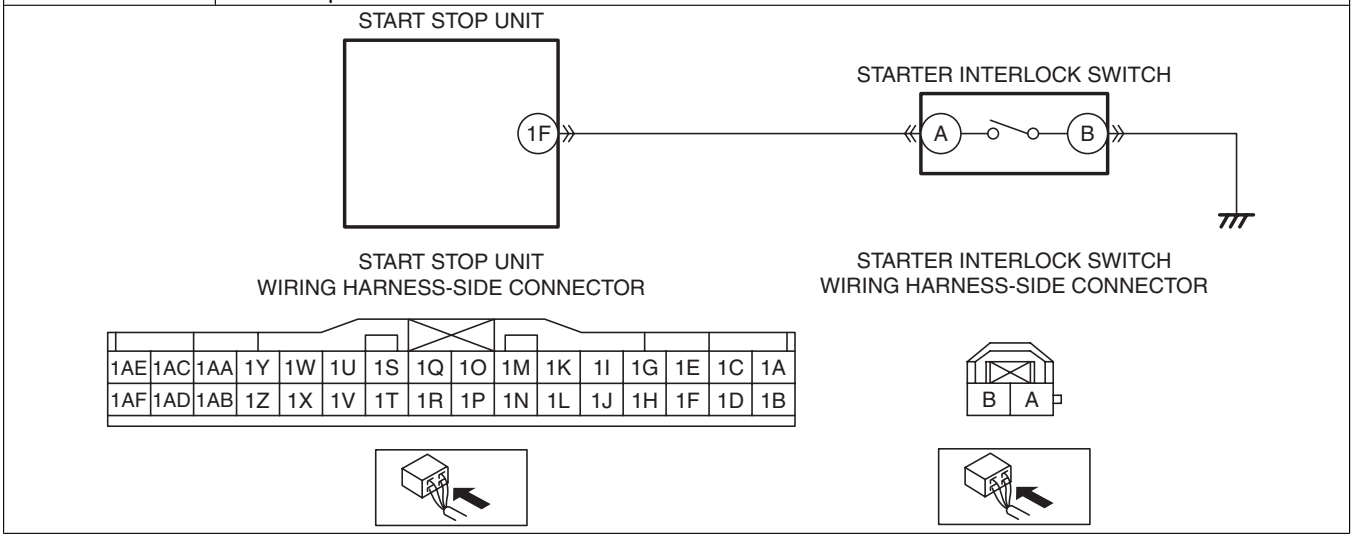

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT STARTER INTERLOCK SWITCH CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the starter interlock switch connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
2	**INSPECT STARTER INTERLOCK SWITCH GROUND CIRCUIT FOR OPEN CIRCUIT** • Verify that the starter interlock switch connector is disconnected. • Inspect for continuity between starter interlock switch terminal B (wiring harness-side) and body ground. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between starter interlock switch terminal B and body ground. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.

Step	Inspection		Action
3	**INSPECT STARTER INTERLOCK SWITCH** • Inspect the starter interlock switch. (See STARTER INTERLOCK SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See STARTER INTERLOCK SWITCH INSPECTION [SKYACTIV-D 1.5].) • Is the starter interlock switch normal?	Yes	Go to the next step.
		No	Replace the starter interlock switch, then go to Step 6. (See STARTER INTERLOCK SWITCH REMOVAL/INSTALLATION [F65M-R].) (See STARTER INTERLOCK SWITCH REMOVAL/INSTALLATION [F66M-R].)
4	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
5	**INSPECT STARTER INTERLOCK SWITCH CIRCUIT FOR OPEN CIRCUIT** • Verify that the starter interlock switch and start stop unit connectors are disconnected. • Inspect for continuity between start stop unit terminal 1F (wiring harness-side) and starter interlock switch terminal A (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between start stop unit terminal 1F and starter interlock switch terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Switch the ignition ON (engine off or on). • Perform the following work **5 times or more**. — Depress the clutch pedal for **1 s or more**. — Release the clutch pedal for **1 s or more**. • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].)
		No	DTC troubleshooting completed.