
## DTC U201F:11 [START STOP UNIT]

id0902p6024300

| Description | Keyless receiver circuit malfunction |
|---|---|
| Detection condition | • Start stop unit detects that the keyless receiver circuit voltage of **less than 3.4 V** for **0.5 s or more**. |
| Fail-safe | Not applicable |
| Possible cause | • Keyless receiver connector or terminal malfunction<br>• Start stop unit connector or terminal malfunction<br>• Short to ground in wiring harness between start stop unit terminal 2Q and keyless receiver terminal A<br>• Keyless receiver malfunction<br>• Start stop unit malfunction |

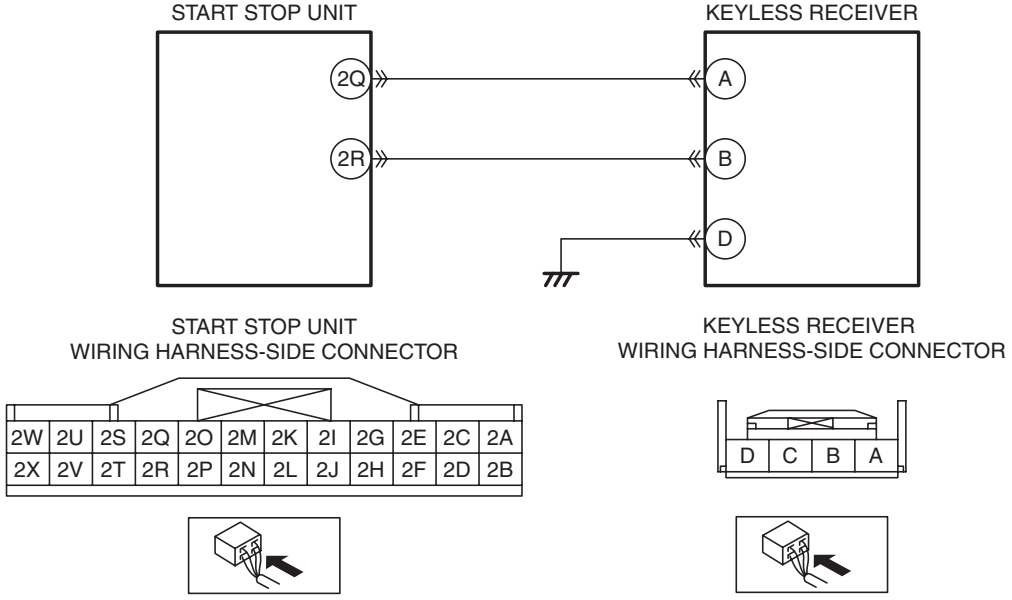


### Diagnostic Procedure

| Step | Inspection | | Action |
|---|---|---|---|
| 1 | **INSPECT KEYLESS RECEIVER CONNECTOR CONDITION**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Disconnect the keyless receiver connector.<br>• Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection.<br>• Is the connector normal? | Yes | Go to the next step. |
| | | No | Repair or replace the connector, then go to Step 5. |
| 2 | **INSPECT START STOP UNIT CONNECTOR CONDITION**<br>• Disconnect the start stop unit connector.<br>• Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection.<br>• Is the connector normal? | Yes | Go to the next step. |
| | | No | Repair or replace the connector, then go to Step 5. |

| Step | Inspection | | Action |
|---|---|---|---|
| 3 | **INSPECT KEYLESS RECEIVER CIRCUIT FOR SHORT TO GROUND**<br>• Verify that the keyless receiver and start stop unit connectors are disconnected.<br>• Inspect for continuity between keyless receiver terminal A (wiring harness-side) and body ground.<br>• Is there continuity? | Yes | Refer to the wiring diagram and verify whether or not there is a common connector between start stop unit terminal 2Q and keyless receiver terminal A.<br>**If there is a common connector:**<br>• Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground.<br>• Repair or replace the malfunctioning part.<br>**If there is no common connector:**<br>• Repair or replace the wiring harness which has a short to ground.<br>Go to Step 5. |
| | | No | Go to the next step. |
| 4 | **INSPECT KEYLESS RECEIVER**<br>• Inspect the keyless receiver. (See KEYLESS RECEIVER INSPECTION.)<br>• Is the keyless receiver normal? | Yes | Go to the next step. |
| | | No | Replace the keyless receiver, then go to the next step. (See KEYLESS RECEIVER REMOVAL/INSTALLATION.) |
| 5 | **VERIFY THAT REPAIRS HAVE BEEN COMPLETED**<br>• Always reconnect all disconnected connectors.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].)<br>• Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].)<br>• Is the same DTC displayed? | Yes | Repeat the inspection from Step 1.<br>• If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.)<br>Go to the next step. |
| | | No | Go to the next step. |
| 6 | **VERIFY IF OTHER DTCs DISPLAYED**<br>• Are any other DTCs displayed? | Yes | Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].) |
| | | No | DTC troubleshooting completed. |