
DTC U201F:12 [START STOP UNIT]

id0902p6024400

Description	Keyless receiver circuit malfunction
Detection condition	• Start stop unit detects that the keyless receiver circuit voltage of **6.2 V or more** for **0.5 s or more**.
Fail-safe	Not applicable
Possible cause	• Keyless receiver connector or terminal malfunction • Start stop unit connector or terminal malfunction • Short to power supply in wiring harness between start stop unit terminal 2Q and keyless receiver terminal A • Keyless receiver malfunction • Start stop unit malfunction

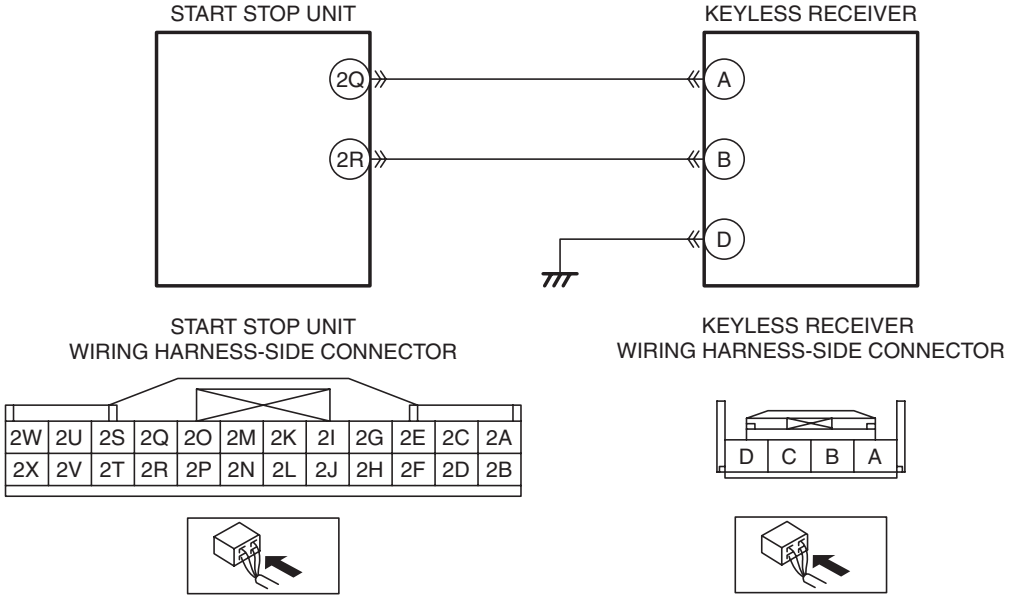

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT KEYLESS RECEIVER CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the keyless receiver connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
2	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.

Step	Inspection		Action
3	**INSPECT KEYLESS RECEIVER CIRCUIT FOR SHORT TO POWER SUPPLY** • Reconnect the start stop unit connector. • Verify that the keyless receiver connector is disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side): — Keyless receiver terminal A — Start stop unit terminal 2Q • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between start stop unit terminal 2Q and keyless receiver terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 5.
4	**INSPECT KEYLESS RECEIVER** • Inspect the keyless receiver. (See KEYLESS RECEIVER INSPECTION.) • Is the keyless receiver normal?	Yes	Go to the next step.
		No	Replace the keyless receiver, then go to the next step. (See KEYLESS RECEIVER REMOVAL/INSTALLATION.)
5	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
6	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].)
		No	DTC troubleshooting completed.