


DTC U3004:17 [START STOP UNIT]


id0902p6025300


Description	ACC relay circuit malfunction
Detection condition	• Start stop unit detects that the ACC monitor voltage of **2.5 V or more** for **5 s or more** with the ignition switched off.
Fail-safe	• Door locking operation inhibited while under i-stop control. (With i-stop system)
Possible cause	• ACC relay malfunction • Start stop unit connector or terminal malfunction • Short to power supply in wiring harness between ACC relay terminal C and start stop unit terminal 1E • Start stop unit malfunction

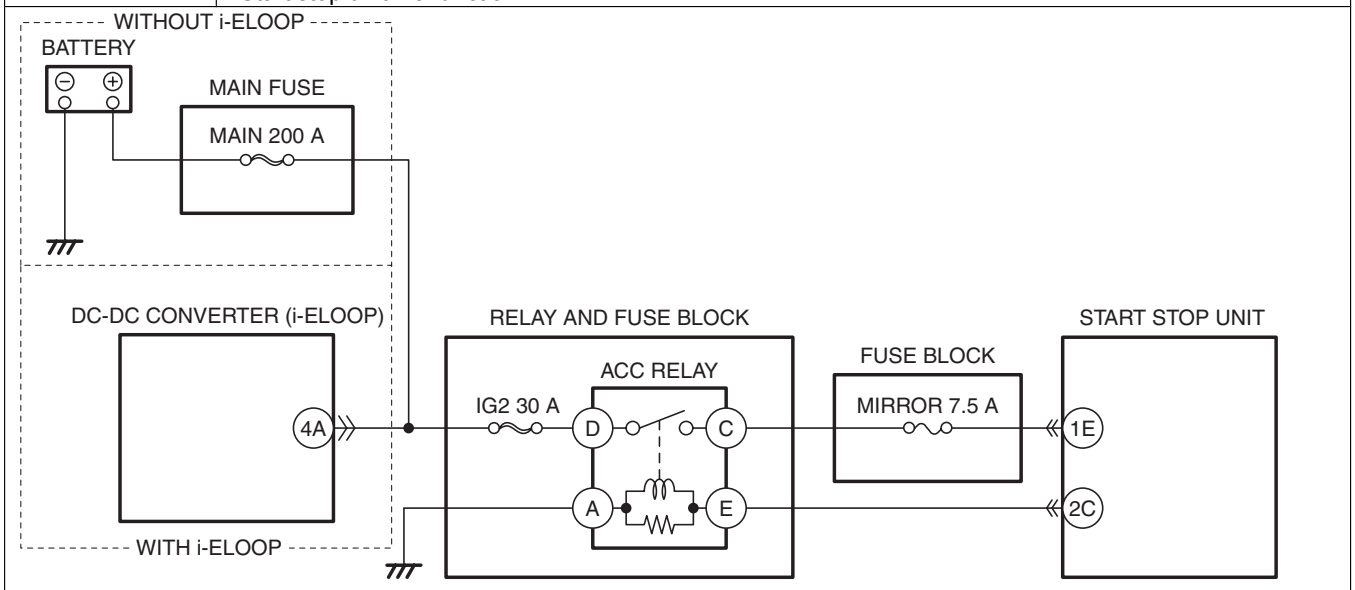

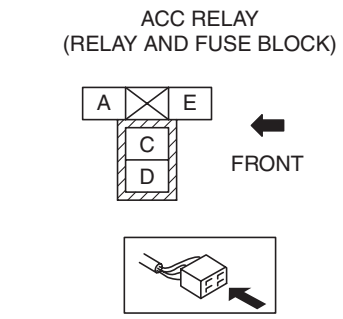

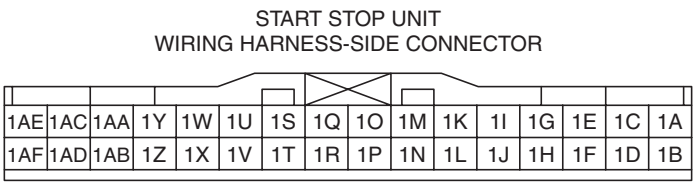


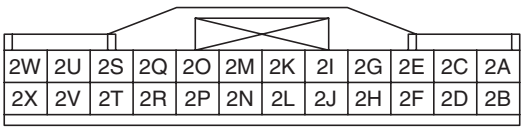



DC-DC CONVERTER (i-ELOOP)
WIRING HARNESS-SIDE CONNECTOR





Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT ACC RELAY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Remove the ACC relay. (See RELAY LOCATION.) • Inspect the ACC relay. (See RELAY INSPECTION.) • Is the ACC relay normal?	Yes	Go to the next step.
		No	Replace the ACC relay, then go to Step 4. (See RELAY LOCATION.)
2	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 4.
3	**INSPECT ACC RELAY CIRCUIT FOR SHORT TO POWER SUPPLY** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Measure the voltage at the start stop unit terminal 1E (wiring harness-side). • Is the voltage **2.5 V or more**?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between ACC relay terminal C and start stop unit terminal 1E. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to the next step.
		No	Go to the next step.
4	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Switch the ignition off and wait for **5 s or more**. • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
5	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].)
		No	DTC troubleshooting completed.