
DTC B10D1:23 [ADVANCED KEYLESS ENTRY SYSTEM]

id0902p8026400

Description	Request switch (LF) circuit malfunction
Detection condition	• Start stop unit detected any of the following conditions at a vehicle speed of **5 km/h {3 mph} or more**. — The request switch (LF) is continuously ON for **2 min or more**. — The request switch (LF) was ON **7 times** before the vehicle speed decreased to **less than 5 km/h {3 mph}**.
Fail-safe	Not applicable
Possible cause	• Front outer handle (LH) connector or terminal malfunction • LF control unit connector or terminal malfunction • Short to ground in wiring harness between LF control unit terminal C and front outer handle (LH) terminal D • Request switch (LF) malfunction • LF control unit malfunction • Start stop unit malfunction

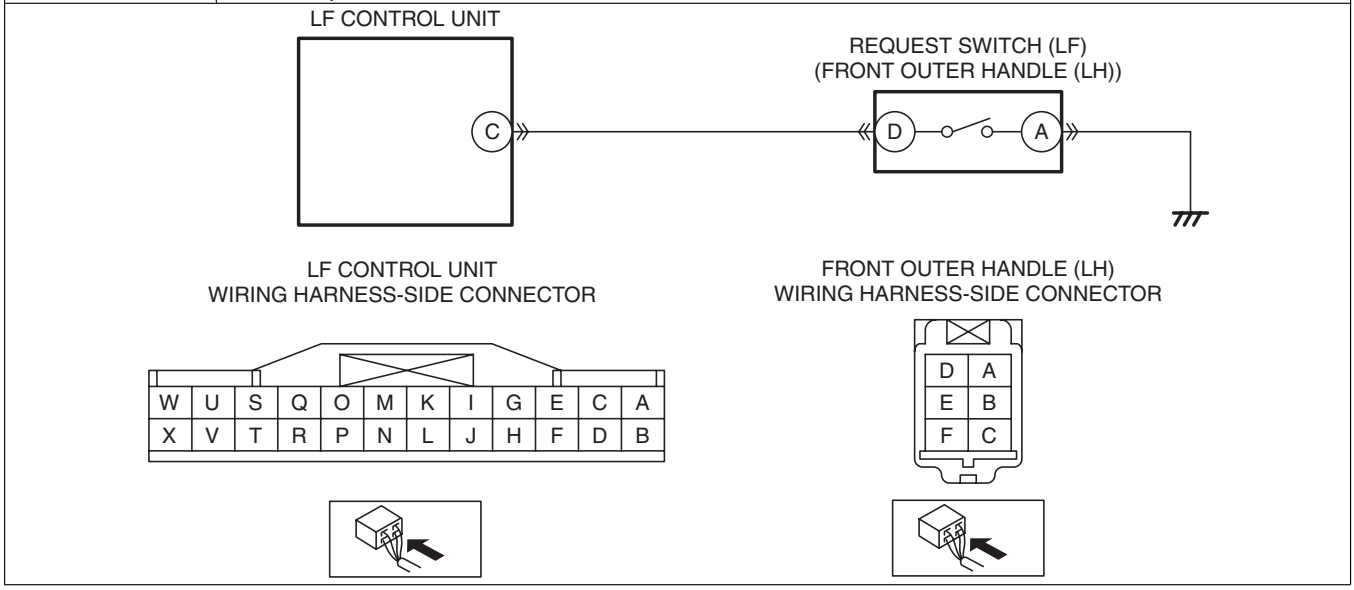

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT FRONT OUTER HANDLE (LH) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the front outer handle (LH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
2	**INSPECT LF CONTROL UNIT CONNECTOR CONDITION** • Disconnect the LF control unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.

Step	Inspection		Action
3	**INSPECT REQUEST SWITCH (LF) CIRCUIT FOR SHORT TO GROUND** • Verify that the LF control unit and front outer handle (LH) connectors are disconnected. • Inspect for continuity between front outer handle (LH) terminal D (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between LF control unit terminal C and front outer handle (LH) terminal D. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.
4	**INSPECT REQUEST SWITCH (LF)** • Inspect the request switch (LF). (See REQUEST SWITCH INSPECTION.) • Is the request switch (LF) normal?	Yes	Go to the next step.
		No	Replace the front outer handle (LH), then go to Step 6. (See FRONT OUTER HANDLE REMOVAL/INSTALLATION.)
5	**INSPECT LF CONTROL UNIT** • Inspect the LF control unit. (See LF CONTROL UNIT INSPECTION.) • Is the LF control unit normal?	Yes	Go to the next step.
		No	Replace the LF control unit, then go to the next step. (See LF CONTROL UNIT REMOVAL/INSTALLATION.)
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the advanced keyless entry system using the M-MDS. (See CLEARING DTC [ADVANCED KEYLESS ENTRY SYSTEM].) • Drive the vehicle at **5 km/h {3 mph} or more** for **2 min or more**. • Retrieve the advanced keyless entry system DTCs using the M-MDS. (See DTC INSPECTION [ADVANCED KEYLESS ENTRY SYSTEM].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [ADVANCED KEYLESS ENTRY SYSTEM].)
		No	DTC troubleshooting completed.