BASIC POWER WINDOW SYSTEM INSPECTION [POWER WINDOW SYSTEM]

id0903a0805500

Manual Open/close Function Inspection

STEP	INSPECTION		ACTION
1	• Switch the ignition ON (engine off or on). • Operate the power window using the manual open/close function on the power window main switch. • Does the power window operate properly?	Yes	Go to the next step.
		No	• Inspect the power window main switch and the wiring harness. • Repair or replace malfunctioning parts.
2	• Set the power cut switch to the UNLOCK (contact point: Close) position. • Operate the power window using the power window subswitch. • Does the power window operate properly?	Yes	Go to the next step.
		No	• Inspect the power window subswitch and the wiring harness. • Repair or replace malfunctioning parts.
3	• Set the power cut switch to the LOCK (contact point: Open) position. • Operate all power windows other than the driver-side. • Does the power window operate properly?	Yes	• Inspect the power cut switch and the wiring harness. • Replace the power window main switch.
		No	• Manual open/close function is normal. • Perform the auto open/close function inspection.

Auto Open/close Function (Driver-side) Inspection

STEP	INSPECTION		ACTION
1	• Switch the ignition ON (engine off or on). • Operate the power window using the auto open / close function on the power window main switch. • Does the power window operate properly?	Yes	Go to the next step.
		No	**If the power window automatically opens during the closing operation:** • Go to DRIVER-SIDE DOOR GLASS REVERSE OPENS DURING AUTO-CLOSE (MANUAL-CLOSE) OPERATION (MIS REVERSE OPEN) [POWER WINDOW SYSTEM]. (See DRIVER-SIDE DOOR GLASS REVERSE OPENS DURING AUTO-CLOSE (MANUAL-CLOSE) OPERATION (MIS REVERSE OPEN) [POWER WINDOW SYSTEM].) **Others:** • Go to DRIVER-SIDE DOOR GLASS CAN BE OPERATED MANUALLY BUT CANNOT BE OPERATED AUTOMATICALLY [POWER WINDOW SYSTEM]. (See DRIVER-SIDE DOOR GLASS CAN BE OPERATED MANUALLY BUT CANNOT BE OPERATED AUTOMATICALLY [POWER WINDOW SYSTEM].)
2	• Operate the power window main switch to the close position while the power window is opening. • Does the power window operation stop?	Yes	Go to the next step.
		No	Replace the power window main switch (power window control unit is malfunctioning.)
3	• Operate the power window main switch to the open position while the power window is closing. • Does the power window operation stop?	Yes	• Auto open/close function is normal. • Perform the IG-OFF timer function inspection.
		No	Replace the power window main switch (power window control unit is malfunctioning.)


IG-OFF Timer Function Inspection

STEP	INSPECTION		ACTION
1	• Close all doors. • Switch the ignition from ON (engine off or on) to off. • Operate the power window main switch **within 40 s** after switching the ignition to off. • Does the power window operate?	Yes	Go to the next step.
		No	• Inspect the door switches and related wiring harness. • If above parts are okay, replace the power window main switch, then go to the next step. • If above parts are incorrect repair or replace malfunction part (s), then go to the next step.

STEP	INSPECTION		ACTION
2	• Open any door. • Switch the ignition from ON (engine off or on) to off. • Operate the power window main switch **within 40 s** after switching the ignition to off. • Does the power window operate?	Yes	• Inspect the door switches and related wiring harness. • If above parts are okay, replace the power window main switch, then go to the next step. • If above parts are incorrect repair or replace malfunction part (s), then go to the next step.
		No	Go to the next step.
3	• Close all doors. • Switch the ignition from ON (engine off or on) to off. • Operate the power window main switch **within 60 s** after switching the ignition to off. • Does the power window operate?	Yes	Replace the power window main switch (power window control unit is malfunctioning.)
		No	• IG-OFF timer function operation is normal. • Perform the auto reverse pinch protection function inspection.

Auto Reverse Pinch Protection Function Inspection

STEP	INSPECTION		ACTION
1	• Switch the ignition ON (engine off or on). • Fully open the driver-side power window. • Set the hammer (thickness: **10 mm {0.39 in} or more**) as shown below. Then, close the power window. • Verify that the power window opens **approx. 200 mm {2.87 in}** after contacting the hammer and the operation stops. • Does auto reverse pinch protection function operate properly?	Yes	Auto reverse pinch protection function is normal.
		No	Go to the next step.
2	• Does power window open before contacting the hammer?	Yes	Go to DRIVER-SIDE DOOR GLASS REVERSE OPENS DURING AUTO-CLOSE (MANUAL-CLOSE) OPERATION (MIS REVERSE OPEN) [POWER WINDOW SYSTEM]. (See DRIVER-SIDE DOOR GLASS REVERSE OPENS DURING AUTO-CLOSE (MANUAL-CLOSE) OPERATION (MIS REVERSE OPEN) [POWER WINDOW SYSTEM].)
		No	Initialize the power window main switch. **Note** • Before initializing the power window main switch, cut off the power supply to the power window main switch for **approx. 60 s**. Then, reconnect it again after **approx. 60 s**: — Disconnect the negative battery cable. — Disconnect the power window main switch connector. — Remove the fuse for the power window system.

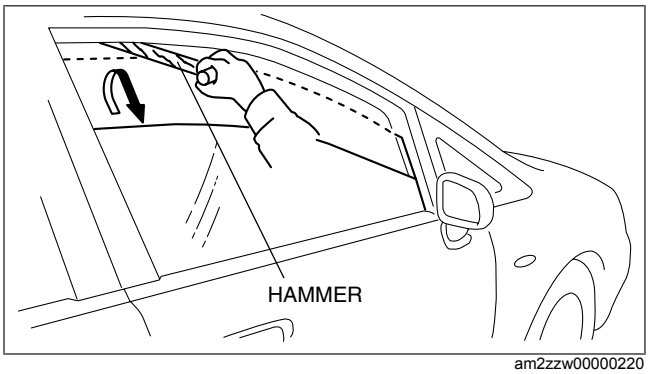

am2zzw00000220