FOREWORD [EMERGENCY STOP SIGNAL SYSTEM (ESS)]


id0903j7004300

Warning

- **Do not attempt to reproduce an emergency stop signal system malfunction. Doing so will result in a remarkable loss of vehicle stability which could cause an unexpected rear-end or other type of collision and a serious accident.**
- **To prevent an accident, verify the M-MDS data monitor using two people while the vehicle is being driven (One person drives vehicle and other operates the M-MDS).**

- If there is any vehicle malfunction complaint lodged by a customer, perform malfunction diagnosis according to the troubleshooting procedure.

Troubleshooting Procedure

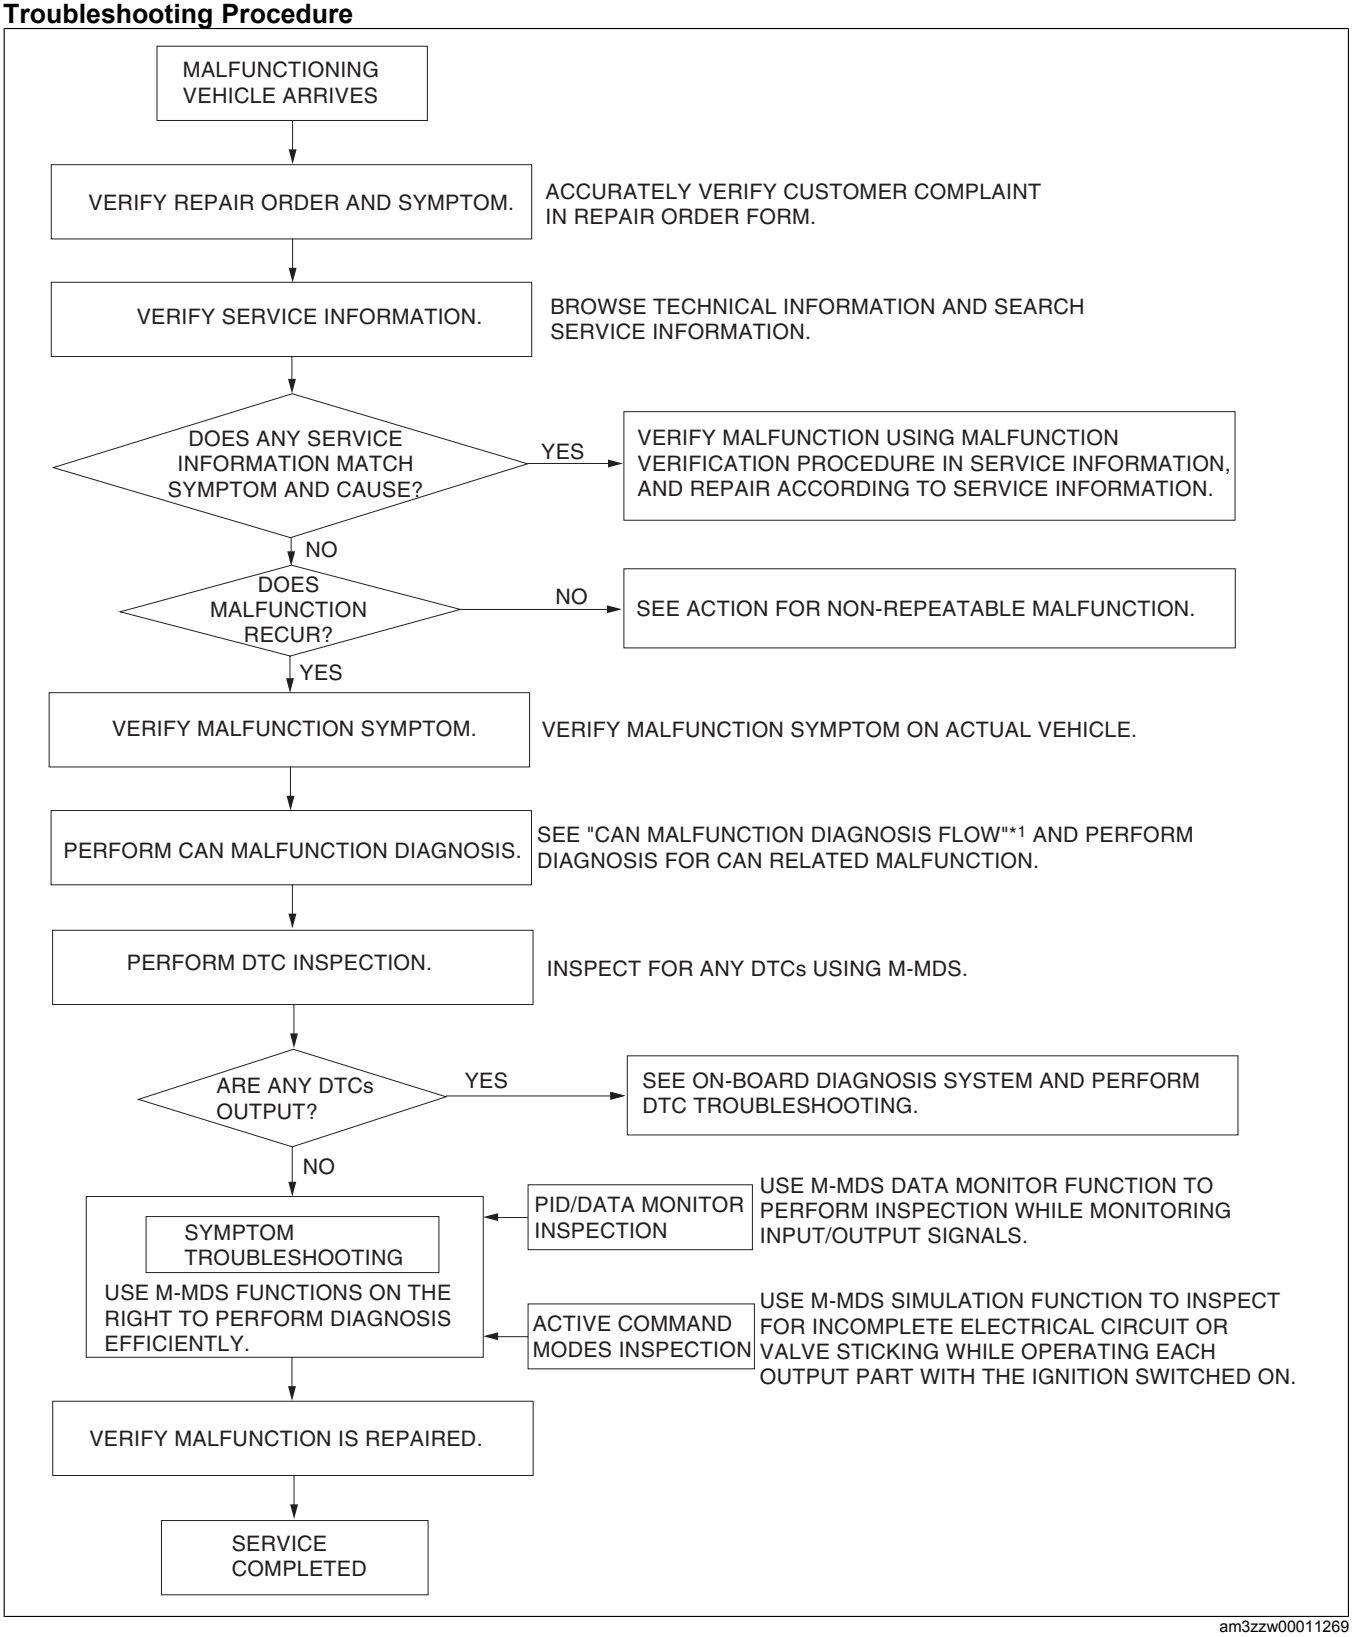


am3zzw00011269

*1 : (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-D 1.5].) (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-G 1.5 (L.H.D.)].) (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-G 1.3, SKYACTIV-G 1.5 (R.H.D.)].)

Action for Non-repeatable Malfunction


- If the malfunction does not recur, verify the malfunction cause by performing the following actions:

— Verify that a DTC has been recorded in the memory. (See DTC INSPECTION [BCM].) (See DTC INSPECTION [START STOP UNIT].) (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) (See DTC INSPECTION [DSC HU/CM].) (See DTC INSPECTION [ABS HU/CM].)
— Shake the wiring harness or connector of the electrical component which is suspected to be the cause of the malfunction, and inspect for malfunction or occurrence of any DTCs.

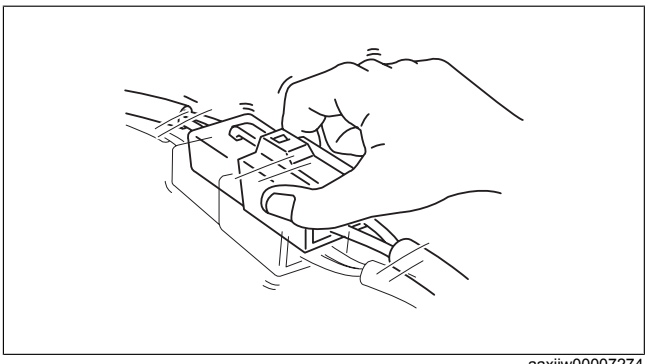

aaxjjw00007274

— Inspect the female terminals on the connector of the electric component which is suspected to be the cause of the malfunction for poor connection.

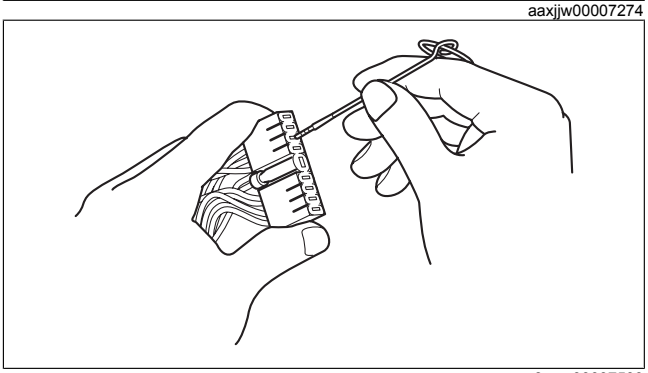

am3uuw00007509