
## PUSH BUTTON START SYSTEM DOES NOT OPERATE [SECURITY AND LOCKS]

id0903k7012600

| | |
|---|---|
| **Description** | When the push button start is pressed, the ignition cannot be switched to ACC or ON (engine off). |
| **Possible Causes** | • Fuse malfunction<br>• Customer mis-operation or misunderstanding<br>• Open circuit in wiring harness between the following terminals:<br>— Start stop unit terminal 1H and push button start terminal C<br>— Start stop unit terminal 2J and push button start terminal I<br>— Start stop unit terminal 1AF and ground<br>— Start stop unit terminal 2B and ground<br>— Start stop unit terminal 2A and ground |

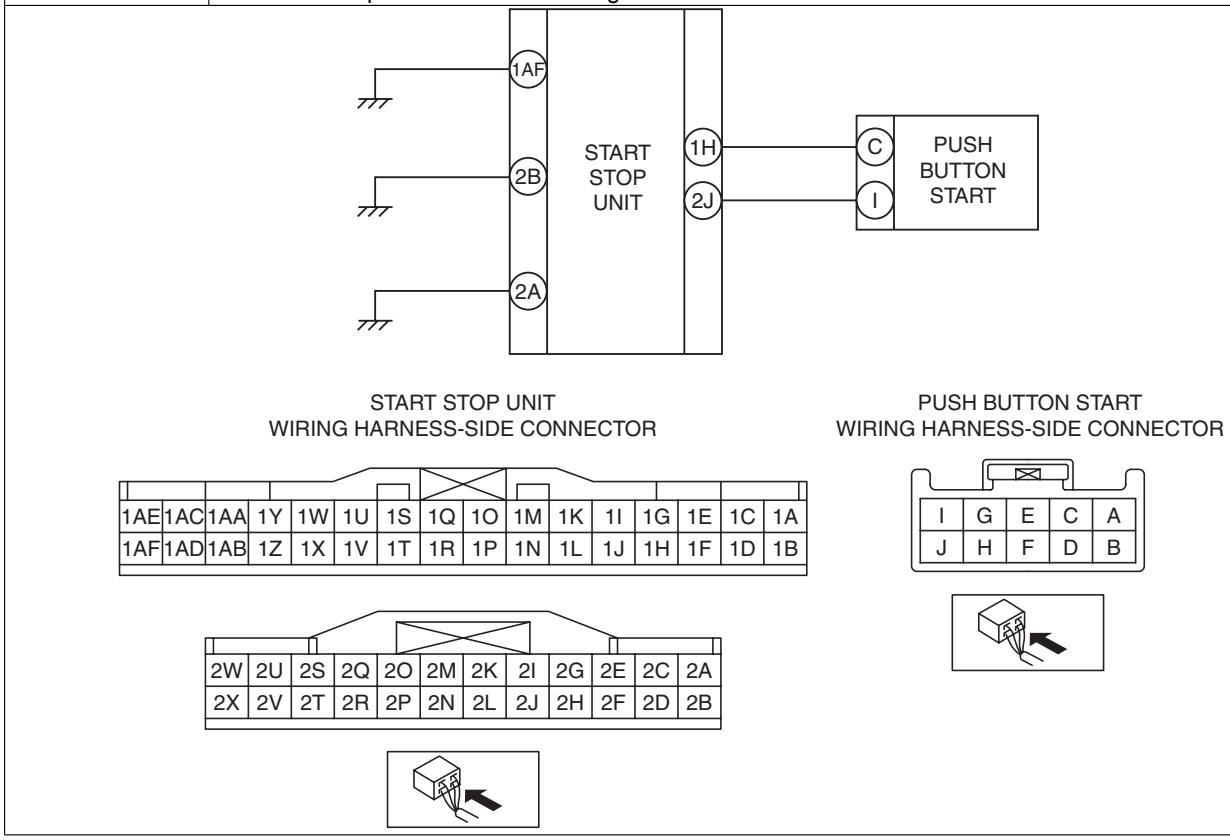


### Diagnostic Procedure

| Step | Inspection | | Action |
|---|---|---|---|
| 1 | **VERIFY REMOTE TRANSMITTER CONDITION**<br>• Verify that a metal object is not installed to the remote transmitter.<br>• Is a metal object installed? | Yes | Remove the metal object from the remote transmitter, then go to the next step. |
| | | No | Go to the next step. |
| 2 | **VERIFY MALFUNCTION CAUSE**<br>• Ask the customer malfunction condition.<br>• Did the customer operate the push button start with all the push button start system operation conditions met? | Yes | Go to the next step. |
| | | No | System is normal. (Explain the customer operation condition.) |
| 3 | **VERIFY ROOM 25 A FUSE AND INTERIOR 15 FUSE CONDITIONS**<br>• Visually inspect the ROOM 25 A fuse and INTERIOR 15 A fuse for disconnection.<br>• Is there any fuse disconnection? | Yes | Install the ROOM 25 A fuse and INTERIOR 15 A fuse, then go to Step 7. |
| | | No | Go to the next step. |
| 4 | **VERIFY STEERING LOCK CONDITION**<br>• Verify that the steering lock operates normally.<br>• Does the steering lock operate normally? | Yes | Go to the next step. |
| | | No | Refer to "steering lock function does not operate" malfunction diagnosis and perform the inspection. (See STEERING LOCK FUNCTION DOES NOT OPERATE [SECURITY AND LOCKS].) |

| Step | Inspection | | Action |
|---|---|---|---|
| 5 | **INSPECT IF MALFUNCTION CAUSE IS OPEN CIRCUIT IN WIRING HARNESS BETWEEN START STOP UNIT AND PUSH BUTTON START**<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Disconnect the Start stop unit and push button start connector.<br>• Inspect for continuity between the following terminals (vehicle wiring harness).<br>— Start stop unit terminal 1H and push button start terminal C<br>— Start stop unit terminal 2J and push button start terminal I<br>• Is there continuity? | Yes | Go to the next step. |
| | | No | • Repair or replace the wiring harness for an open circuit.<br>• After repair procedure, go to Step 7. |
| 6 | **INSPECT IF MALFUNCTION CAUSE IS OPEN CIRCUIT IN WIRING HARNESS BETWEEN START STOP UNIT AND GROUND**<br>• Verify that the start stop unit connector is disconnected.<br>• Inspect for continuity between the following terminals (vehicle wiring harness).<br>— Start stop unit terminal 1AF and ground<br>— Start stop unit terminal 2B and ground<br>— Start stop unit terminal 2A and ground<br>• Is there continuity? | Yes | Go to the next step. |
| | | No | • Repair or replace the wiring harness for an open circuit.<br>• After repair, go to the next step. |
| 7 | **VERIFY IF MALFUNCTION CAUSE WAS CORRECTED**<br>• Does the push button start button operate correctly? | Yes | Troubleshooting completed. (Explain the contents of the servicing to the customer.) |
| | | No | If the malfunction has not been resolved, repeat the inspection from Step 1. |