
NO SOUND OUTPUT IN ALL MODES [ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY]]

id0903I8060500

Description	NO SOUND OUTPUT IN ALL MODES Sound is not output from speakers even if any mode is selected
Possible Causes	• Connector poor contact or terminal damage • Tuner and amp unit (TAU) ACC power supply circuit malfunction **Without i-ELOOP** — Short circuit to ground in wiring harness between DC-DC converter terminal K and TAU terminal 2R — Open circuit in wiring harness between DC-DC converter terminal K and TAU terminal 2R — RADIO 7.5A fuse malfunction — Ignition relay (ACC_STAB) malfunction **With i-ELOOP** — Short circuit to ground in wiring harness between battery and TAU terminal 2R — Open circuit in wiring harness between battery and TAU terminal 2R — Short circuit to ground in wiring harness between DC-DC converter (i-ELOOP) terminal 4A and TAU terminal 2R — Open circuit in wiring harness between DC-DC converter (i-ELOOP) terminal 4A and TAU terminal 2R — ACC relay malfunction — RADIO 7.5A fuse malfunction • Open circuit in wiring harness between TAU terminal 2W and body ground • Speaker malfunction — Malfunction of the following speakers. • Front door speaker (LH) • Front door speaker (RH) • Tweeter (LH) • Tweeter (RH) • Rear door speaker (LH) • Rear door speaker (RH) — Open circuit in wiring harness between the following terminals: • TAU terminal 2A and front door speaker (LH) terminal C • TAU terminal 2C and front door speaker (LH) terminal B • TAU terminal 2A and tweeter (LH) terminal B • TAU terminal 2C and tweeter (LH) terminal A • TAU terminal 2D and front door speaker (RH) terminal C • TAU terminal 2F and front door speaker (RH) terminal B • TAU terminal 2D and tweeter (RH) terminal B • TAU terminal 2F and tweeter (RH) terminal A • TAU terminal 2S and rear door speaker (LH) terminal C • TAU terminal 2U and rear door speaker (LH) terminal B • TAU terminal 2V and rear door speaker (RH) terminal C • TAU terminal 2X and rear door speaker (RH) terminal B • TAU malfunction • Connectivity master unit (CMU) malfunction

System Wiring Diagram

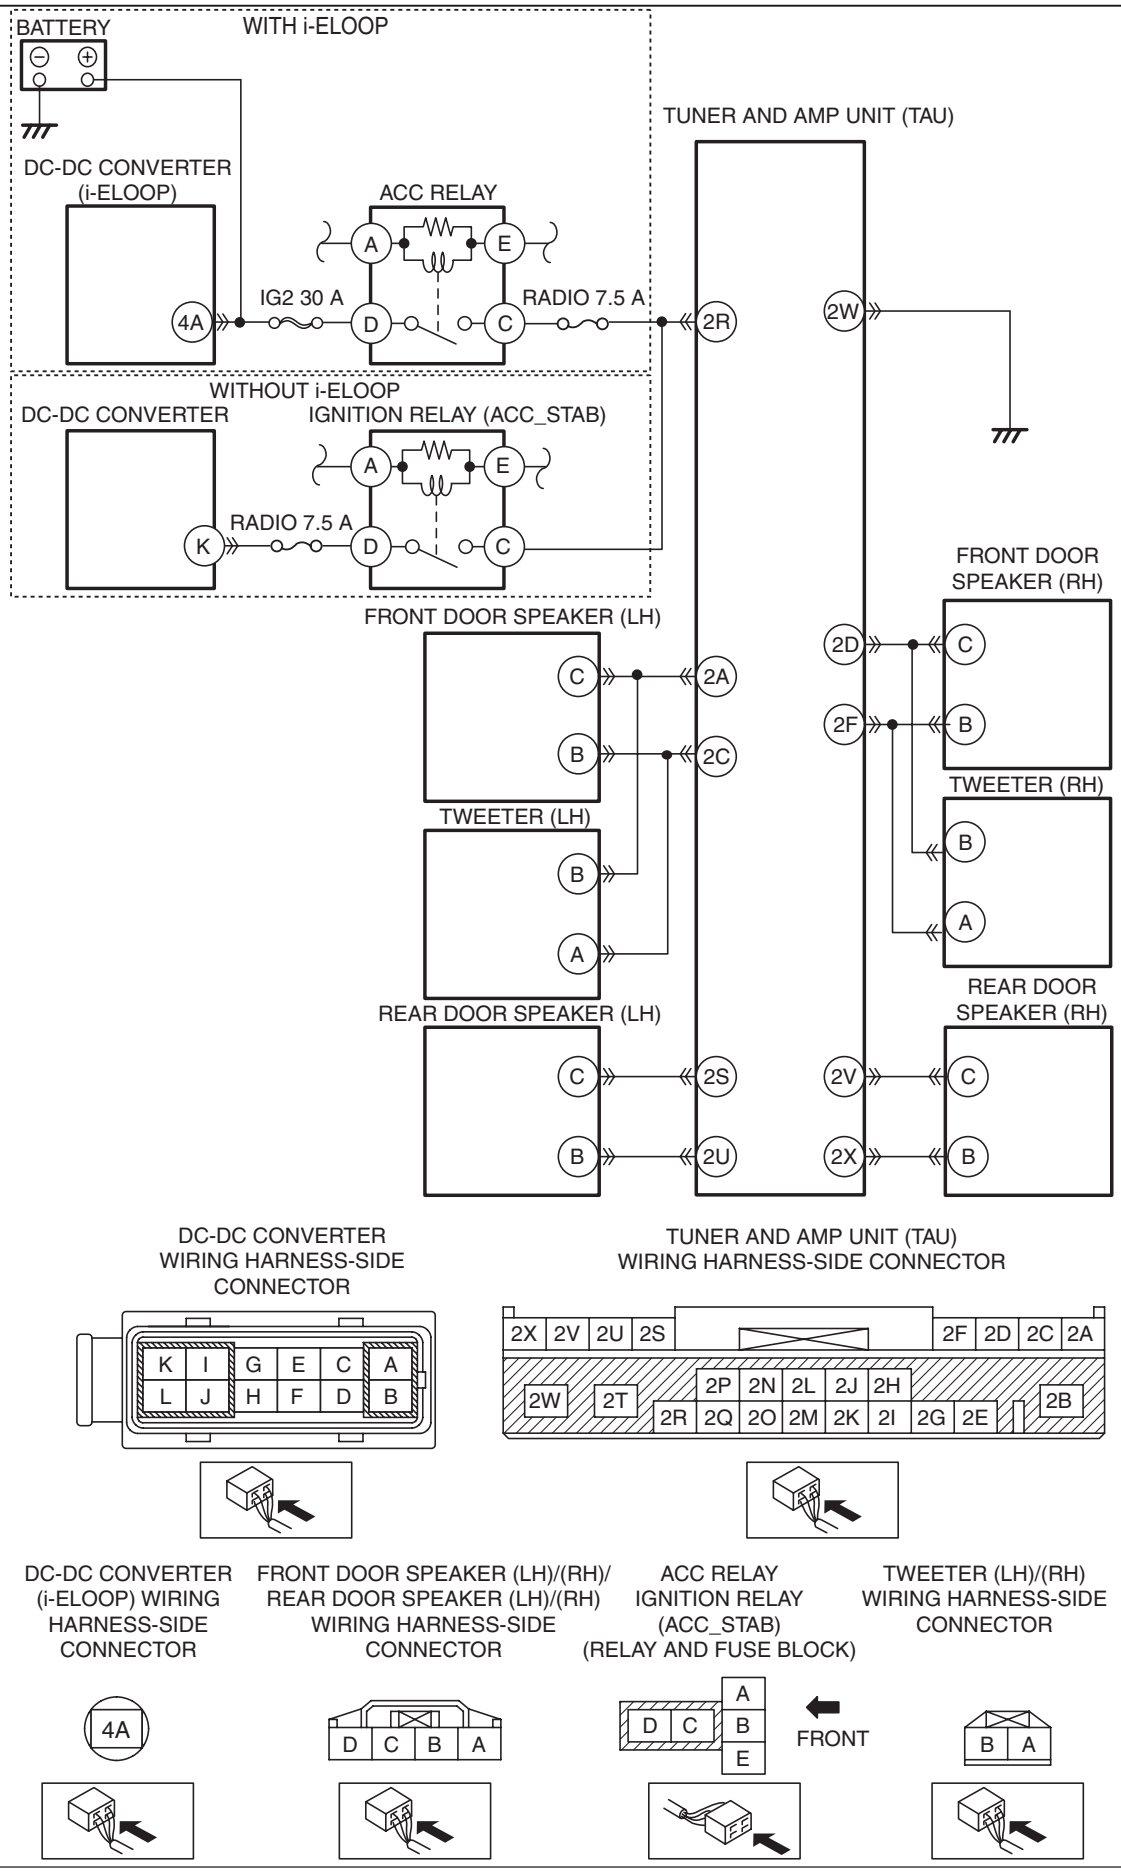

Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY MALFUNCTION SYMPTOM** • Switch the ignition to ACC or ON (engine off or on). • Launch the on-board diagnostic assist function. (See DIAGNOSTIC ASSIST FUNCTION [CONNECTIVITY MASTER UNIT].) • Select assist code “94”. • Press the [ENTER] and verify that the sound is output from each speaker. • Is sound output from each speaker in the order?	Yes	• System is normal. • Due to the possibility that sound is not output in some modes, verify the malfunction in the symptom troubleshooting chart and perform the other applicable malfunction diagnosis. (See SYMPTOM TROUBLESHOOTING [ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY]].)
		No	• No sound is produced from all speakers — Go to the next step. • No sound is produced from some speakers — Go to Step 8.
2	**INSPECT TAU CONNECTOR** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the TAU connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 10.
3	**INSPECT CMU CONNECTOR** • Disconnect the CMU connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	**Without i-ELOOP** • Go to the next step. **With i-ELOOP** • Go to Step 5.
		No	Repair or replace the connector, then go to Step 10.
4	**INSPECT TAU ACC POWER SUPPLY VOLTAGE** • Verify that the TAU connector is disconnected. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition to ACC or ON (engine off or on). • Measure the voltage at TAU terminal 2R (vehicle wiring harness side). • Is the voltage **B+**?	Yes	Go to Step 6.
		No	Inspect the RADIO 7.5A fuse. • If the fuse is blown: — Refer to the wiring diagram and verify if there is a common connector between RADIO 7.5A fuse and the TAU terminal 2R. **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. • Replace the fuse. • If the fuse is damaged: — Replace the fuse. • If the fuse is normal: — Refer to the wiring diagram and verify if there is a common connector between DC-DC converter terminal K and TAU terminal 2R. **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for an open circuit to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 10.

Step	Inspection		Action
5	**INSPECT TAU ACC POWER SUPPLY VOLTAGE** • Verify that the TAU connector is disconnected. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition to ACC or ON (engine off or on). • Measure the voltage at TAU terminal 2R (vehicle wiring harness side). • Is the voltage **B+**?	Yes	Go to Step 6.
		No	Inspect the RADIO 7.5A fuse and IG2 30A fuse. • If the fuse is blown: — Refer to the wiring diagram and verify if there is a common connector between IG2 30A fuse and the TAU terminal 2R. **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. • Replace the fuse. • If the fuse is damaged: — Replace the fuse. • If the fuse is normal: — Refer to the wiring diagram and verify if there is a common connector between the following terminals. • DC-DC converter (i-ELOOP) terminal 4A and TAU terminal 2R • Battery and TAU terminal 2R **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for an open circuit to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 10.
6	**INSPECT WIRING HARNESS BETWEEN TAU AND BODY GROUND FOR OPEN CIRCUIT** • Verify that the TAU connector is disconnected. • Inspect for continuity between the following terminals (vehicle wiring harness side) and body ground. — TAU terminal 2W • Is there continuity?	Yes	Go to the next step.
		No	• Refer to the wiring diagram and verify if there is a common connector between the following terminals and body ground. — TAU terminal 2W **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for an open circuit to determine the malfunctioning location. • Repair or replace the malfunctioning location. **Repair or replace the malfunctioning location.** • Repair or replace the wiring harness which has an open circuit. • Go to Step 10.

Step	Inspection		Action
7	**DETERMINE IF MALFUNCTION CAUSE IS TAU** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Replace the TAU. (See TUNER AND AMP UNIT (TAU) REMOVAL/INSTALLATION.) • Connect all the connectors. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition to ACC or ON (engine off or on). • Launch the on-board diagnostic assist function. (See DIAGNOSTIC ASSIST FUNCTION [CONNECTIVITY MASTER UNIT].) • Select assist code “94”. • Press the [ENTER] and verify that the sound is output from each speaker. • Is sound output from each speaker in the order?	Yes	Troubleshooting completed (explain the contents of the servicing to the customer).
		No	Replace the CMU, then go to Step 10. (See CONNECTIVITY MASTER UNIT (CMU) REMOVAL/INSTALLATION.)
8	**INSPECT SPEAKERS** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Inspect the malfunctioning speaker. (See FRONT DOOR SPEAKER INSPECTION.) (See REAR DOOR SPEAKER INSPECTION.) (See TWEETER INSPECTION.) • Is the speaker resistance normal?	Yes	Go to the next step.
		No	Replace the malfunctioning speaker, then go to Step 10. (See FRONT DOOR SPEAKER REMOVAL/INSTALLATION.) (See REAR DOOR SPEAKER REMOVAL/INSTALLATION.) (See TWEETER REMOVAL/INSTALLATION.)
9	**INSPECT SPEAKER CIRCUIT FOR OPEN CIRCUIT** • Disconnect the connector of the malfunctioning speaker and the TAU connector. • Verify the continuity of the wiring harness between the following terminals (vehicle wiring harness side) of the speakers which are malfunctioning. — TAU terminal 2A and front door speaker (LH) terminal C — TAU terminal 2C and front door speaker (LH) terminal B — TAU terminal 2A and tweeter (LH) terminal B — TAU terminal 2C and tweeter (LH) terminal A — TAU terminal 2D and front door speaker (RH) terminal C — TAU terminal 2F and front door speaker (RH) terminal B — TAU terminal 2D and tweeter (RH) terminal B — TAU terminal 2F and tweeter (RH) terminal A — TAU terminal 2S and rear door speaker (LH) terminal C — TAU terminal 2U and rear door speaker (LH) terminal B — TAU terminal 2V and rear door speaker (RH) terminal C — TAU terminal 2X and rear door speaker (RH) terminal B • Is there continuity?	Yes	Go to the next step.
		No	• Refer to the wiring diagram and verify if there is a common connector between the following terminals. — TAU terminal 2A and front door speaker (LH) terminal C — TAU terminal 2C and front door speaker (LH) terminal B — TAU terminal 2A and tweeter (LH) terminal B — TAU terminal 2C and tweeter (LH) terminal A — TAU terminal 2D and front door speaker (RH) terminal C — TAU terminal 2F and front door speaker (RH) terminal B — TAU terminal 2D and tweeter (RH) terminal B — TAU terminal 2F and tweeter (RH) terminal A — TAU terminal 2S and rear door speaker (LH) terminal C — TAU terminal 2U and rear door speaker (LH) terminal B — TAU terminal 2V and rear door speaker (RH) terminal C — TAU terminal 2X and rear door speaker (RH) terminal B **If there is a common connector:** — Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for an open circuit to determine the malfunctioning location. — Repair or replace the malfunctioning location. **If there is no common connector:** — Repair or replace the wiring harness which has an open circuit. • Go to the next step.

Step	Inspection		Action
10	**VERIFY IF MALFUNCTION CAUSE IS CORRECTED** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect all the connectors. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition to ACC or ON (engine off or on). • Launch the on-board diagnostic assist function. (See DIAGNOSTIC ASSIST FUNCTION [CONNECTIVITY MASTER UNIT].) • Select assist code “94”. • Press the [ENTER] and verify that the sound is output from each speaker. • Is sound output from each speaker in the order?	Yes	Troubleshooting completed (explain the contents of the servicing to the customer).
		No	Verify the malfunction symptom in the symptom troubleshooting chart and perform the other applicable malfunction diagnosis. (See SYMPTOM TROUBLESHOOTING [ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY]].)