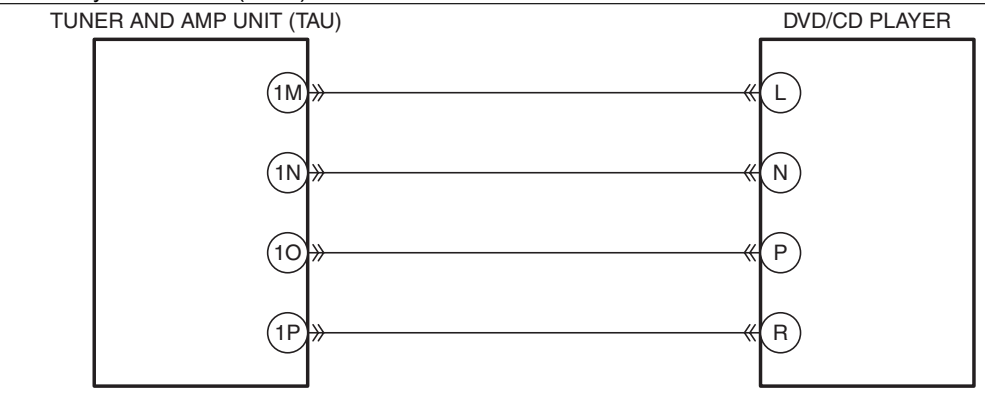
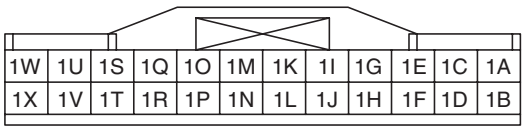

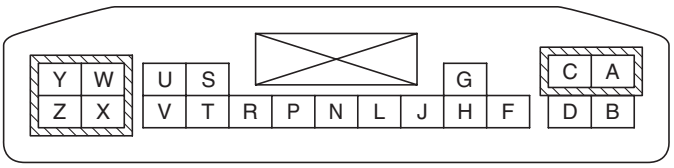

NO DVD SOUND OUTPUT [ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY]]

id0903I8061200

Description	**NO DVD SOUND OUTPUT** • Radio, CD, AUX audio, Bluetooth® audio, Internet radio, USB audio, and guidance audio is output, but not DVD audio • DVD images are output, but no audio
Possible Causes	• DVD malfunction • Connector poor contact or terminal damage • Open circuit in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 1M and DVD/CD player terminal L — Tuner and amp unit (TAU) terminal 1N and DVD/CD player terminal N — Tuner and amp unit (TAU) terminal 1O and DVD/CD player terminal P — Tuner and amp unit (TAU) terminal 1P and DVD/CD player terminal R • Short to ground in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 1M and DVD/CD player terminal L — Tuner and amp unit (TAU) terminal 1N and DVD/CD player terminal N — Tuner and amp unit (TAU) terminal 1O and DVD/CD player terminal P — Tuner and amp unit (TAU) terminal 1P and DVD/CD player terminal R • Short to power supply in wiring harness between the following terminals: — Tuner and amp unit (TAU) terminal 1M and DVD/CD player terminal L — Tuner and amp unit (TAU) terminal 1N and DVD/CD player terminal N — Tuner and amp unit (TAU) terminal 1O and DVD/CD player terminal P — Tuner and amp unit (TAU) terminal 1P and DVD/CD player terminal R • DVD/CD player malfunction • Tuner and amp unit (TAU) malfunction • Connectivity master unit (CMU) malfunction
System Wiring Diagram	 TUNER AND AMP UNIT (TAU) WIRING HARNESS-SIDE CONNECTOR   DVD/CD PLAYER WIRING HARNESS-SIDE CONNECTOR  

Diagnostic Procedure

Step	Inspection		Action
1	**DETERMINE IF MALFUNCTION CAUSE IS DVD** • After obtaining the customer's consent, insert a DVD with the correct region code and image file. • Is DVD sound produces?	Yes	System is normal. Explain to the customer that the DVD cannot be played for any one of the following reasons. • Dirt or scratches on DVD • Incorrect region code • Image file not incompatible
		No	Go to the next step.
2	**INSPECT DVD/CD PLAYER CONNECTOR CONDITION** • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION) • Disconnect the DVD/CD player connector. • Inspect the connector engagement and connection condition, and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 9.
3	**INSPECT CONNECTIVITY MASTER UNIT (CMU) CONNECTOR CONDITION** • Disconnect the connectivity master unit (CMU) connector. • Inspect the connector engagement and connection condition, and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 9.
4	**VERIFY IF MALFUNCTION CAUSE IS OPEN CIRCUIT IN WIRING HARNESS BETWEEN TUNER AMP UNIT (TAU) AND DVD/CD PLAYER** • Verify that the DVD/CD player and the amp unit (TAU) connector are disconnected. • Inspect the wiring harness for continuity between the following terminals (vehicle wiring harness side). — Tuner and amp unit (TAU) terminal 1M and DVD/CD player terminal L — Tuner and amp unit (TAU) terminal 1N and DVD/CD player terminal N — Tuner and amp unit (TAU) terminal 1O and DVD/CD player terminal P — Tuner and amp unit (TAU) terminal 1P and DVD/CD player terminal R • Is there continuity?	Yes	Go to the next step.
		No	• Refer to the wiring diagram and verify if there is a common connector between the following terminals. — Tuner and amp unit (TAU) terminal 1M and DVD/CD player terminal L — Tuner and amp unit (TAU) terminal 1N and DVD/CD player terminal N — Tuner and amp unit (TAU) terminal 1O and DVD/CD player terminal P — Tuner and amp unit (TAU) terminal 1P and DVD/CD player terminal R **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for an open circuit to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. • Go to Step 9.

Step	Inspection		Action
5	**VERIFY IF MALFUNCTION CAUSE IS SHORT TO GROUND IN WIRING HARNESS BETWEEN TUNER AMP UNIT (TAU) AND DVD/CD PLAYER** • Verify that the DVD/CD player and the amp unit (TAU) connector are disconnected. • Inspect for continuity between the following terminals (vehicle wiring harness side) and body ground. — DVD/CD player terminal L — DVD/CD player terminal N — DVD/CD player terminal P — DVD/CD player terminal R • Is there continuity?	Yes	• Refer to the wiring diagram and verify if there is a common connector between the following terminals. — Tuner and amp unit (TAU) terminal 1M and DVD/CD player terminal L — Tuner and amp unit (TAU) terminal 1N and DVD/CD player terminal N — Tuner and amp unit (TAU) terminal 1O and DVD/CD player terminal P — Tuner and amp unit (TAU) terminal 1P and DVD/CD player terminal R **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. • Go to Step 9.
		No	Go to the next step.
6	**VERIFY IF MALFUNCTION CAUSE IS SHORT TO POWER SUPPLY IN WIRING HARNESS BETWEEN TUNER AMP UNIT (TAU) AND DVD/CD PLAYER** • Verify that the DVD/CD player and the amp unit (TAU) connector are disconnected. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION) • Switch the ignition to ACC or ON (engine off or on). • Measure the voltage at the following terminals (vehicle wiring harness side). — DVD/CD player terminal L — DVD/CD player terminal N — DVD/CD player terminal P — DVD/CD player terminal R • Is the voltage **B+**?	Yes	• Refer to the wiring diagram and verify if there is a common connector between the following terminals. — Tuner and amp unit (TAU) terminal 1M and DVD/CD player terminal L — Tuner and amp unit (TAU) terminal 1N and DVD/CD player terminal N — Tuner and amp unit (TAU) terminal 1O and DVD/CD player terminal P — Tuner and amp unit (TAU) terminal 1P and DVD/CD player terminal R **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. • Go to Step 9.
		No	Go to the next step.
7	**VERIFY IS MALFUNCTION CAUSE IS DVD/CD PLAYER** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION) • Replace the DVD/CD player. (See DVD/CD PLAYER REMOVAL) (See DVD/CD PLAYER INSTALLATION) • Connect all the connectors. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION) • Switch the ignition to ACC or ON (engine off or on). • Insert the DVD when the malfunction occurred. • Is DVD sound produced?	Yes	Troubleshooting completed. (Explain the contents of the servicing to the customer.)
		No	Go to the next step.

Step	Inspection		Action
8	**VERIFY IF MALFUNCTION CAUSE IS TUNER AND AMP UNIT (TAU)** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION) • Replace the tuner and amp unit (TAU). (See TUNER AND AMP UNIT (TAU) REMOVAL/INSTALLATION) • Connect all the connectors. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION) • Switch the ignition to ACC or ON (engine off or on). • Insert the DVD when the malfunction occurred. • Is DVD sound produced?	Yes	Troubleshooting completed. (Explain the contents of the servicing to the customer.)
		No	Replace the connectivity master unit (CMU), then go to the next step. (See CONNECTIVITY MASTER UNIT (CMU) REMOVAL/INSTALLATION)
9	**VERIFY IF MALFUNCTION CAUSE IS CORRECTED** • Switch the ignition to ACC or ON (engine off or on). • Insert the DVD when the malfunction occurred. • Is DVD sound produced?	Yes	Troubleshooting completed. (Explain the contents of the servicing to the customer.)
		No	Verify the malfunction symptom in the symptom troubleshooting chart and perform the other applicable malfunction diagnosis. (See SYMPTOM TROUBLESHOOTING [ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY]])