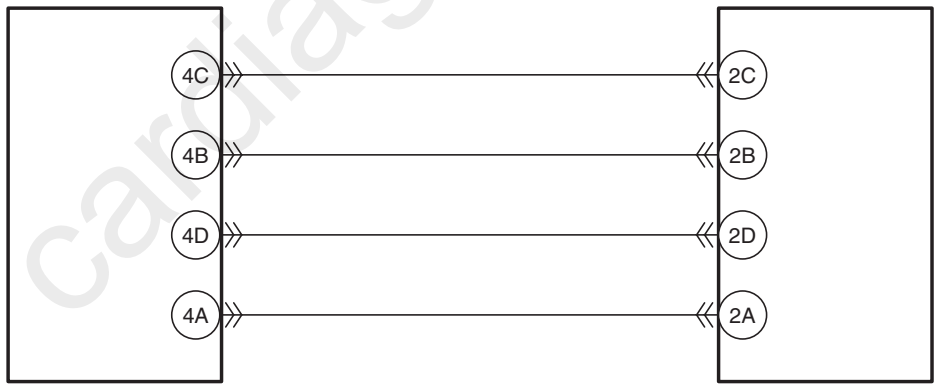


REAL TIME TRAFFIC FUNCTION INFORMATION NOT DISPLAYED [ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY]]

id0903I8061800

Description	**REAL TIME TRAFFIC FUNCTION INFORMATION NOT DISPLAYED** Information such as gas prices, weather, and nearest restaurant is not output in navigation mode
Possible Causes	• SD card malfunction • Electronic jamming from outside, or inferior condition of broadcasting station radio wave • Poor reception of FM radio — Glass antenna (4SD) — Center roof antenna (5HB) — Antenna feeder malfunction — Tuner and amp unit (TAU) malfunction • Malfunction due to effects of surrounding environment — Mobile device such as Smartphone is placed where radio waves cannot be received • Mobile device such as customer's Smartphone malfunction — Wi-Fi™ connection setting is off — Mobile device internal malfunction such as Smartphone • Connector poor contact or terminal damage • Auxiliary jack/USB port/SD card slot hub malfunction — Open circuit in wiring harness between the following terminals: • CMU terminal 4A and auxiliary jack/USB port/SD card slot hub terminal 2A — Short to ground in wiring harness between the following terminals: • CMU terminal 4A and auxiliary jack/USB port/SD card slot hub terminal 2A • CMU terminal 4B and auxiliary jack/USB port/SD card slot hub terminal 2B • CMU terminal 4D and auxiliary jack/USB port/SD card slot hub terminal 2D — Short to power supply in wiring harness between the following terminals: • CMU terminal 4A and auxiliary jack/USB port/SD card slot hub terminal 2A • CMU terminal 4B and auxiliary jack/USB port/SD card slot hub terminal 2B • CMU terminal 4D and auxiliary jack/USB port/SD card slot hub terminal 2D — Auxiliary jack/USB port/SD card slot hub malfunction • Connectivity master unit (CMU) malfunction
System Wiring Diagram	CONNECTIVITY MASTER UNIT (CMU) — AUXILIARY JACK/USB PORT/SD CARD SLOT HUB  CONNECTIVITY MASTER UNIT (CMU) WIRING HARNESS-SIDE CONNECTOR   AUXILIARY JACK/USB PORT/SD CARD SLOT HUB WIRING HARNESS-SIDE CONNECTOR  

cardiagn.com

Diagnostic Procedure

Step	Inspection		Action
1	**VISUALLY INSPECT SD CARD** • Visually inspect the SD card for looseness or damage. • Is the SD card normal?	Yes	Go to the next step.
		No	System is normal. (explain to the customer that there is a malfunction in SD card)
2	**VERIFY IF MALFUNCTION CAUSE IS EXTRINSIC NOISE** • Ask the customer malfunction condition. • Does the malfunction occur at the specified place where extrinsic noise is received such as a TV tower, electric power station, or a broadcast station?	Yes	System is normal. (Explain the customer that operation cannot be performed caused by extrinsic noise.)
		No	Go to the next step.
3	**VERIFY REAL TIME TRAFFIC FUNCTION SPECIFICATION** • Is the real time traffic function specification the FM Radio Data System (RDS)- TMC (Traffic Message Channel)?	Yes	Go to the next step.
		No	Go to Step 7.
4	**VERIFY FM RADIO RECEPTION CONDITION** • Is the FM radio reception condition normal?	Yes	Go to Step 6.
		No	Go to the next step.
5	**INSPECT FM RADIO-RELATED PARTS** • Inspect the following parts. — Glass antenna (4SD) — Center roof antenna (5HB) — Antenna feeder (See GLASS ANTENNA INSPECTION.) (See CENTER ROOF ANTENNA INSPECTION.) (See ANTENNA FEEDER NO.1 INSPECTION.) (See ANTENNA FEEDER NO.2 INSPECTION.) (See ANTENNA FEEDER NO.3 INSPECTION.) • Are all items normal?	Yes	Replace the tuner and amp unit (TAU), then go to the next step. (See TUNER AND AMP UNIT (TAU) REMOVAL/ INSTALLATION.)
		No	Repair or replace the malfunctioning part, then go to the next step.
6	**VERIFY IF MALFUNCTION CAUSE IS CORRECTED** • Switch the ignition to ACC or ON (engine off or on). • Is traffic information displayed?	Yes	Troubleshooting completed. Explain to the customer that the following may have occurred. • Information center is performing maintenance • Radio Data System (RDS)- TMC (Traffic Message Channel) is not a global service. It may not be available in customer's country or region.
		No	Verify the malfunction symptom in the symptom troubleshooting chart and perform the other applicable malfunction diagnosis. (See SYMPTOM TROUBLESHOOTING [ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY]].)
7	**VERIFY IF MALFUNCTION CAUSE IS MOBILE DEVICE SETTING SUCH AS SMARTPHONE** • After obtaining the customer's consent, verify that the Wi-Fi™ connection setting for the mobile device such as a Smartphone is turned on. • Is the Wi-Fi™ connection setting turned on?	Yes	Go to the next step.
		No	Turn on the Wi-Fi™ connection setting for the mobile device, then go to Step 17.
8	**VERIFY IF MALFUNCTION CAUSE IS CMU SETTING** • Verify that the CMU Wi-Fi™ connection setting is turned on. • Is the CMU Wi-Fi™ connection setting turned on?	Yes	Go to the next step.
		No	Turn on the CMU Wi-Fi™ connection setting, then go to Step 17.

cardiagn.com

Step	Inspection		Action
9	**VERIFY IF MALFUNCTION CAUSE IS OBSTRUCTION SUCH AS BUILDING** • Set the mobile device such as a Smartphone and the CMU Wi-Fi™ connection setting to on when the malfunction occurred. • Select the navigation mode by operating the center display or the commander switch. • Move the vehicle to an area where the mobile device such as a Smartphone can receive radio waves. • Is information such as gas prices, weather, and the nearest restaurant displayed?	Yes	System is normal (explain to the customer that Wi-Fi™ communication could not be received normally due to driving in an area with tunnels or obstructions).
		No	Go to the next step.
10	**DETERMINE IF MALFUNCTION CAUSE IS MOBILE DEVICE SUCH AS SMARTPHONE** • After obtaining the customer's consent, set the CMU Wi-Fi™ connection setting using a mobile device such as a Smartphone not used when the malfunction occurred. • Select the navigation mode by operating the center display or the commander switch. • Move the vehicle to an area where the mobile device such as a Smartphone can receive radio waves. • Is information such as gas prices, weather, and the nearest restaurant displayed?	Yes	System is normal (explain to customer that the cause is mobile device malfunction such as Smartphone).
		No	Go to the next step.
11	**INSPECT AUXILIARY JACK/USB PORT/SD CARD SLOT HUB CONNECTOR** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the auxiliary jack/USB port/SD card slot hub connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 17.
12	**INSPECT CMU CONNECTOR** • Disconnect the CMU connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 17.
13	**VERIFY IF MALFUNCTION CAUSE IS OPEN CIRCUIT IN WIRING HARNESS BETWEEN CMU AND AUXILIARY JACK/USB PORT/SD CARD SLOT HUB** • Verify that the auxiliary jack/USB port/SD card slot hub and the CMU connector are disconnected. • Inspect the wiring harness for continuity between the following terminals (vehicle wiring harness side). — CMU terminal 4A and auxiliary jack/USB port/SD card slot hub terminal 2A • Is there continuity?	Yes	Go to the next step.
		No	• Refer to the wiring diagram and verify if there is a common connector between the following terminals. — CMU terminal 4A and auxiliary jack/USB port/SD card slot hub terminal 2A **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for an open circuit to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. • Go to Step 17.

carmanualsdiagn.com

Step	Inspection		Action
14	**VERIFY IF MALFUNCTION CAUSE IS SHORT CIRCUIT TO GROUND IN WIRING HARNESS BETWEEN CMU AND AUXILIARY JACK/USB PORT/SD CARD SLOT HUB** • Verify that the auxiliary jack/USB port/SD card slot hub and the CMU connector are disconnected. • Inspect for continuity between the following wiring harness terminals (vehicle wiring harness side) and body ground. — Auxiliary jack/USB port/SD card slot hub terminal 2A — Auxiliary jack/USB port/SD card slot hub terminal 2B — Auxiliary jack/USB port/SD card slot hub terminal 2D • Is there continuity?	Yes	• Refer to the wiring diagram and verify if there is a common connector between the following terminals. — CMU terminal 4A and auxiliary jack/USB port/SD card slot hub terminal 2A — CMU terminal 4B and auxiliary jack/USB port/SD card slot hub terminal 2B — CMU terminal 4D and auxiliary jack/USB port/SD card slot hub terminal 2D **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to ground to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to ground. • Go to Step 17.
		No	Go to the next step.
15	**VERIFY IF MALFUNCTION CAUSE IS SHORT CIRCUIT TO POWER SUPPLY IN WIRING HARNESS BETWEEN CMU AND AUXILIARY JACK/USB PORT/SD CARD SLOT HUB** • Verify that the auxiliary jack/USB port/SD card slot hub and the CMU connector are disconnected. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition to ACC or ON (engine off or on). • Measure the voltage at the following terminals (vehicle wiring harness side). — Auxiliary jack/USB port/SD card slot hub terminal 2A — Auxiliary jack/USB port/SD card slot hub terminal 2B — Auxiliary jack/USB port/SD card slot hub terminal 2D • Is the voltage **B+**?	Yes	• Refer to the wiring diagram and verify if there is a common connector between the following terminals. — CMU terminal 4A and auxiliary jack/USB port/SD card slot hub terminal 2A — CMU terminal 4B and auxiliary jack/USB port/SD card slot hub terminal 2B — CMU terminal 4D and auxiliary jack/USB port/SD card slot hub terminal 2D **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the malfunctioning location. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. • Go to Step 17.
		No	Go to the next step.
16	**DETERMINE IF MALFUNCTION CAUSE IS AUXILIARY JACK/USB PORT/SD CARD SLOT HUB** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Replace the auxiliary jack/USB port/SD card slot hub. (See AUXILIARY JACK/USB PORT/SD CARD SLOT HUB REMOVAL/INSTALLATION.) • Connect all the connectors. • Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition to ACC or ON (engine off or on). • Set the mobile device such as a Smartphone and the CMU Wi-Fi™ connection setting to on when the malfunction occurred. • Select the navigation mode by operating the center display or the commander switch. • Move the vehicle to an area where the mobile device such as a Smartphone can receive radio waves. • Is information such as gas price, weather, nearest restaurant displayed?	Yes	Troubleshooting completed (explain the contents of the servicing to the customer).
		No	Replace the CMU, then go to the next step. (See CONNECTIVITY MASTER UNIT (CMU) REMOVAL/INSTALLATION.)

cardiagn.com

Step	Inspection		Action
17	**VERIFY IF MALFUNCTION CAUSE IS CORRECTED** • Switch the ignition to ACC or ON (engine off or on). • Set the mobile device such as a Smartphone and the CMU Wi-Fi™ connection setting to on when the malfunction occurred. • Select the navigation mode by operating the center display or the commander switch. • Move the vehicle to an area where the mobile device such as a Smartphone can receive radio waves. • Is information such as gas price, weather, nearest restaurant displayed?	Yes	Explain to the customer that the following may have occurred. • Service period of real time traffic function ended • Information center is performing maintenance
		No	Verify the malfunction symptom in the symptom troubleshooting chart and perform the other applicable malfunction diagnosis. (See SYMPTOM TROUBLESHOOTING [ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY]].)

cardiagn.com