
TEMPERATURE FOR SEAT WARMER SYSTEM CANNOT BE ADJUSTED [SEAT WARMER SYSTEM]

id0903m2971000

Description	• The temperature of the seat warmer cannot be adjusted (temperature level cannot be switched). • The seat warmer temperature continues to rise.
Possible Causes	• Seat warmer switch malfunction • Thermistor (built into seat warmer unit) malfunction • Seat warmer control unit malfunction • Short to power supply in wiring harness between the following terminals: — Seat warmer control unit terminal J and indicator unit terminal D

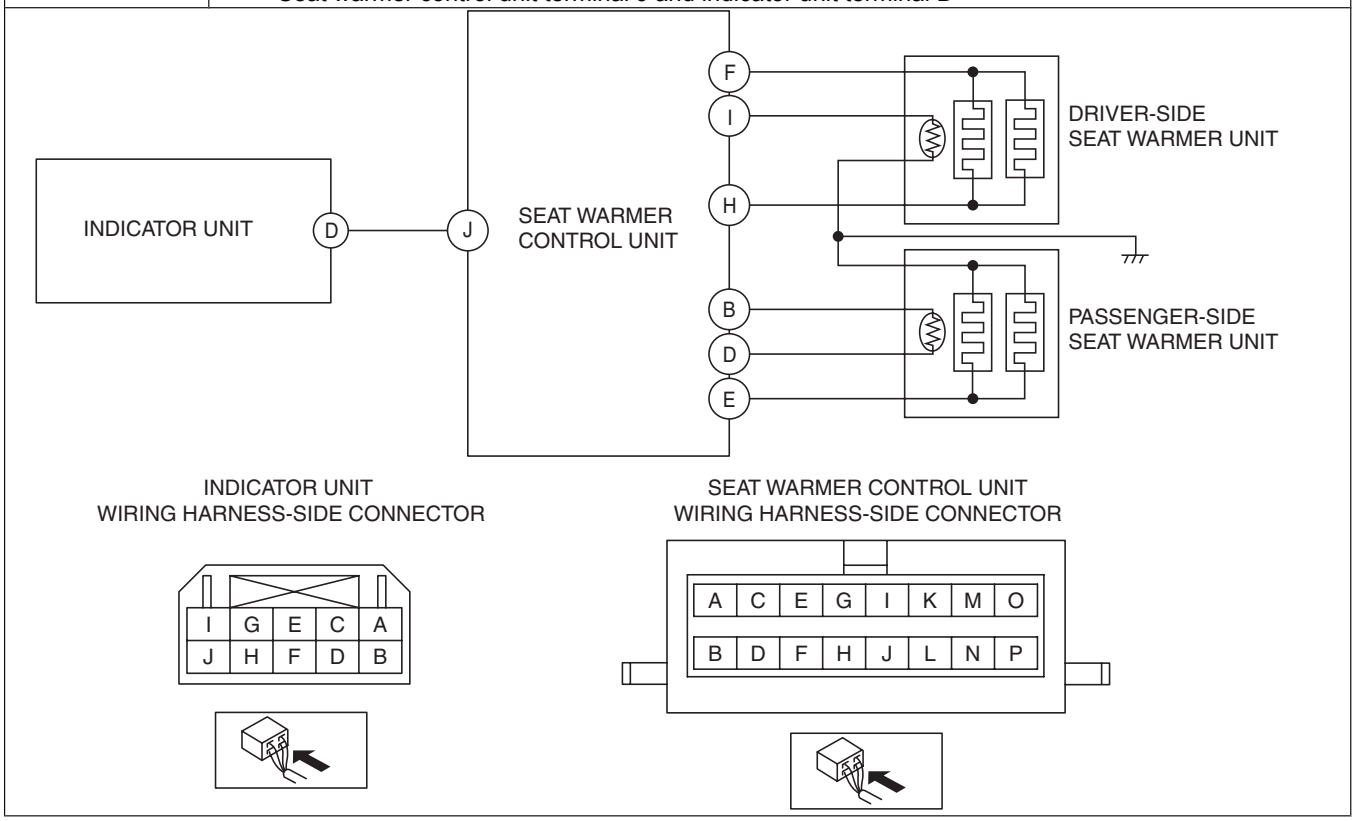

Diagnostic Procedure

Step	Inspection		Action
1	**DETERMINE IF MALFUNCTION CAUSE IS SEAT WARMER SWITCH** • Inspect the indicator unit. (See INDICATOR UNIT INSPECTION.) • Is the indicator unit normal?	Yes	Go to the next step.
		No	Replace the indicator unit. (See INDICATOR UNIT REMOVAL/INSTALLATION.)
2	**VERIFY IF MALFUNCTION CAUSE IS SEAT WARMER UNIT** • Switch the ignition OFF (LOCK). • Inspect the thermistor built into the seat warmer unit. (See SEAT WARMER UNIT INSPECTION.) • Is the seat warmer unit normal?	Yes	Go to the next step.
		No	Replace the seat warmer unit (front seat cushion pad or front seat back pad) which has a malfunction, then go to Step 4. (See FRONT SEAT BACK TRIM REMOVAL/INSTALLATION.) (See FRONT SEAT CUSHION TRIM REMOVAL/INSTALLATION.)

Step	Inspection		Action
3	**DETERMINE IF MALFUNCTION CAUSE IS SEAT WARMER CONTROL UNIT** • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the seat warmer control unit connector. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at seat warmer control unit terminal J (vehicle wiring harness side). • Is the voltage **1.0 V or more**?	Yes	• Refer to the wiring diagram and verify if there is a common connector between the following terminals. — Seat warmer control unit terminal J and indicator unit terminal D **If there is a common connector:** • Inspect the common connector and terminals for corrosion, damage, or disconnection and the common wiring harnesses for short to power supply to determine the malfunctioning location. • Repair or replace the wiring harness which is shorted to the power supply. **If there is no common connector:** • Repair or replace the wiring harness which is shorted to the power supply. • Go to the next step.
		No	Replace the seat warmer control unit, then go to the next step. (See SEAT WARMER CONTROL UNIT REMOVAL/INSTALLATION.)
4	**VERIFY IF MALFUNCTION CAUSE IS CORRECTED** • Switch the ignition ON (engine off or on). • Operate the seat warmer switch to turn on the seat warmer system. • Does the seat warmer system operate normally?	Yes	Troubleshooting completed. (Explain the contents of the servicing to the customer.)
		No	Verify the malfunction symptom in the symptom troubleshooting chart and perform the other applicable malfunction diagnosis. (See SYMPTOM TROUBLESHOOTING [SEAT WARMER SYSTEM].)