
REAR BUMPER STAY REMOVAL/INSTALLATION

id091000030000


4SD

1. Remove the trunk floor cover. (with trunk floor cover) (See TRUNK FLOOR COVER REMOVAL/INSTALLATION.)
2. Remove the bolts.

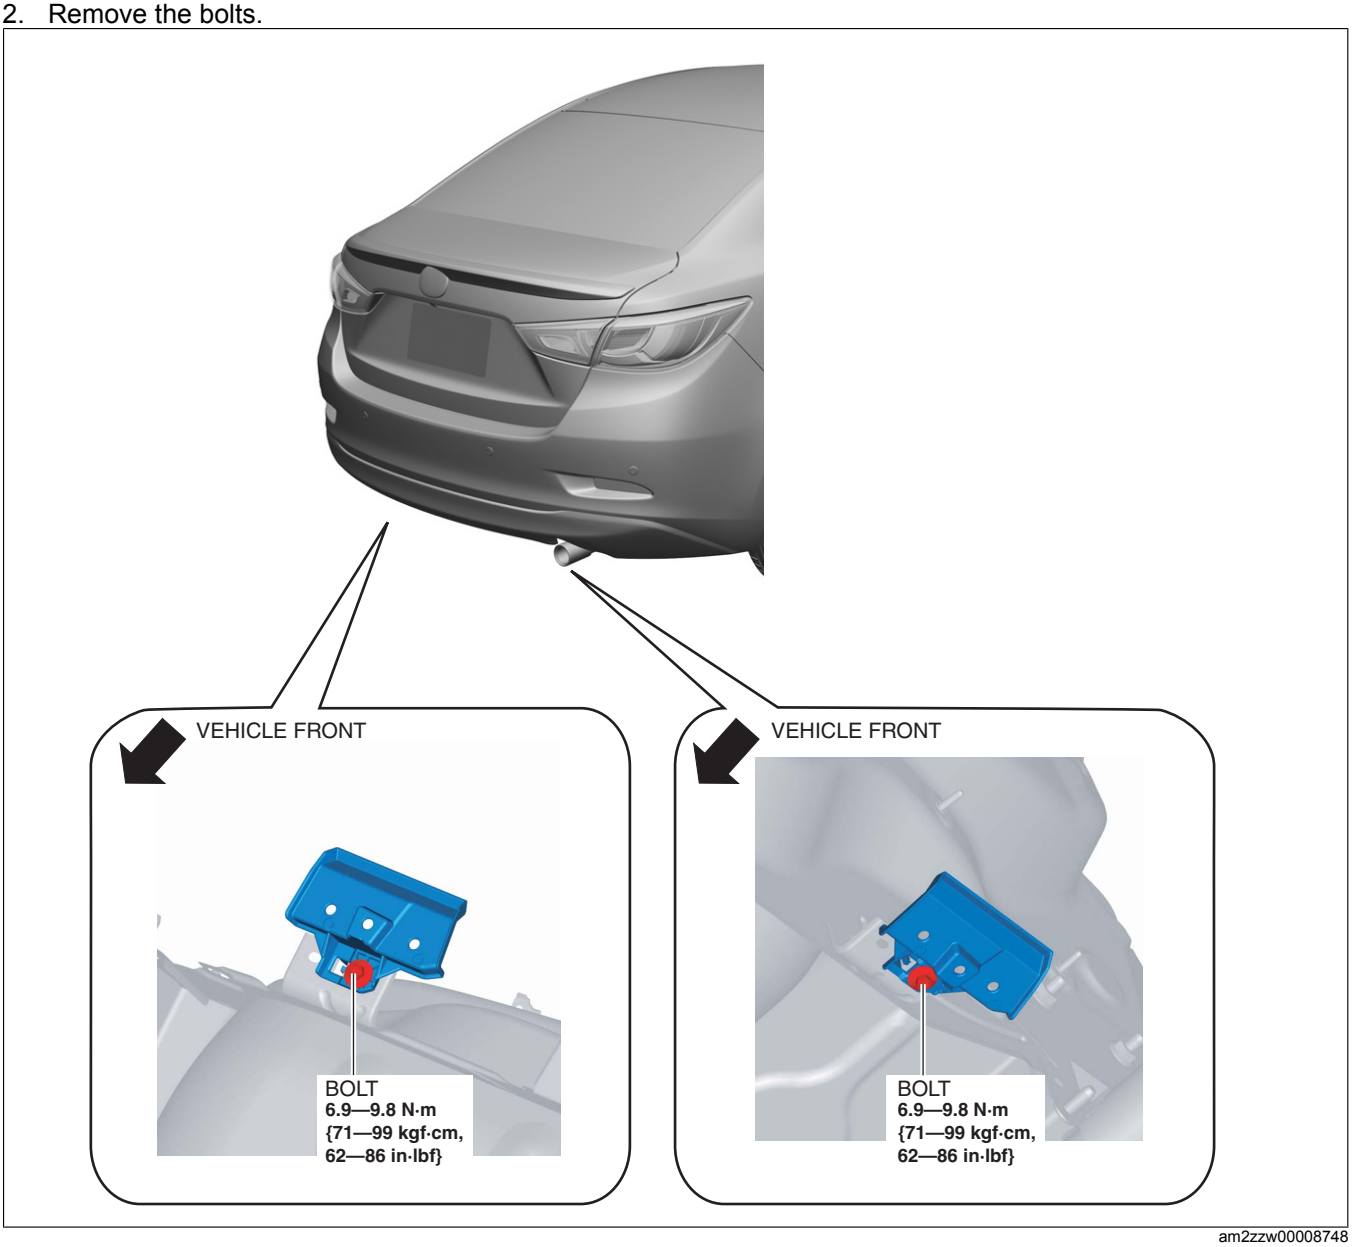

am2zzw00008748

3. While pressing the rear bumper stay tabs in the direction of arrows (1) shown in the figure, move the rear bumper stay in the direction of arrow (2) and detach the rear bumper stay from the body.

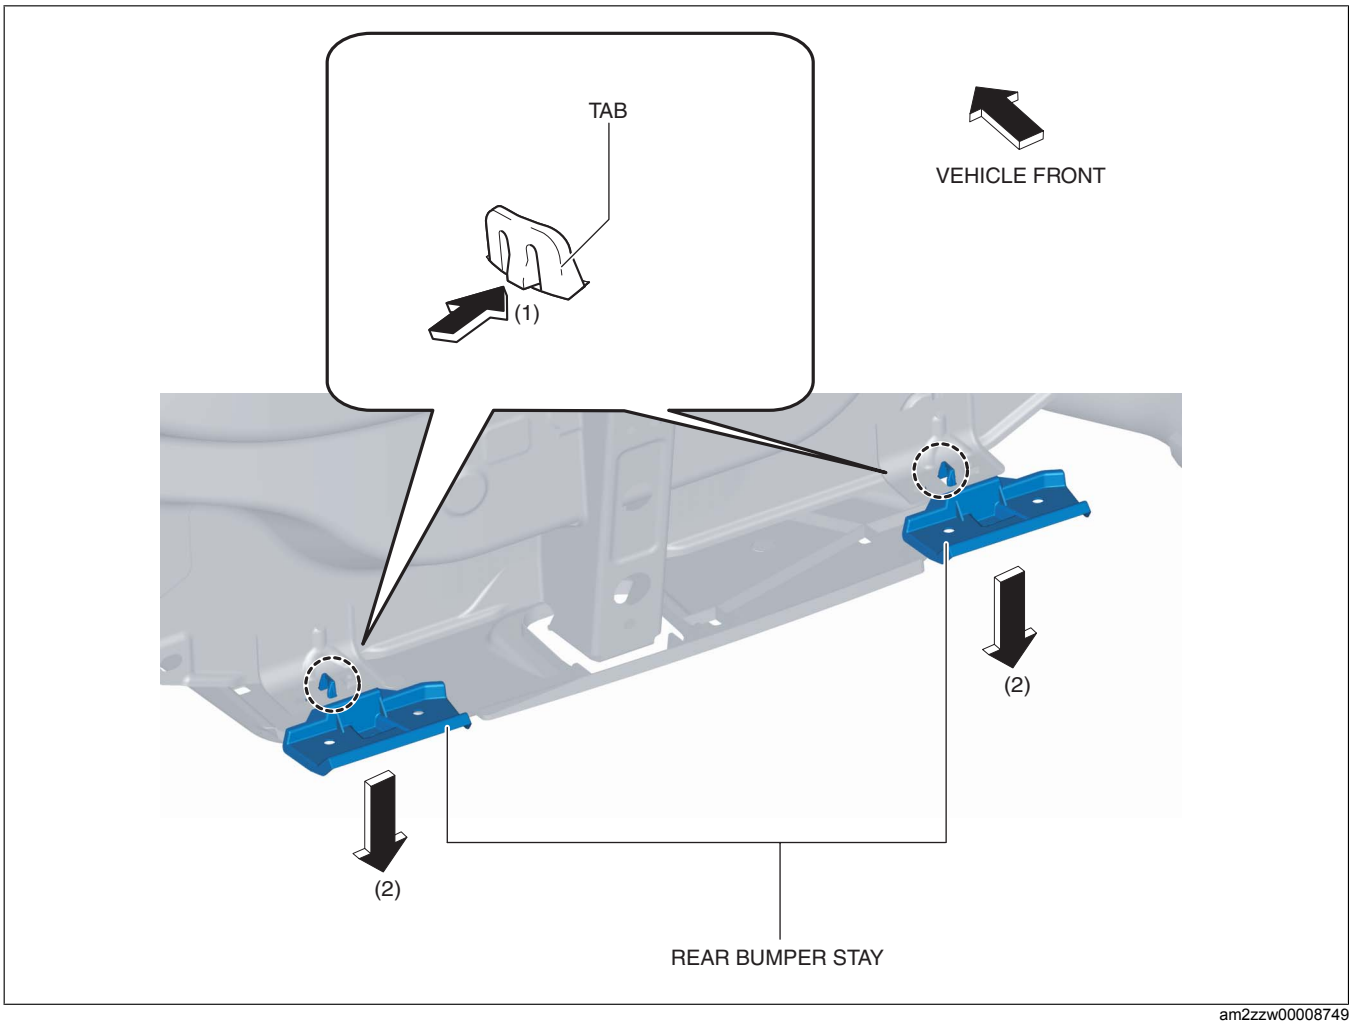


am2zzw00008749

4. Remove the rear bumper stay.
5. Install in the reverse order of removal.


5HB

1. Remove the trunk floor cover. (with trunk floor cover) (See TRUNK FLOOR COVER REMOVAL/ INSTALLATION.)
2. Remove the bolts.

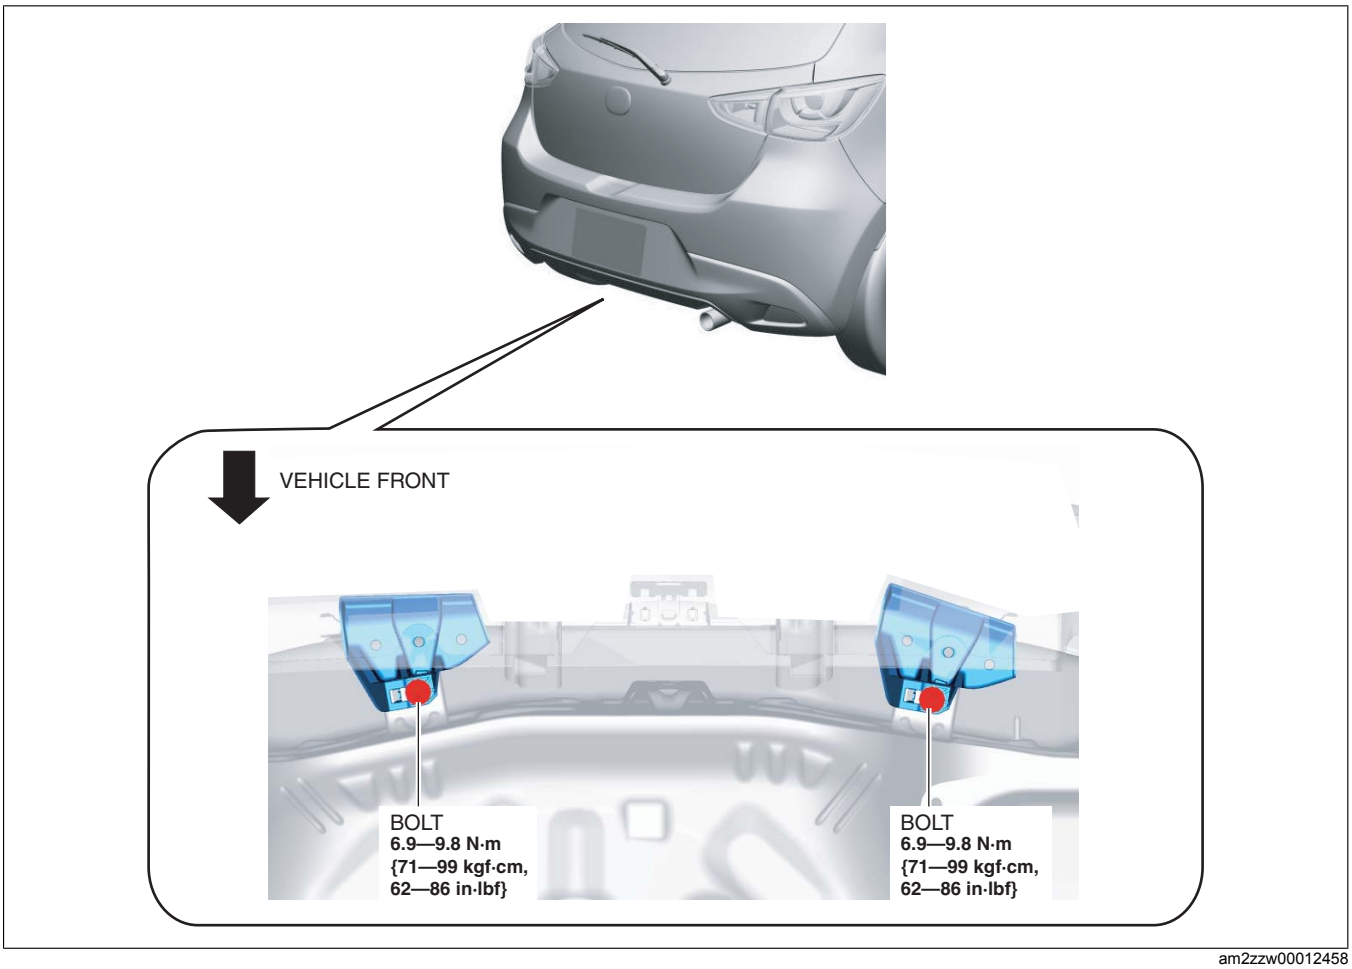

am2zzw00012458

3. While pressing the rear bumper stay tabs in the direction of arrows (1) shown in the figure, move the rear bumper stay in the direction of arrow (2) and detach the rear bumper stay from the body.

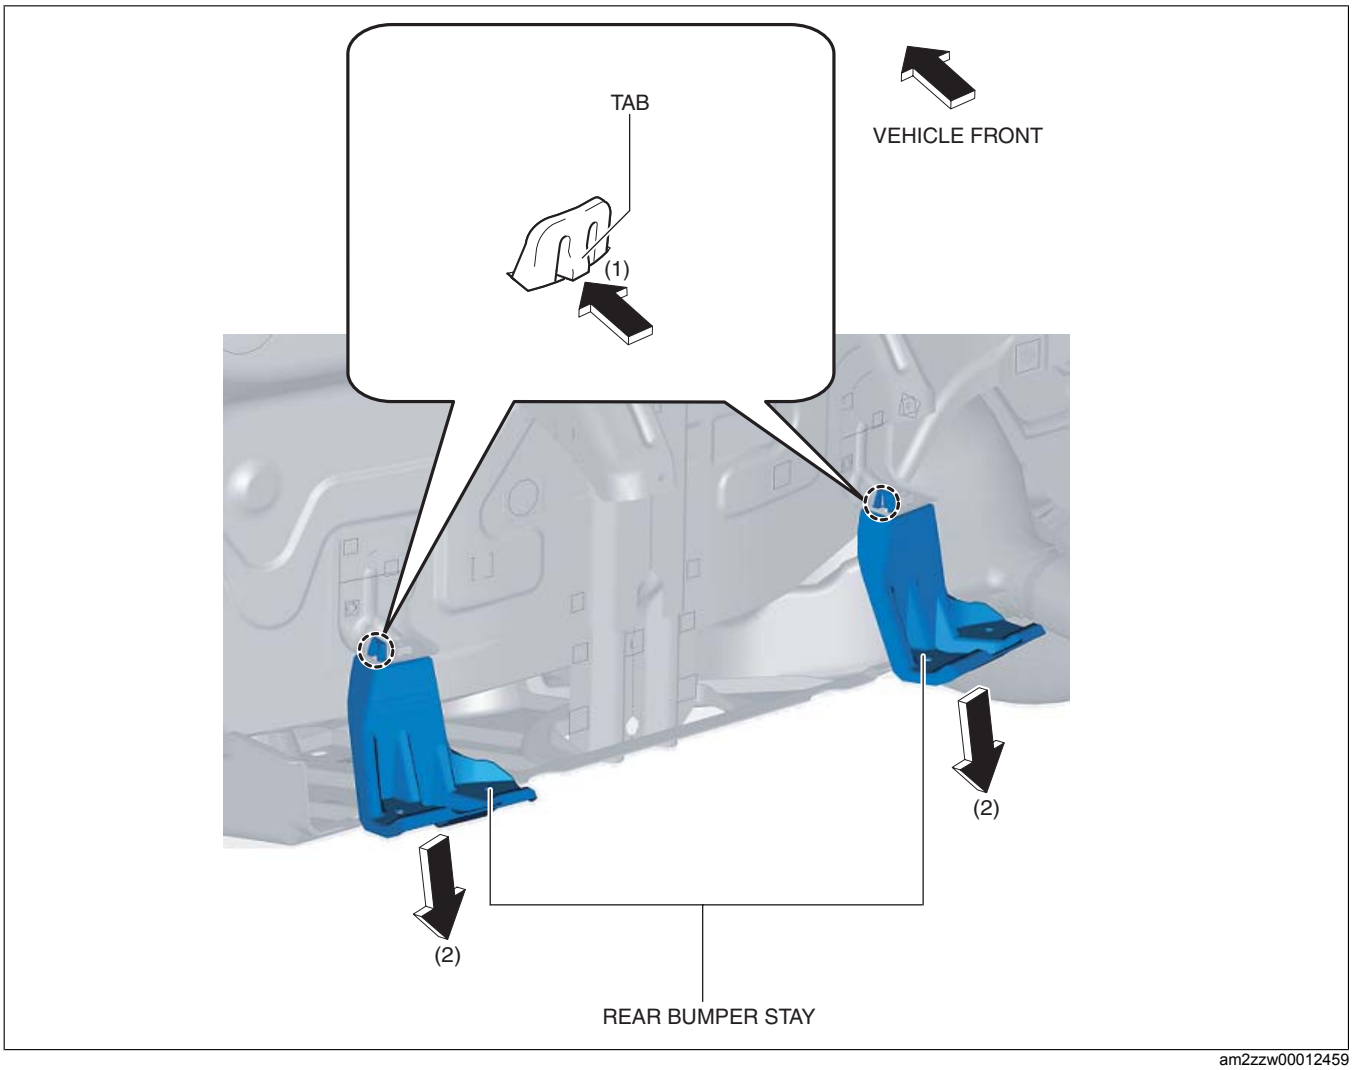

am2zzw00012459

4. Remove the rear bumper stay.
5. Install in the reverse order of removal.