
REAR BUMPER REMOVAL

id091000300000


4SD

1. Affix the protective tape to the position shown in the figure to prevent scratches and damage.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
3. Remove the rear combination light. (See REAR COMBINATION LIGHT REMOVAL/ INSTALLATION.)
4. Remove the rear splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
5. Remove the rear fog light. (with rear fog light) (See REAR FOG LIGHT REMOVAL/INSTALLATION.)

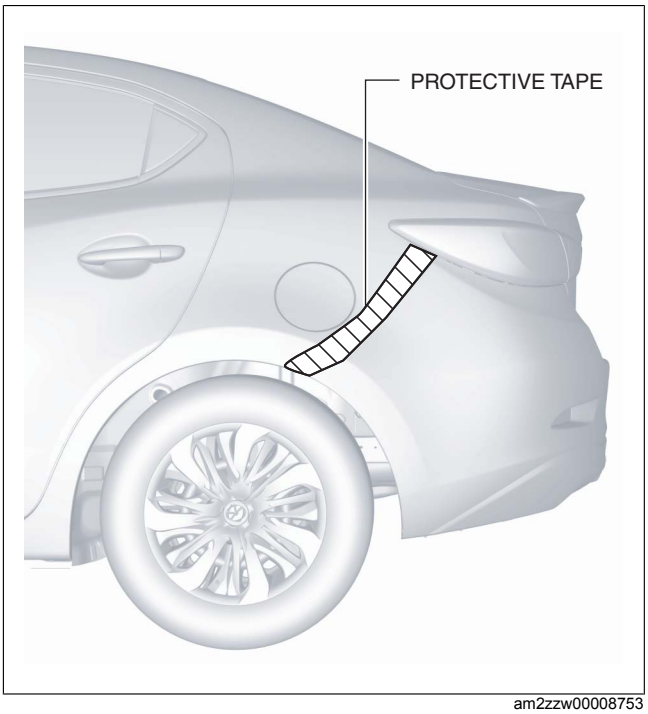


am2zzw00008753

6. Remove the screws and fasteners.

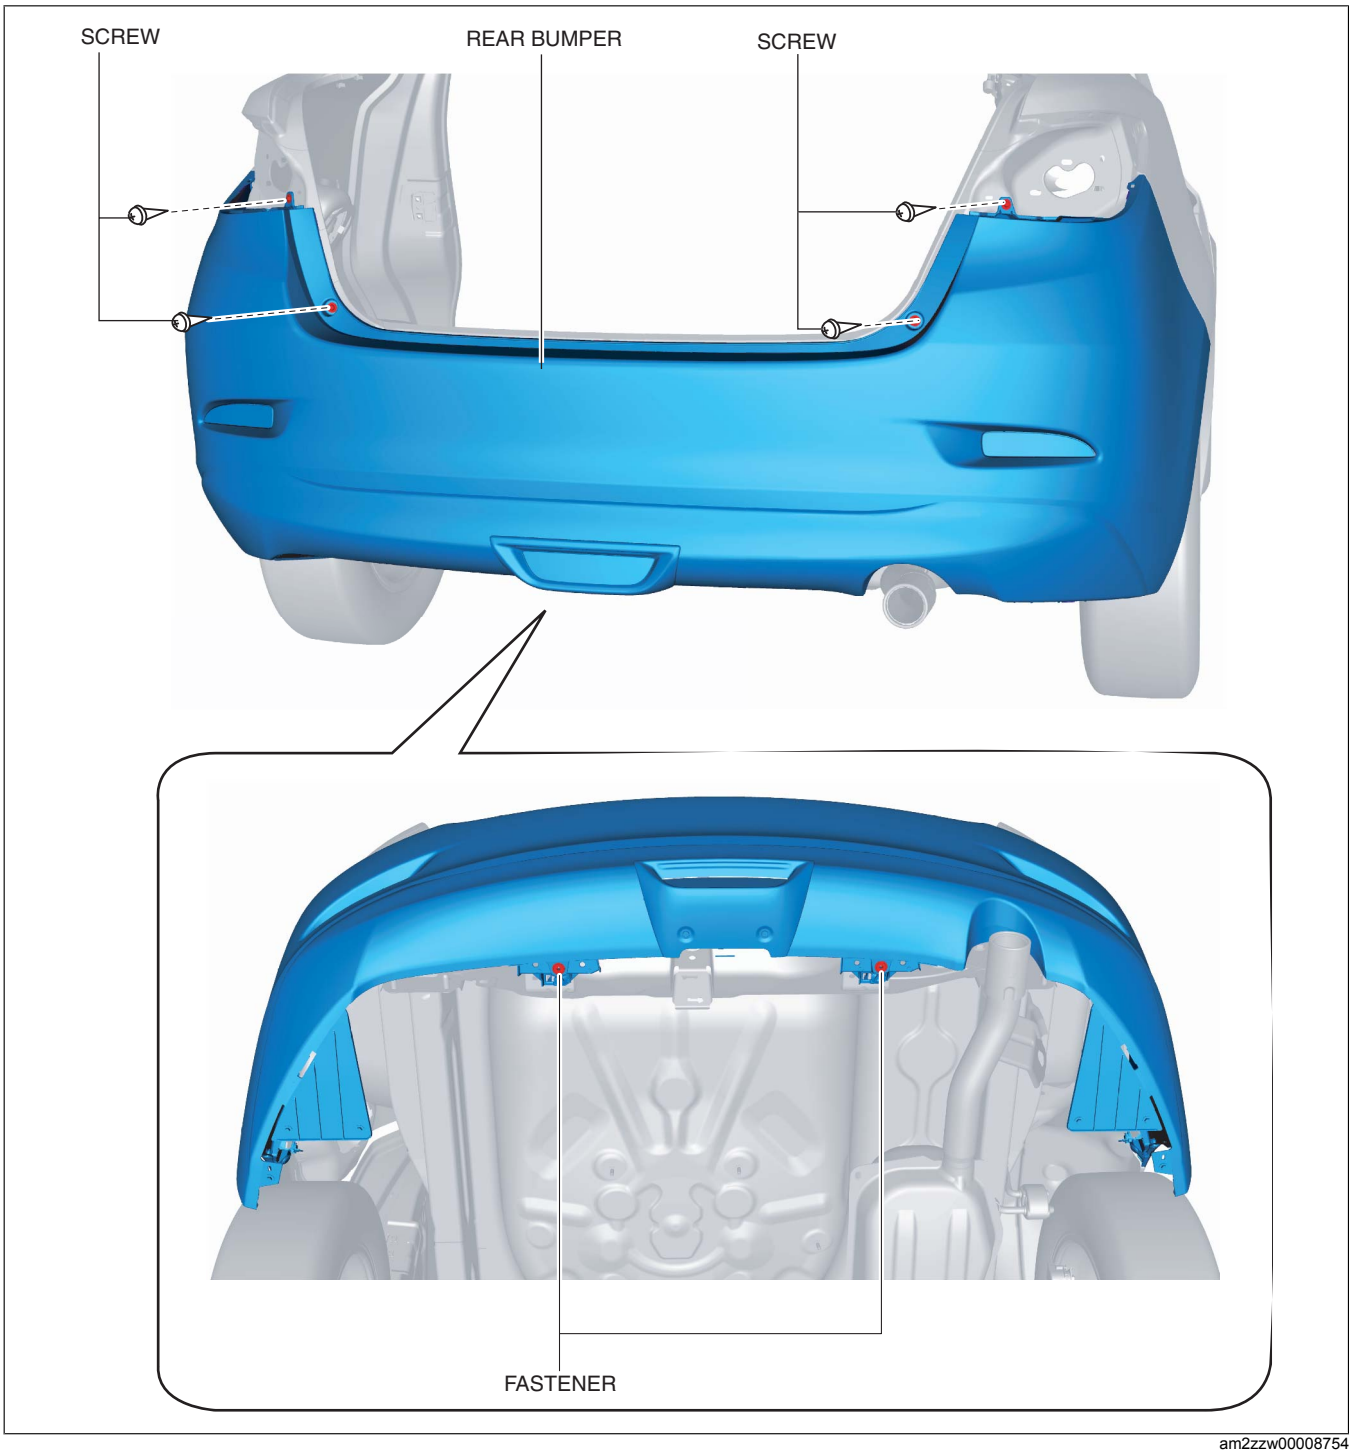

am2zzw00008754

7. Remove the screws.

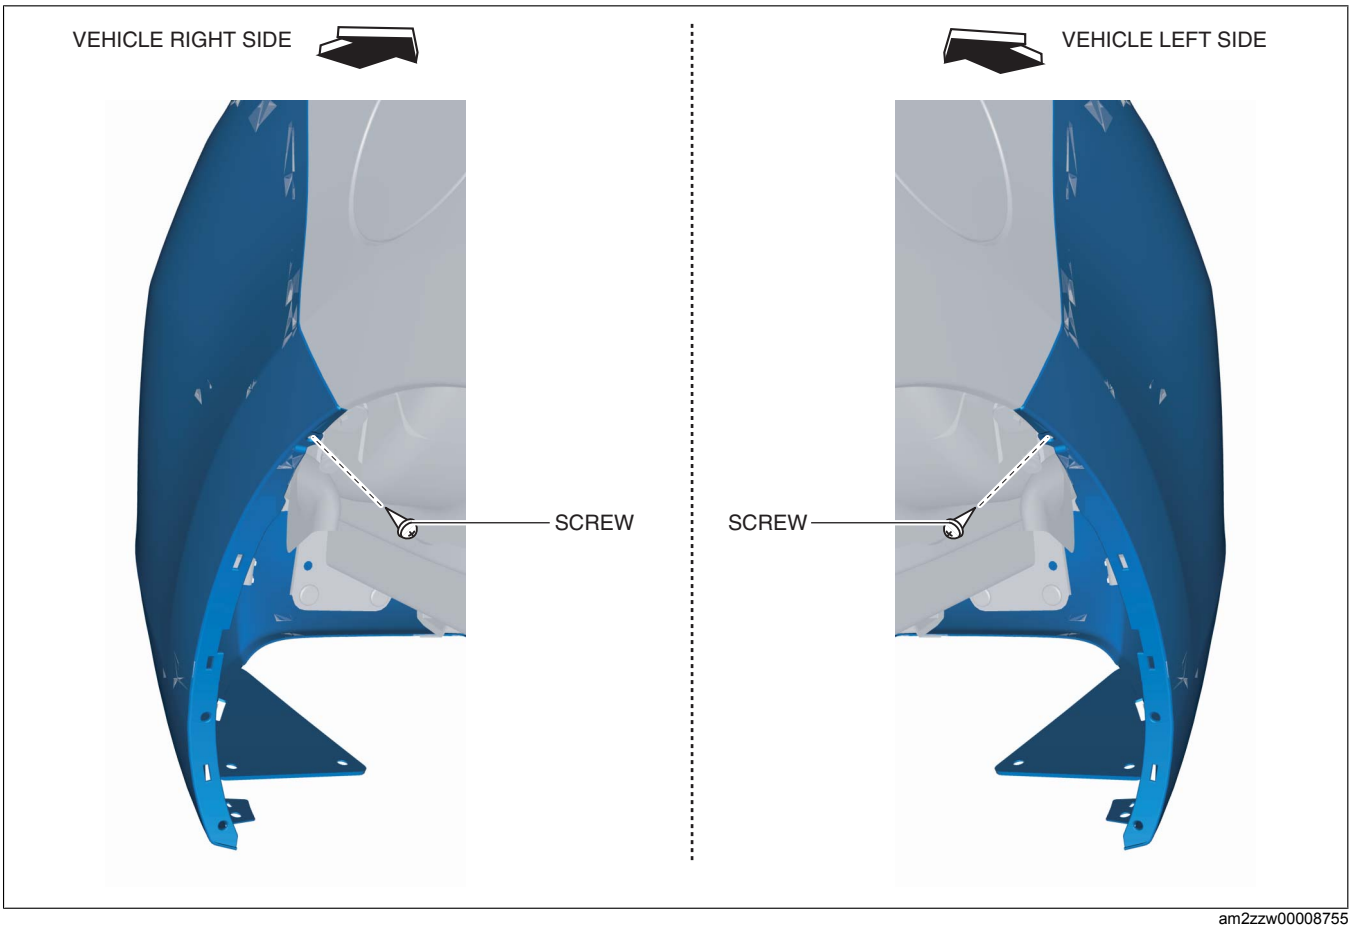


am2zzw00008755

Caution


- **The rear bumper and rear bumper slider are engaged firmly. If they are disengaged forcibly the bumper could fall and be damaged. Perform the servicing carefully when disengaging the rear bumper from the rear bumper slider.**

8. Detach the rear bumper from the rear bumper slider while holding the rear end of the rear bumper, moving it in the direction of the arrow shown in the figure, and detaching the hooks.

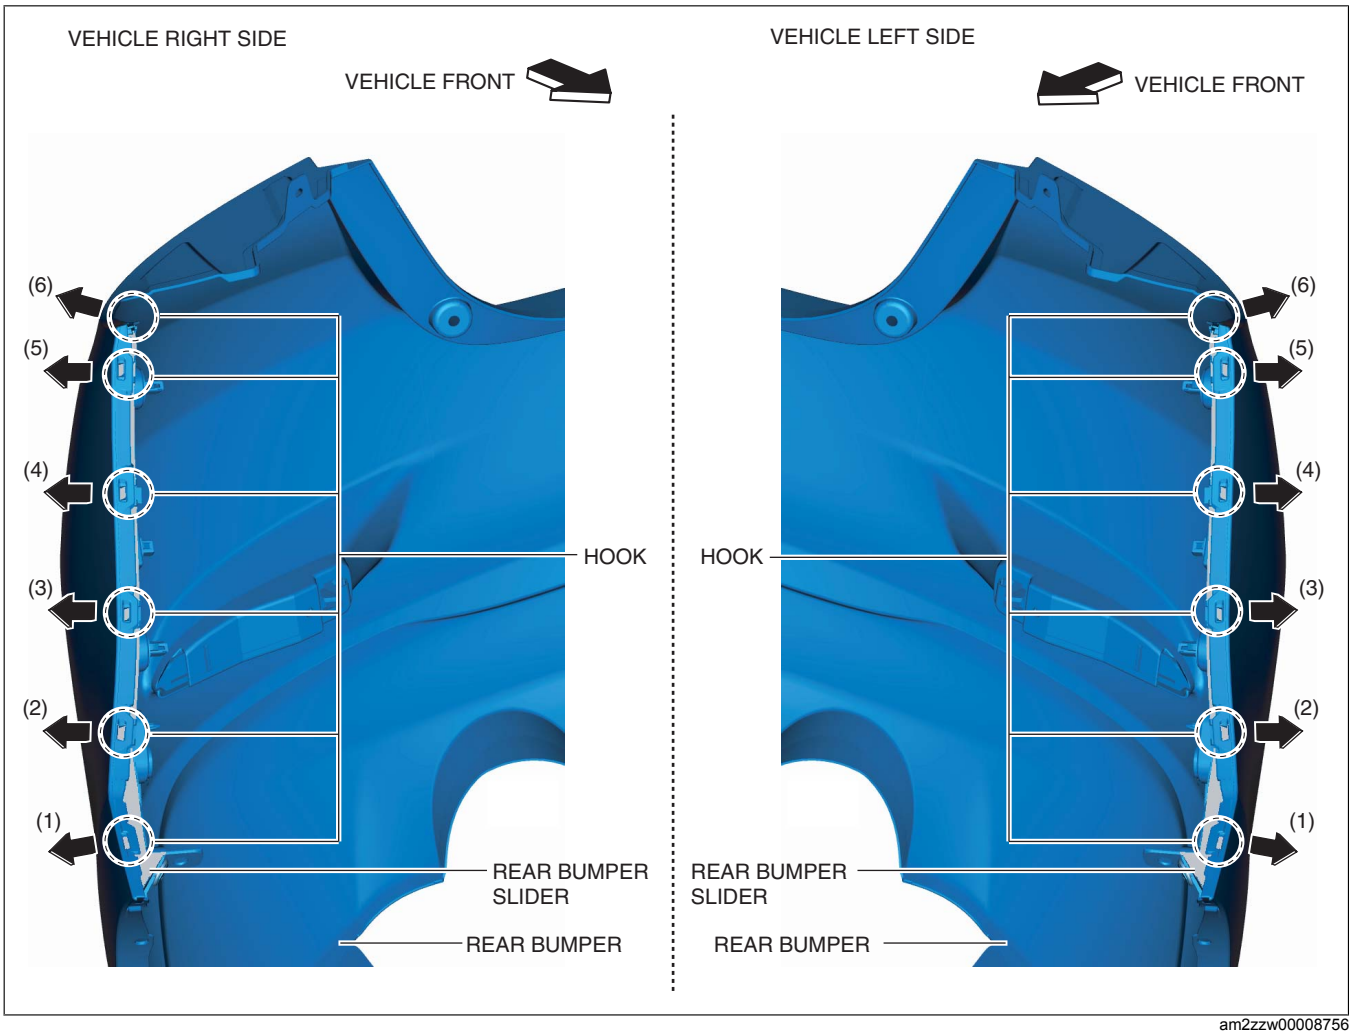


am2zzw00008756

9. Hold the shaded area shown in the figure, pull the rear bumper in the direction of the arrow, and detach the rear bumper from the body and the rear bumper bracket.

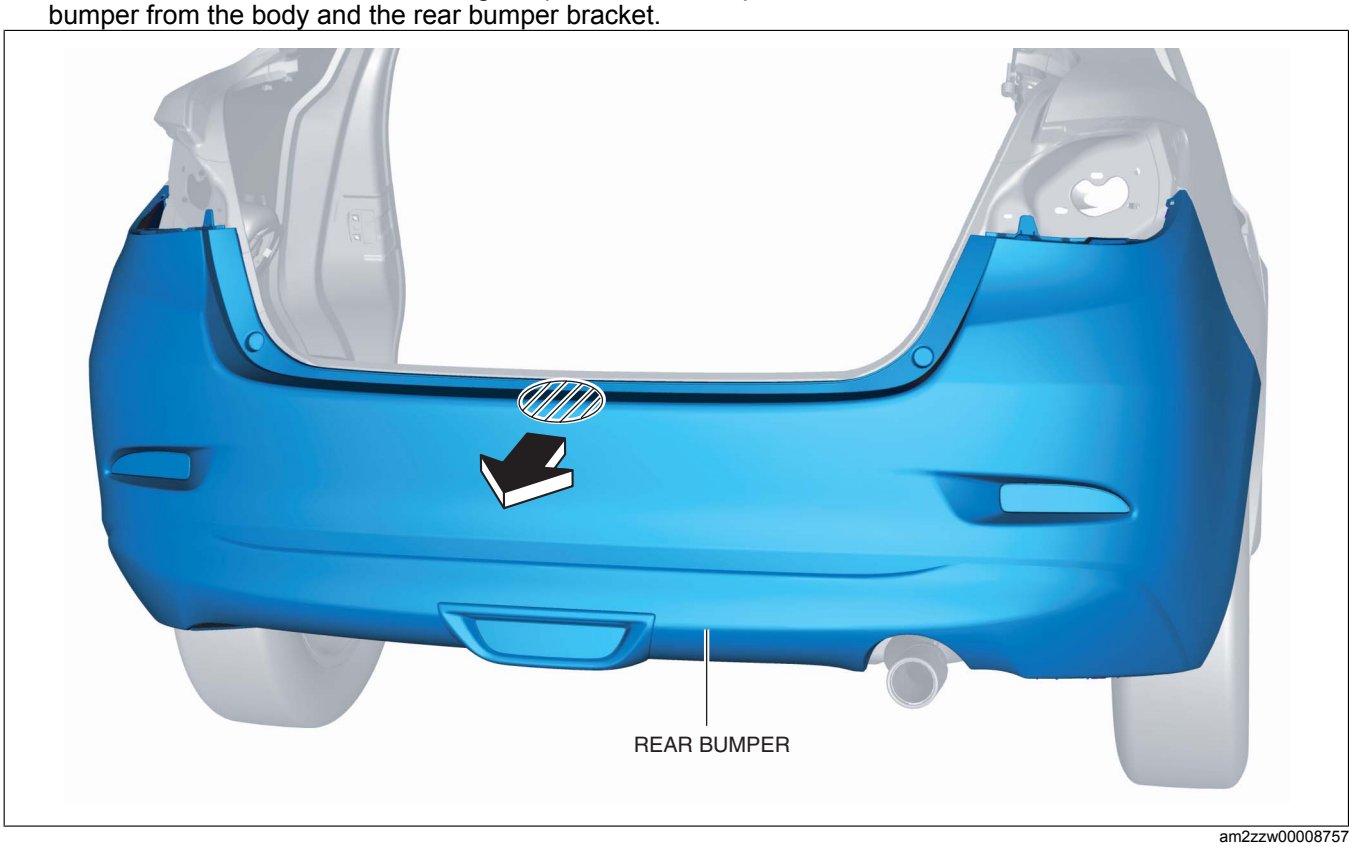

am2zzw00008757

10. Disconnect the connectors.

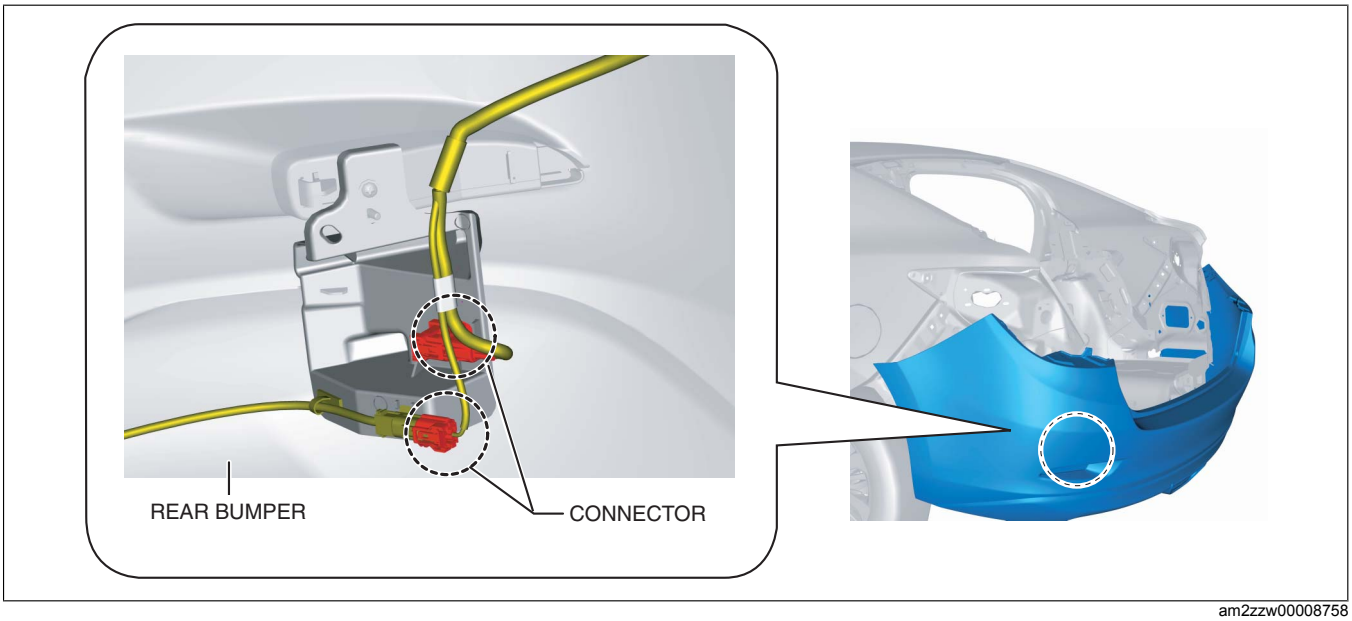


am2zzw00008758

11. Remove the rear bumper.


5HB

1. Affix the protective tape to the position shown in the figure to prevent scratches and damage.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
3. Remove the rear combination light. (See REAR COMBINATION LIGHT REMOVAL/ INSTALLATION.)
4. Remove the rear splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)

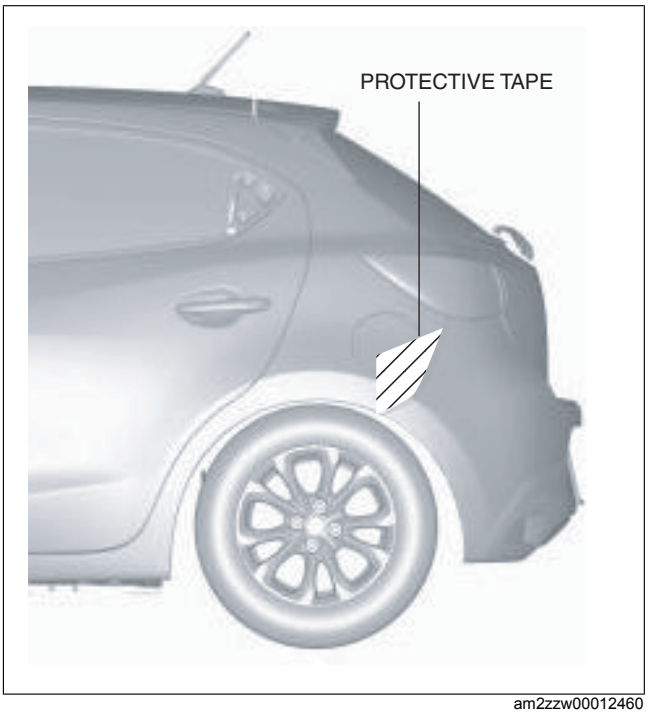


am2zzw00012460

5. Remove the screws and fasteners.

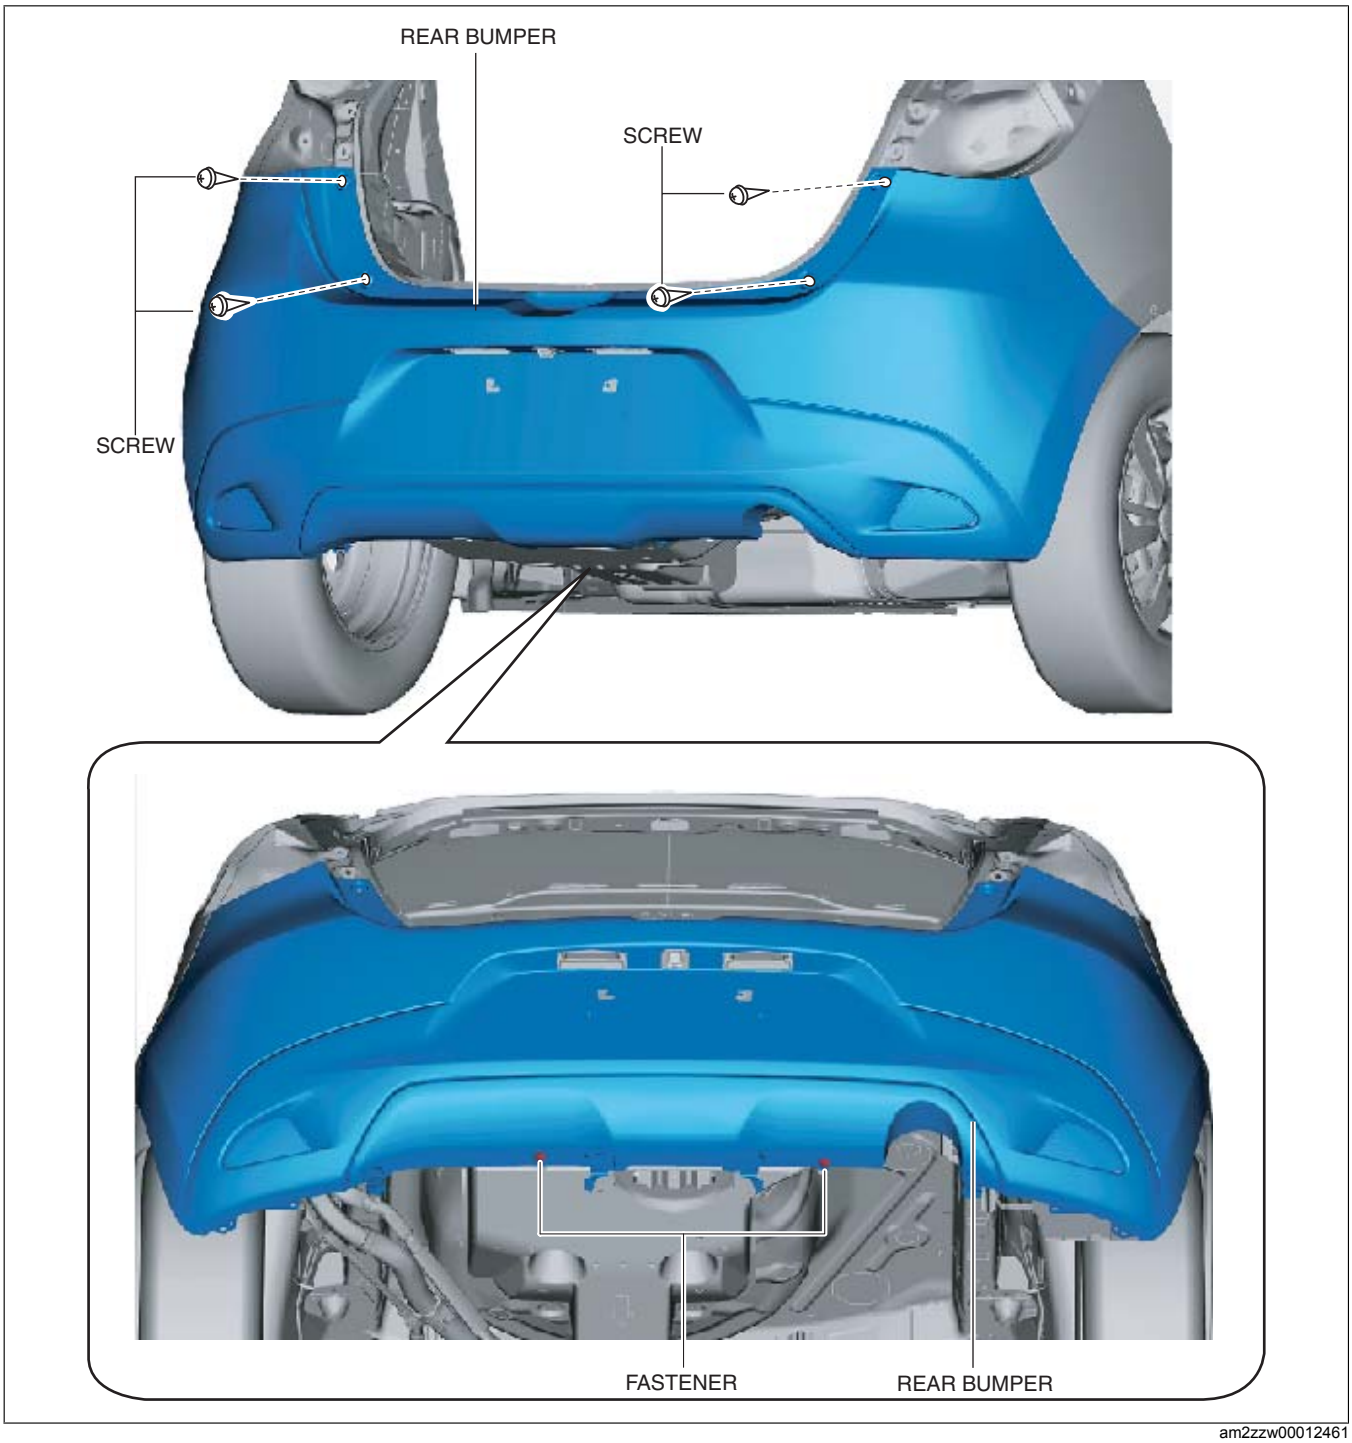

am2zzw00012461

6. Remove the screws.

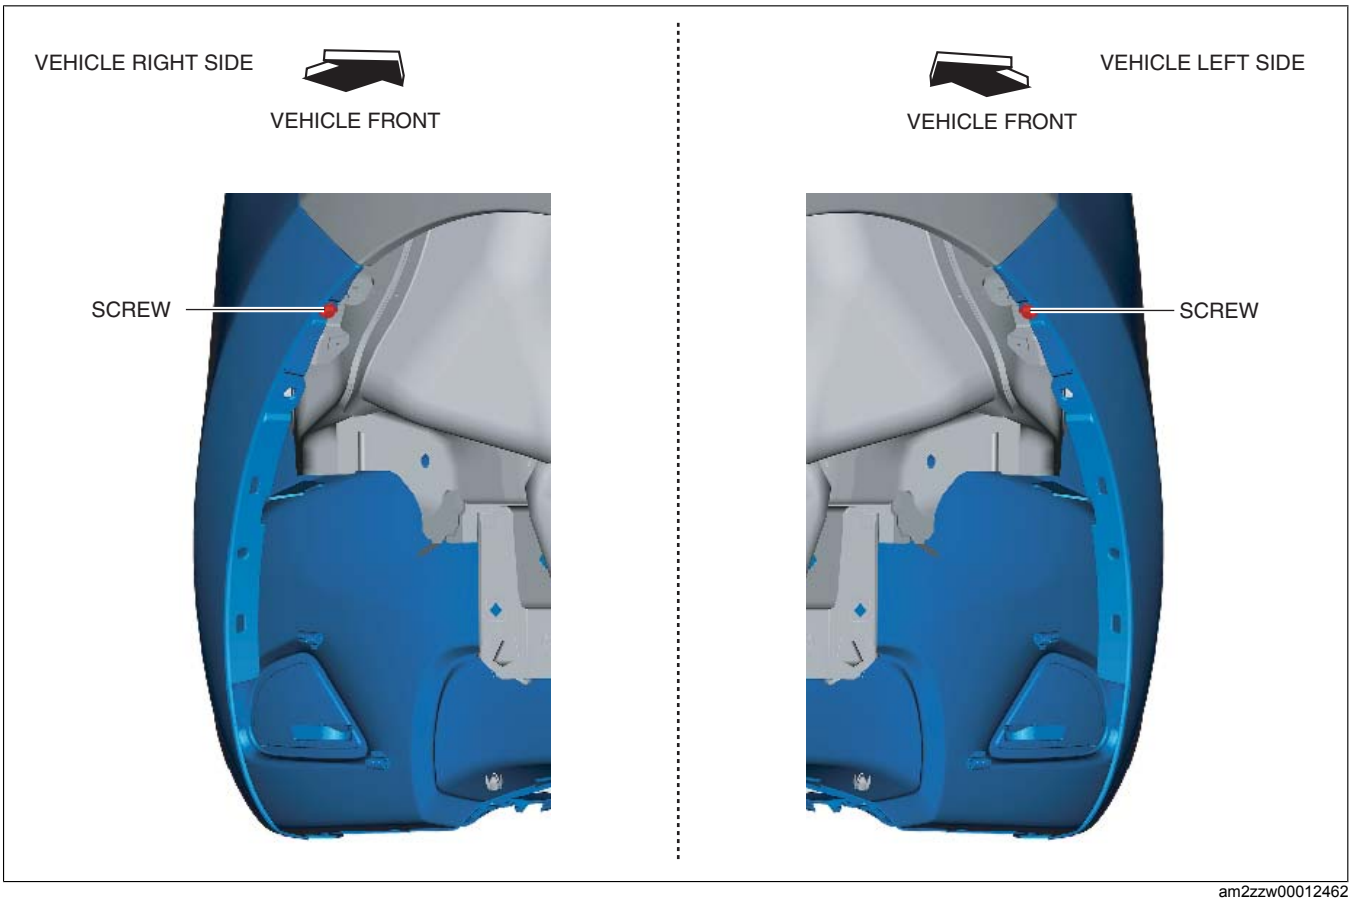


am2zzw00012462

Caution


- **The rear bumper and rear bumper slider are engaged firmly. If they are disengaged forcibly the bumper could fall and be damaged. Perform the servicing carefully when disengaging the rear bumper from the rear bumper slider.**

7. Detach the rear bumper from the rear bumper slider while holding the rear end of the rear bumper, moving it in the direction of the arrows in the order of (1), (2), (3), (4), (5), and (6) shown in the figure, and detaching the hooks.

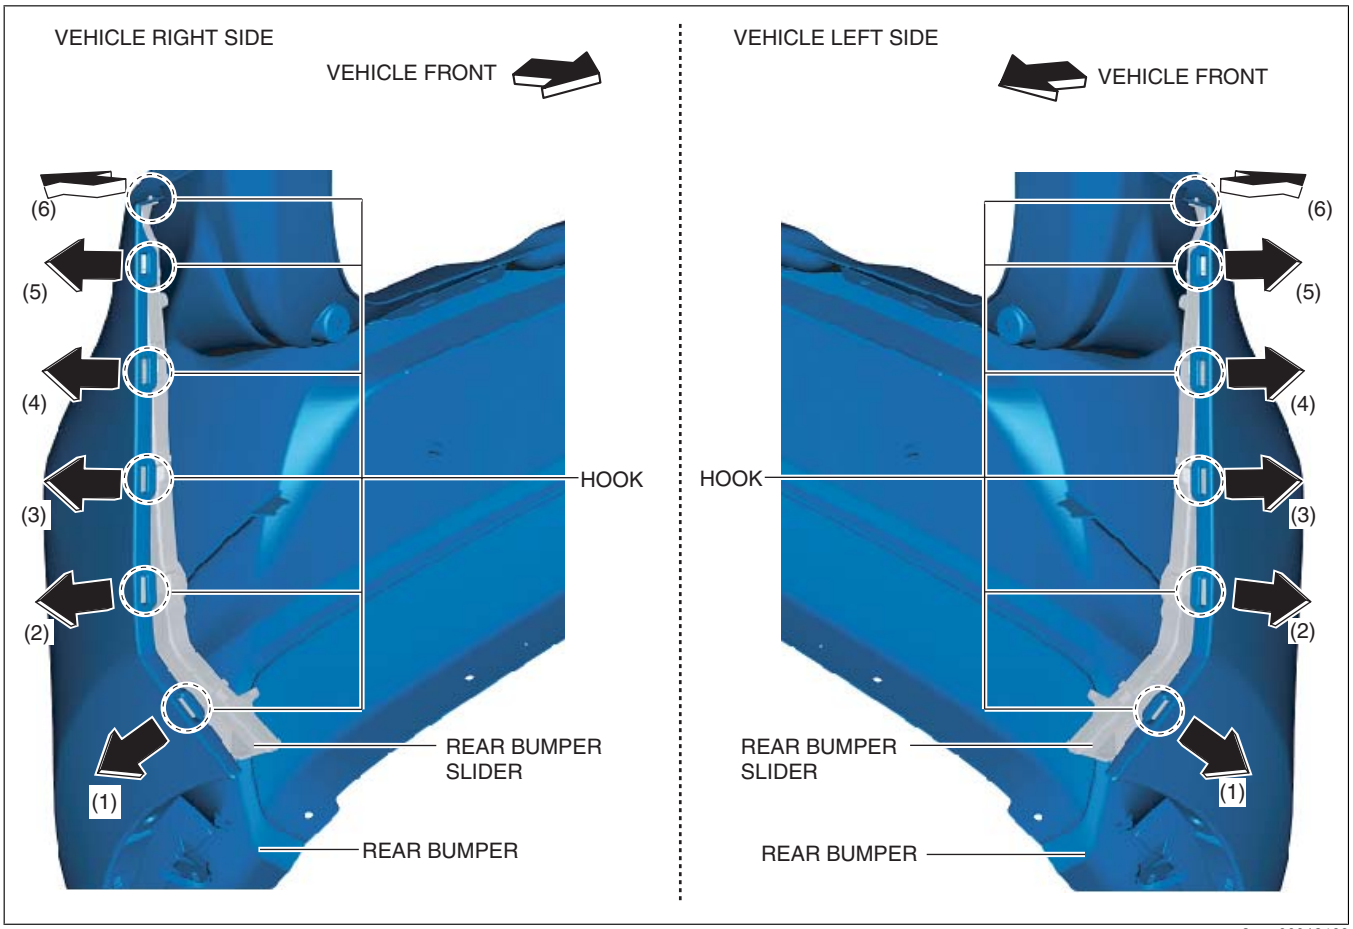


am2zzw00012463

8. Hold the shaded area shown in the figure, pull the rear bumper in the direction of the arrow, and detach the rear bumper from the body and the rear bumper bracket.

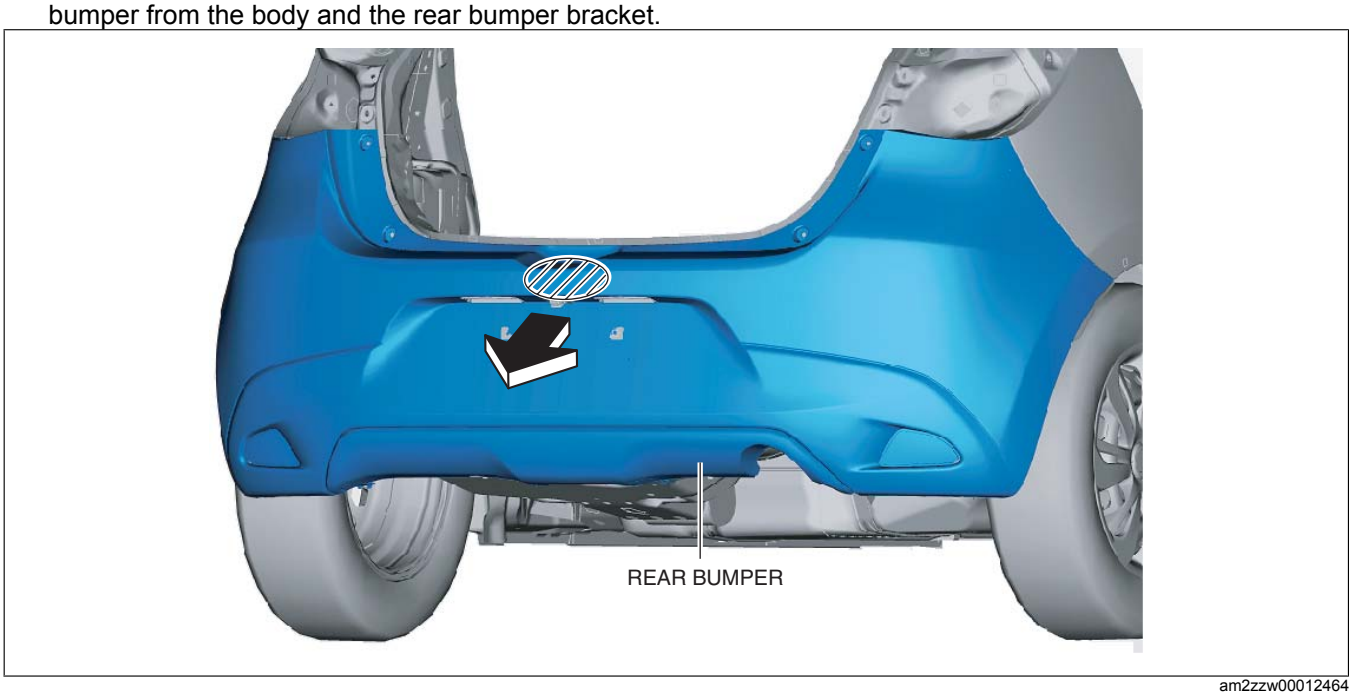

am2zzw00012464

9. Disconnect the connector.

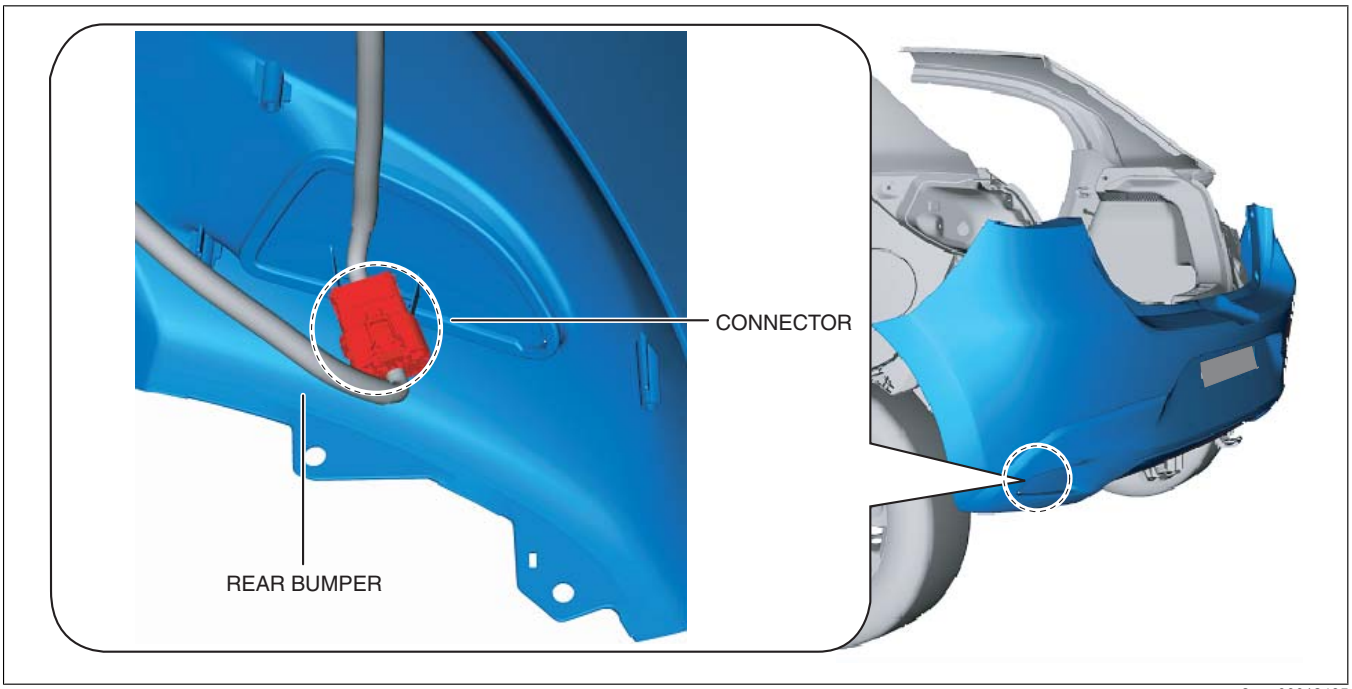

am2zzw00012465

10. Remove the rear bumper.