
REAR BUMPER INSTALLATION

id091000300100


4SD

1. Connect the connectors.

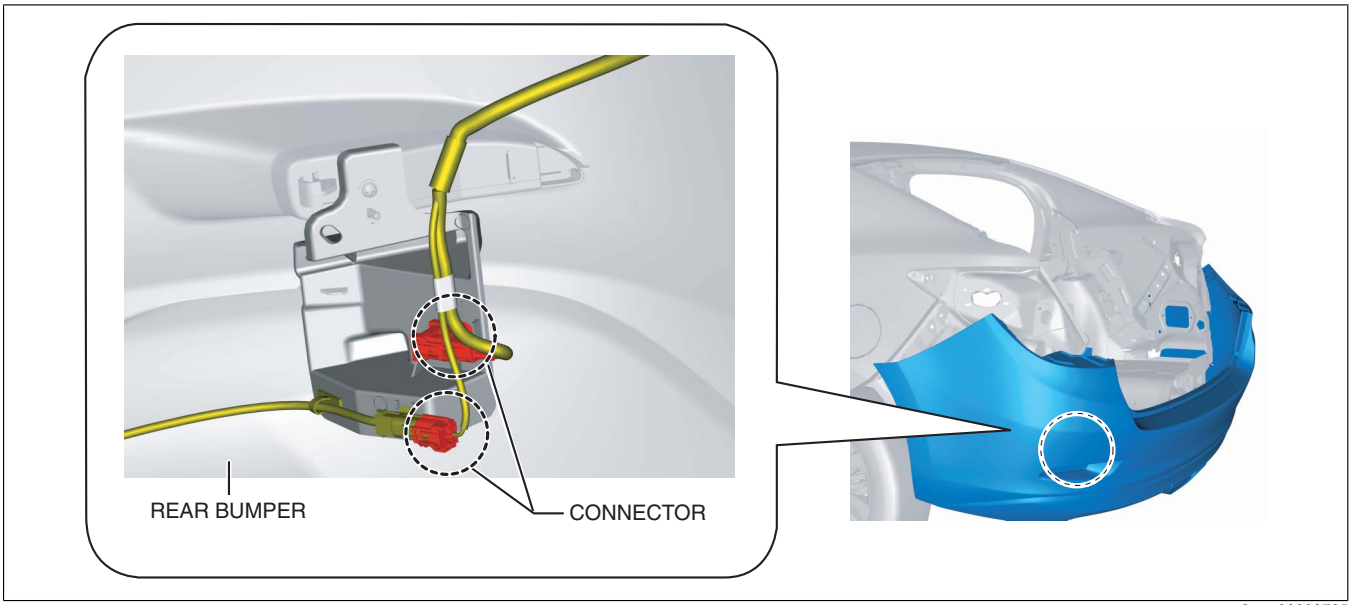


am2zzw00008765

2. Hook the rear bumper to the rear bumper slider in the order show in the figure.

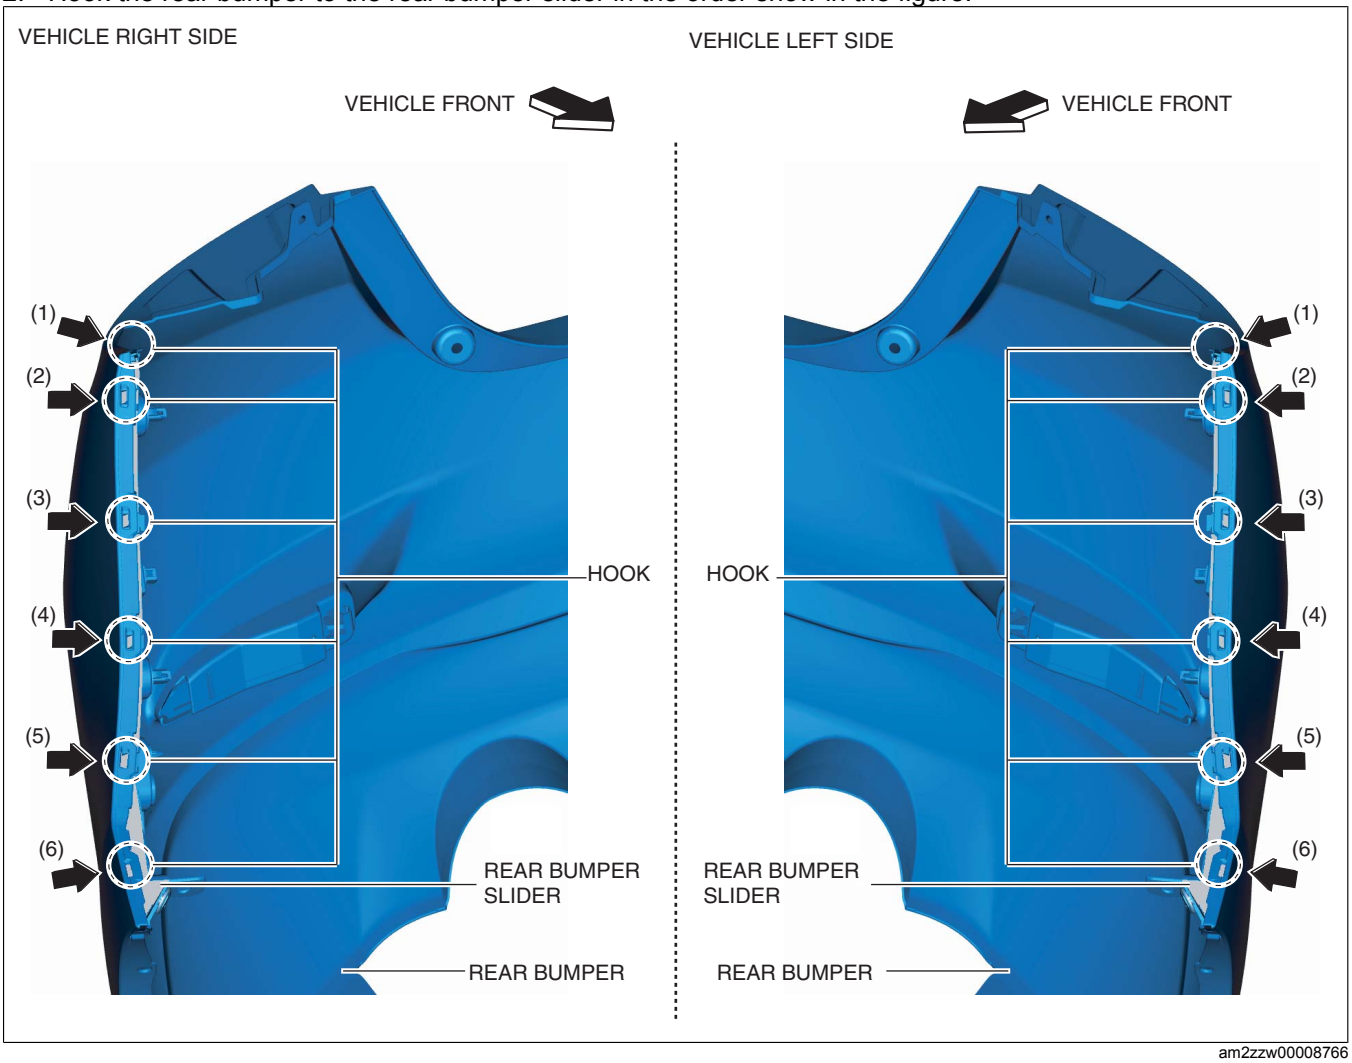


am2zzw00008766

3. Press the rear bumper in the direction of the arrow shown in the figure and install the rear bumper to the rear bumper bracket and the body.

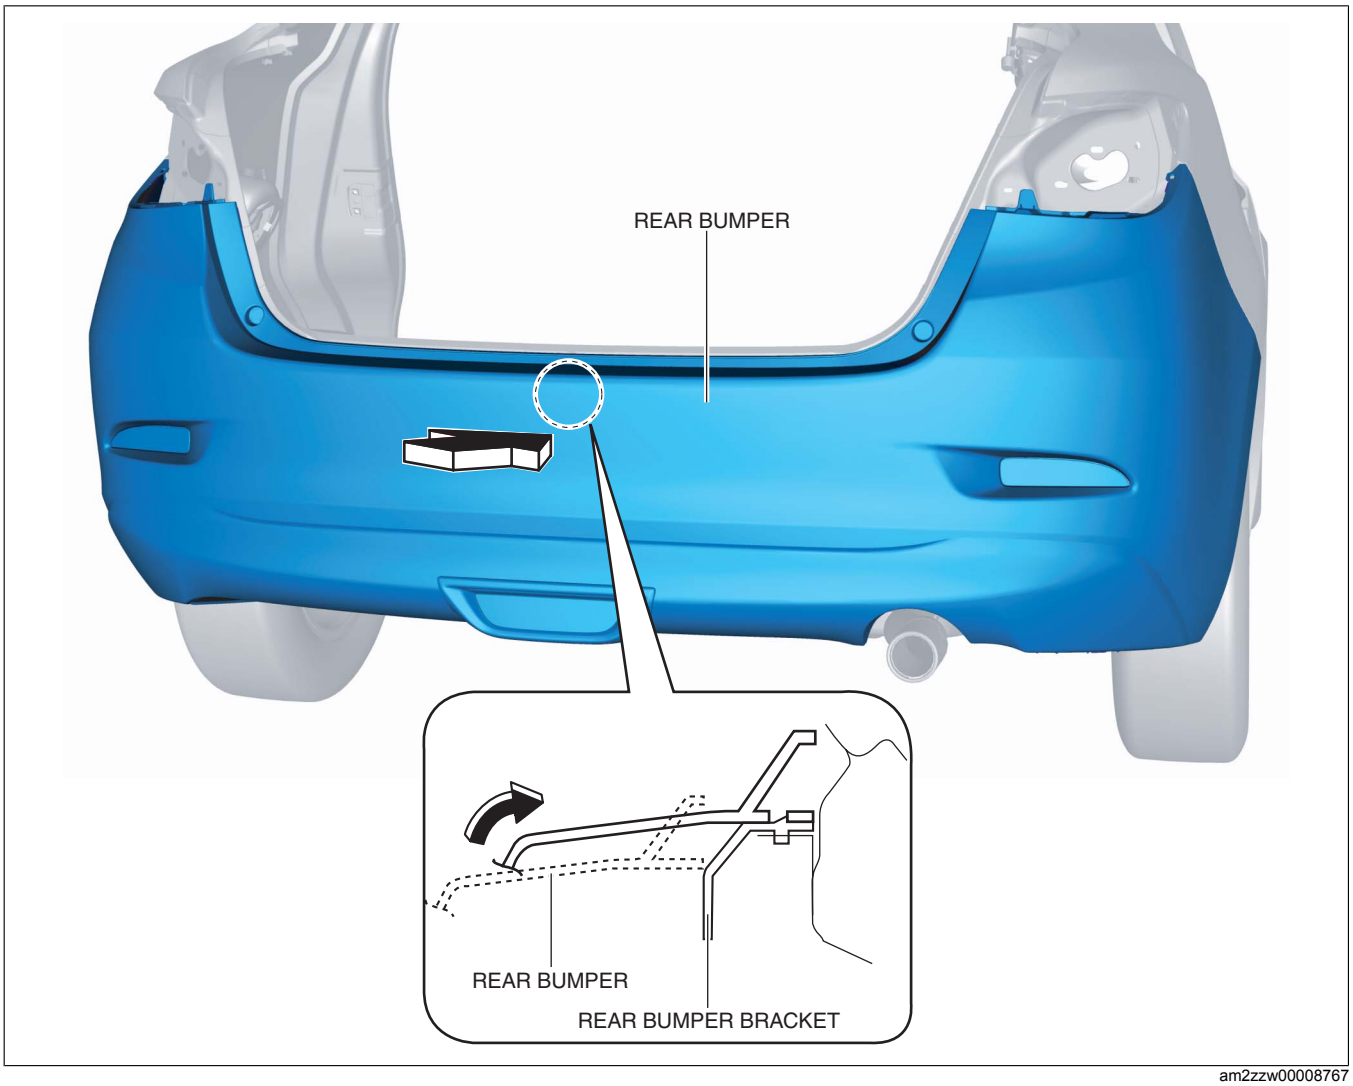


am2zzw00008767

4. Install the screws and fasteners.

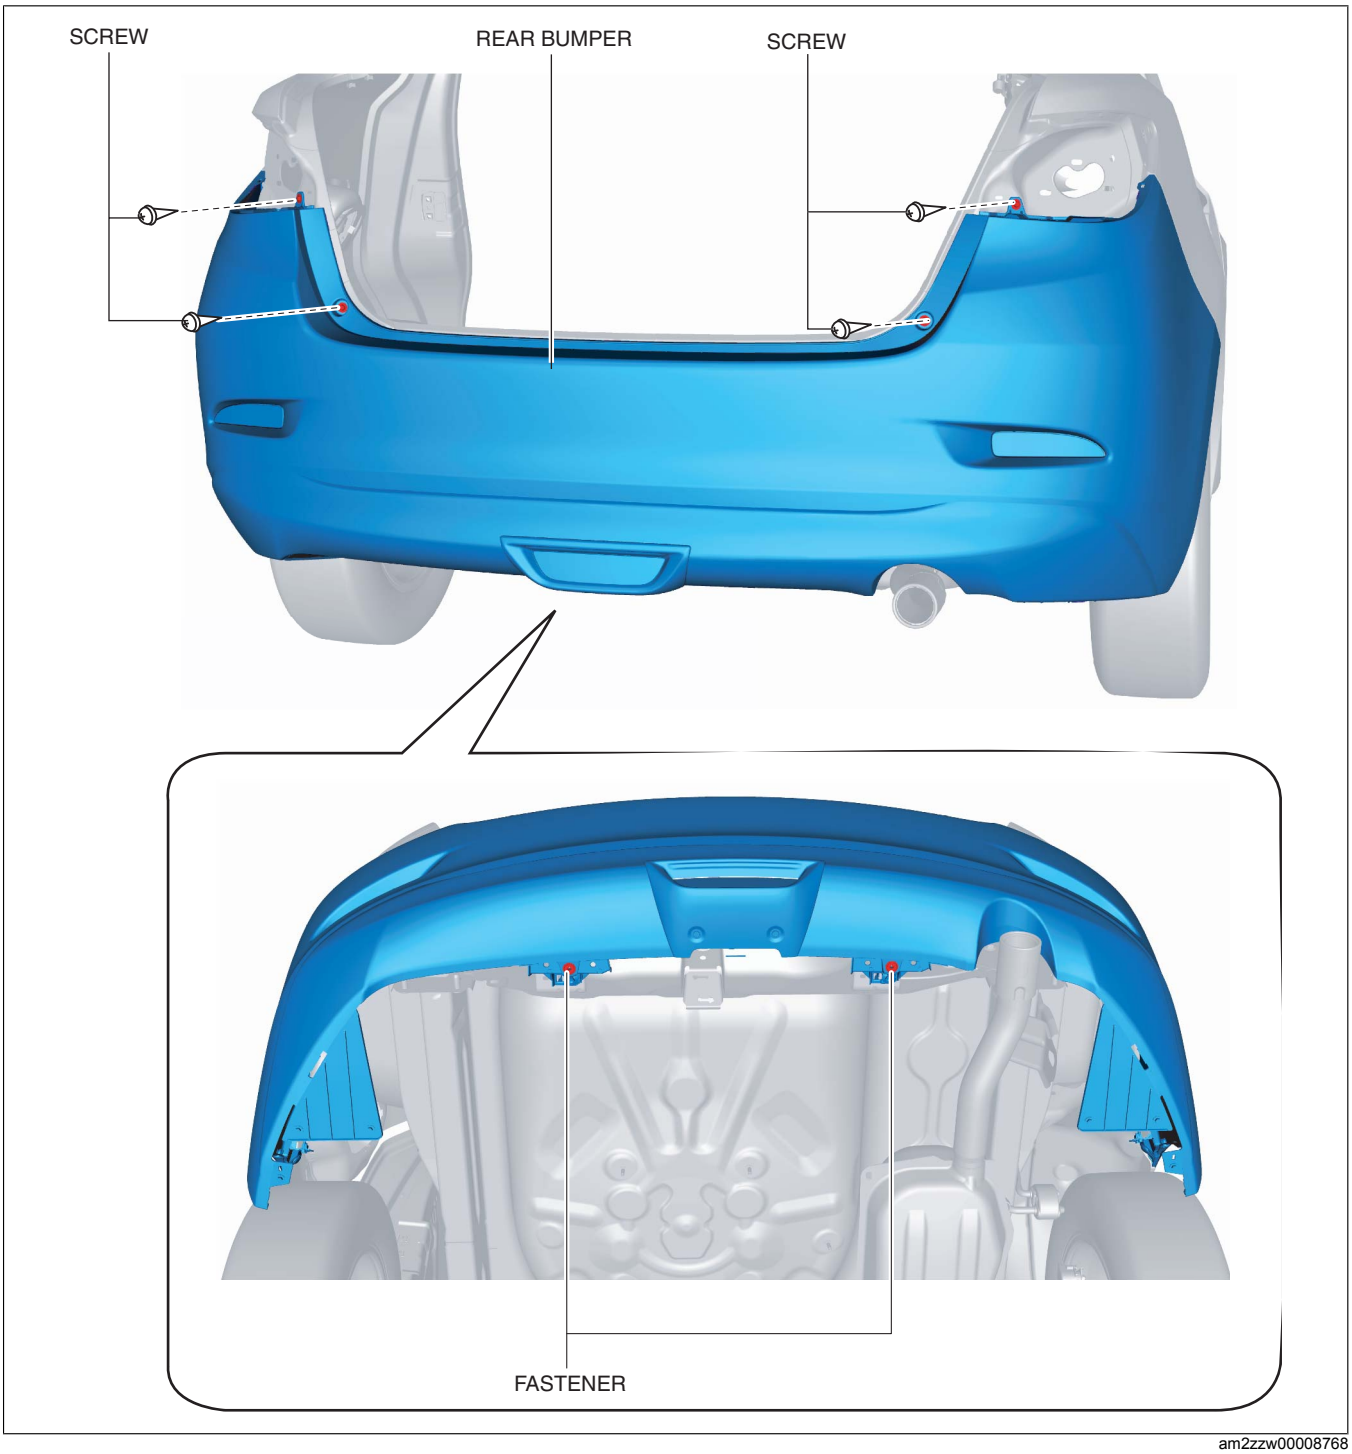

am2zzw00008768

5. Install the screws.

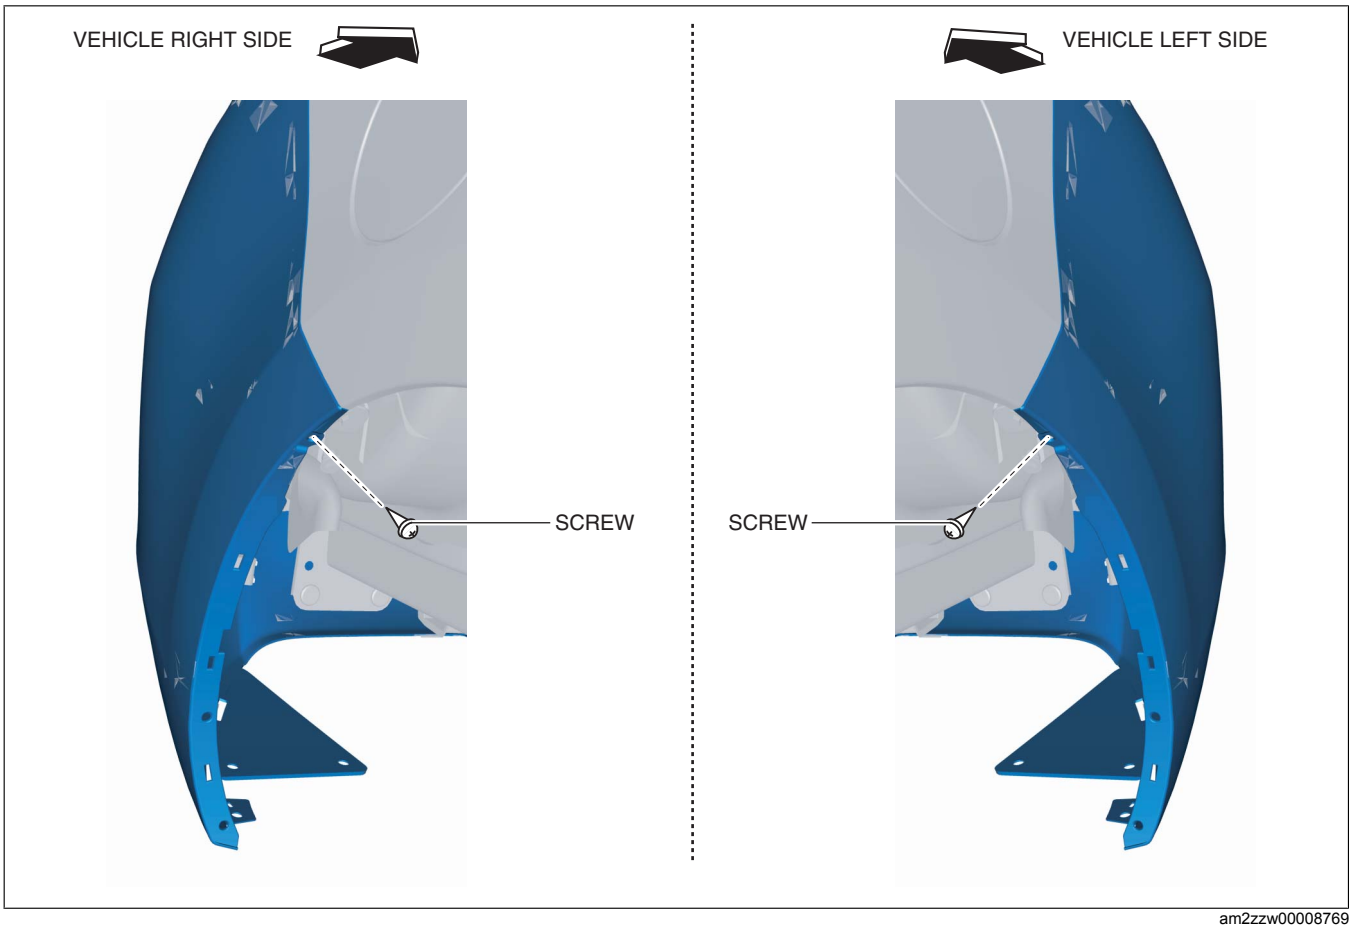

am2zzw00008769


6. Install the rear fog light. (with rear fog light) (See REAR FOG LIGHT REMOVAL/INSTALLATION.)
7. Install the rear splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
8. Install the rear combination light. (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
9. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
10. If the rear bumper is replaced, perform the blind spot monitoring radar aiming. (with blind spot monitoring system) (See BLIND SPOT MONITORING (BSM) RADAR AIMING.)

Caution

- **If the rear bumper installation position is changed or individual differences (coating film/thickness) occur, the blind spot monitoring control module radar angle will deviate which could result in the module not detecting a vehicle approaching from the rear correctly. If the rear bumper is replaced, perform the blind spot monitoring (BSM) radar aiming.**


5HB

1. Connect the connector.

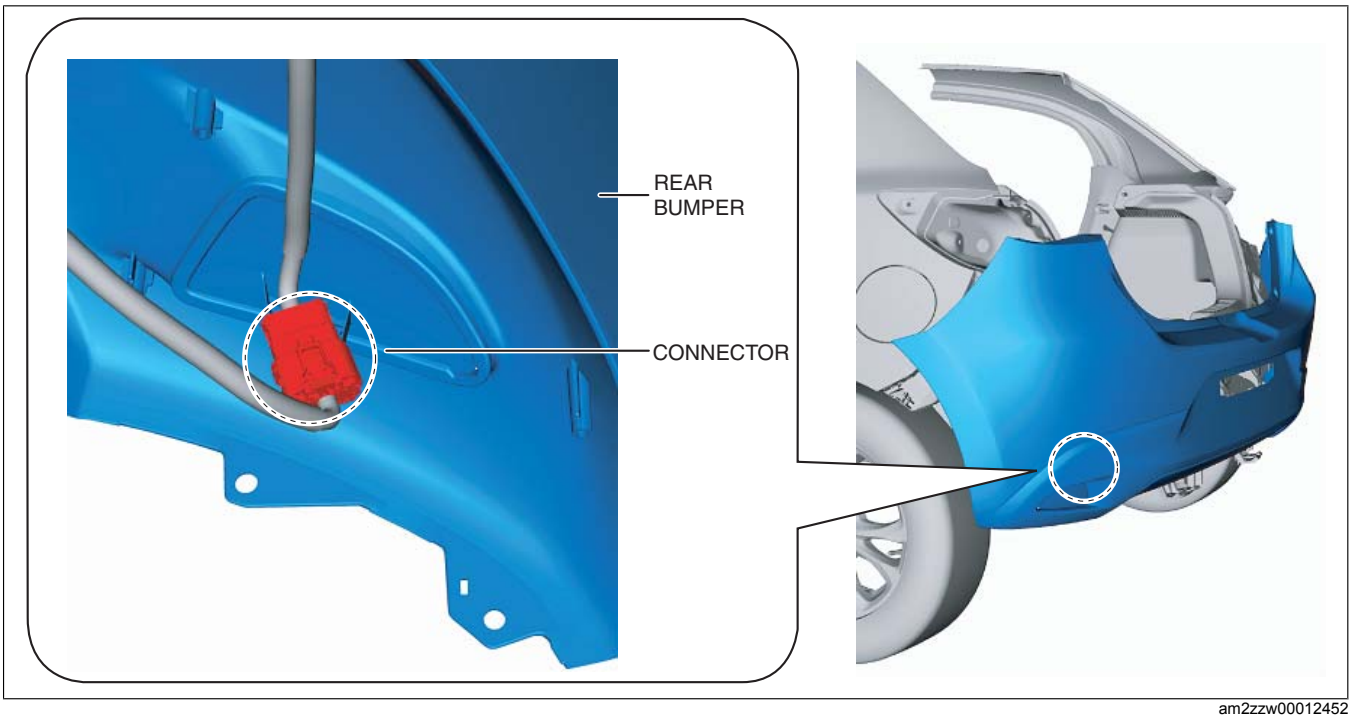


am2zzw00012452

2. Press the rear bumper in the direction of the arrow shown in the figure and install the rear bumper to the rear bumper bracket and the body.

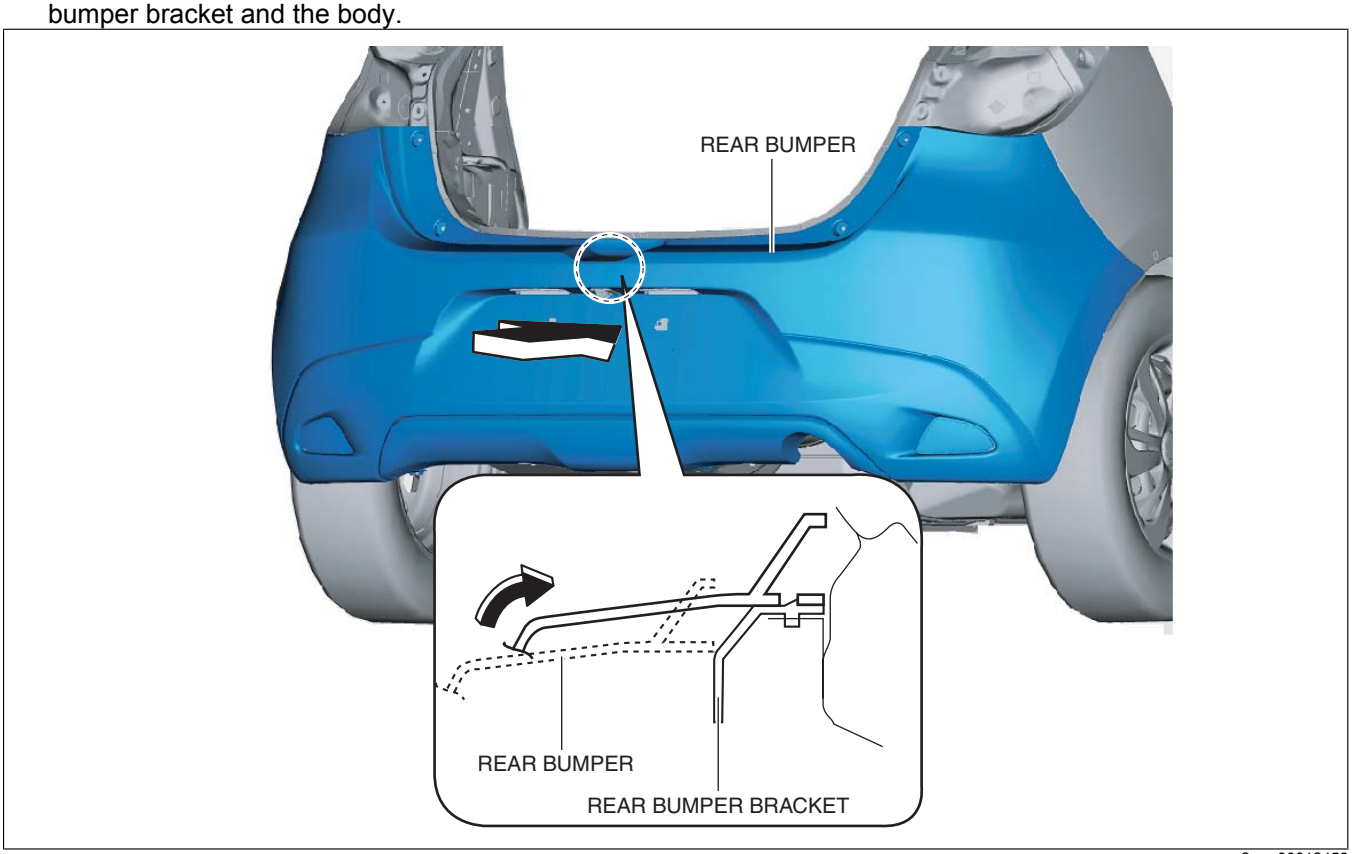


am2zzw00012453

3. Hook the rear bumper to the rear bumper silder in the order show in the figure.

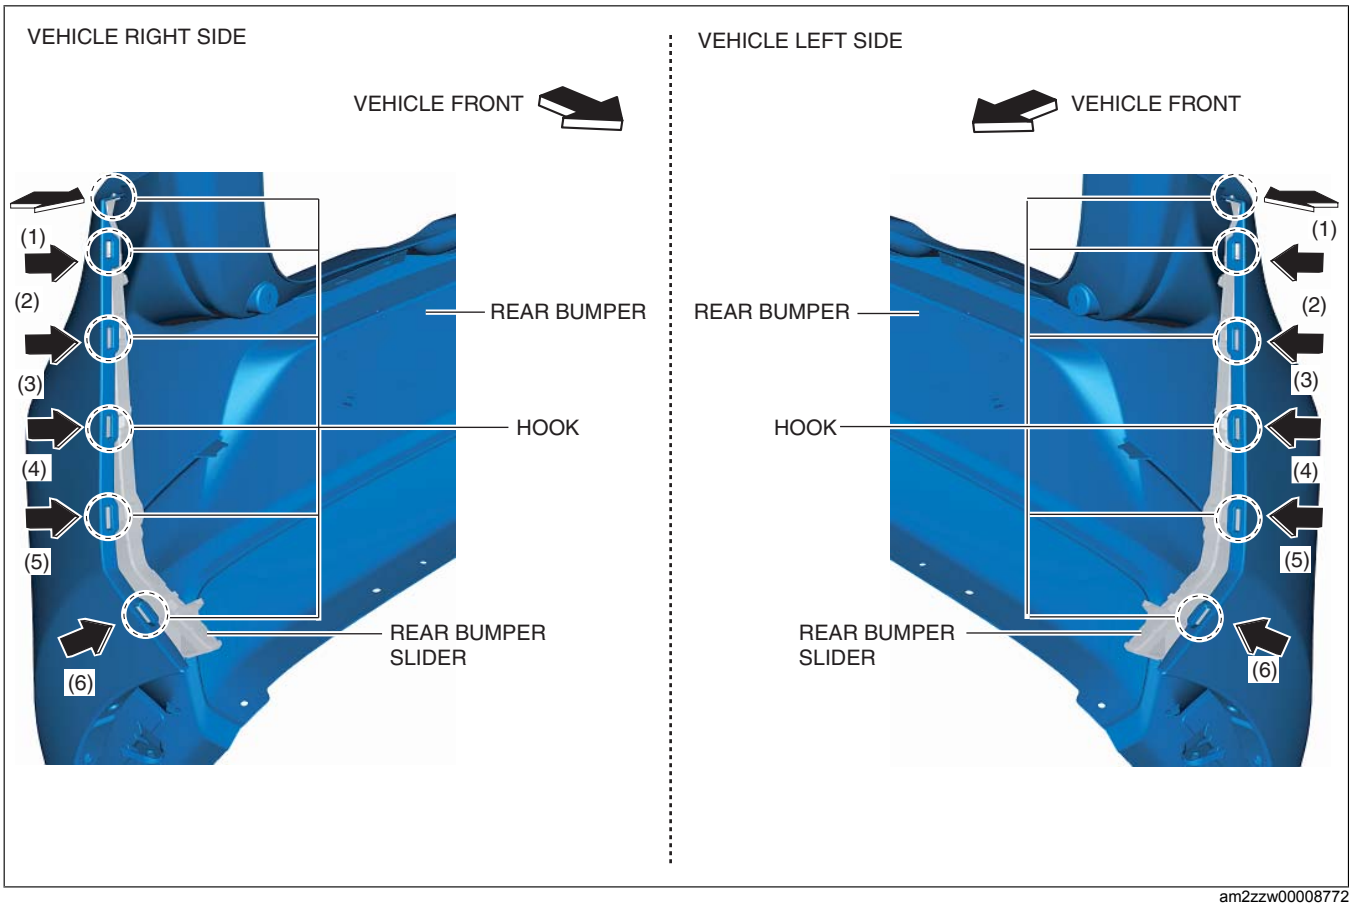


am2zzw00008772

4. Install the screws and fasteners.

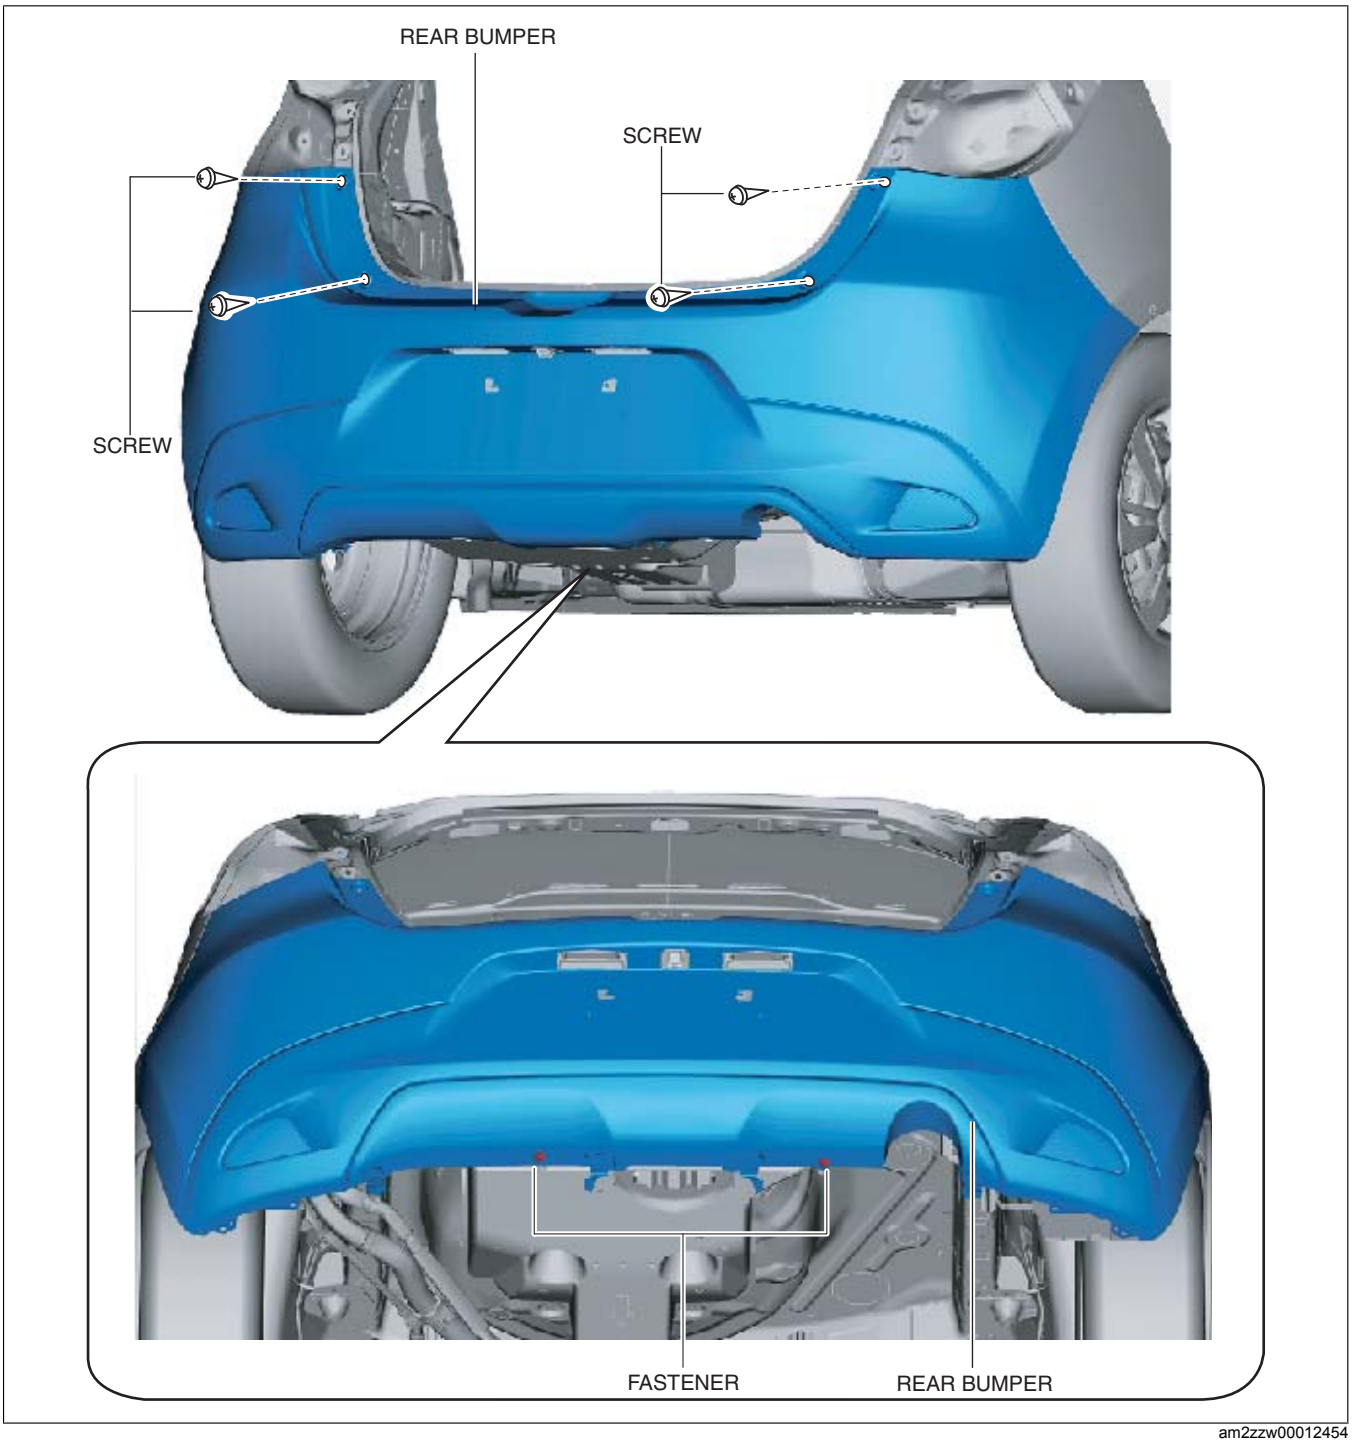

am2zzw00012454

5. Install the screws.

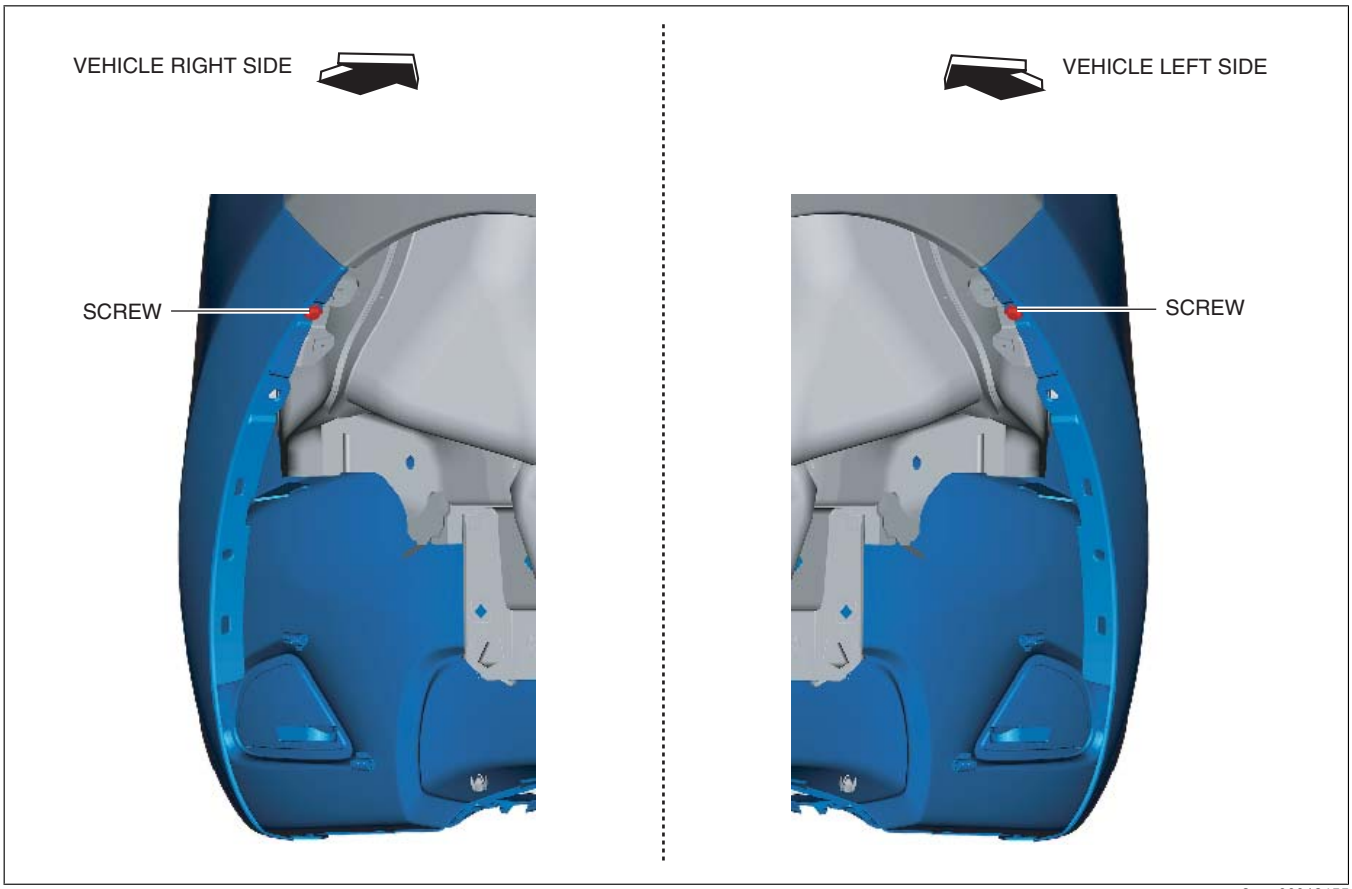

am2zzw00012455

6. Install the rear splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
7. Install the rear combination light (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
8. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
9. If the rear bumper is replaced, perform the blind spot monitoring radar aiming. (with blind spot monitoring system) (See BLIND SPOT MONITORING (BSM) RADAR AIMING.)

Caution

- **If the rear bumper installation position is changed or individual differences (coating film/thickness) occur, the blind spot monitoring control module radar angle will deviate which could result in the module not detecting a vehicle approaching from the rear correctly. If the rear bumper is replaced, perform the blind spot monitoring (BSM) radar aiming.**