
FUEL-FILLER LID ADJUSTMENT

id091000800200

4SD

1. Verify that the gap and height difference between the fuel-filler lid and body.

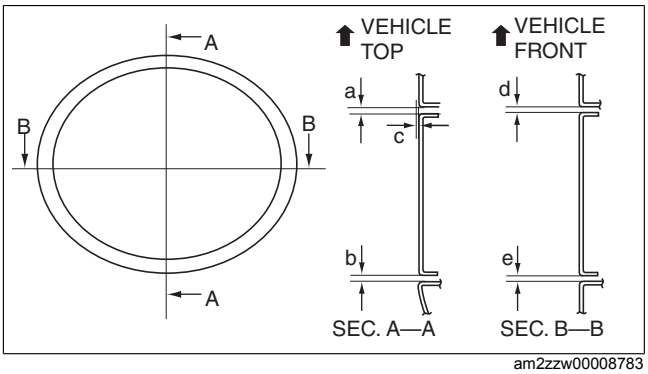


am2zzw00008783

Standard clearance
a: 1.8—3.7 mm {0.08—0.14 in}
b: 0.8—2.8 mm {0.04—0.11 in}
c: -0.5—1.5 mm {-0.01—0.05 in}
d: 1.6—3.5 mm {0.07—0.13 in}
e: 1.8—3.7 mm {0.08—0.14 in}

- If the measured value exceeds the standard clearance, adjust the fuel-filler lid using the following procedure:
  1. Loosen the bolts and adjust the fuel-filler lid. (See FUEL-FILLER LID REMOVAL/INSTALLATION.)
  2. Tighten the bolts. (See FUEL-FILLER LID REMOVAL/INSTALLATION.)
  3. Verify that the gap and height difference between the fuel-filler lid and body is within the specification.

5HB

1. Verify that the gap and height difference between the fuel-filler lid and body.

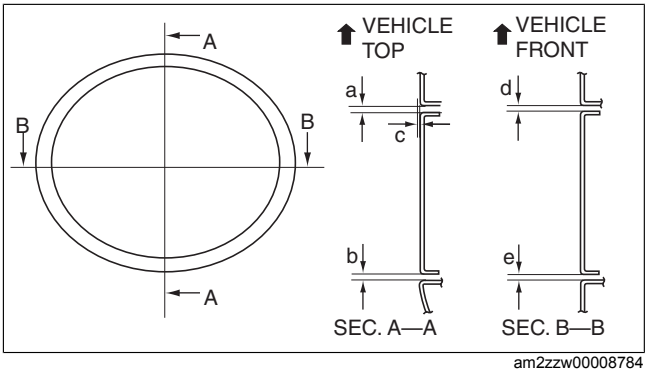

am2zzw00008784

Standard clearance
a: 1.8—3.7 mm {0.08—0.14 in}
b: 0.8—2.7 mm {0.04—0.10 in}
c: -1.5—0.5 mm {-0.05—0.01 in}
d: 1.6—3.5 mm {0.07—0.13 in}
e: 1.9—3.8 mm {0.08—0.14 in}

- If the measured value exceeds the standard clearance, adjust the fuel-filler lid using the following procedure:
  1. Loosen the bolts and adjust the fuel-filler lid. (See FUEL-FILLER LID REMOVAL/INSTALLATION.)
  2. Tighten the bolts. (See FUEL-FILLER LID REMOVAL/INSTALLATION.)
  3. Verify that the gap and height difference between the fuel-filler lid and body is within the specification.