
TRUNK LID ADJUSTMENT

id091000801700

1. Measure the height difference between the trunk lid and the body.

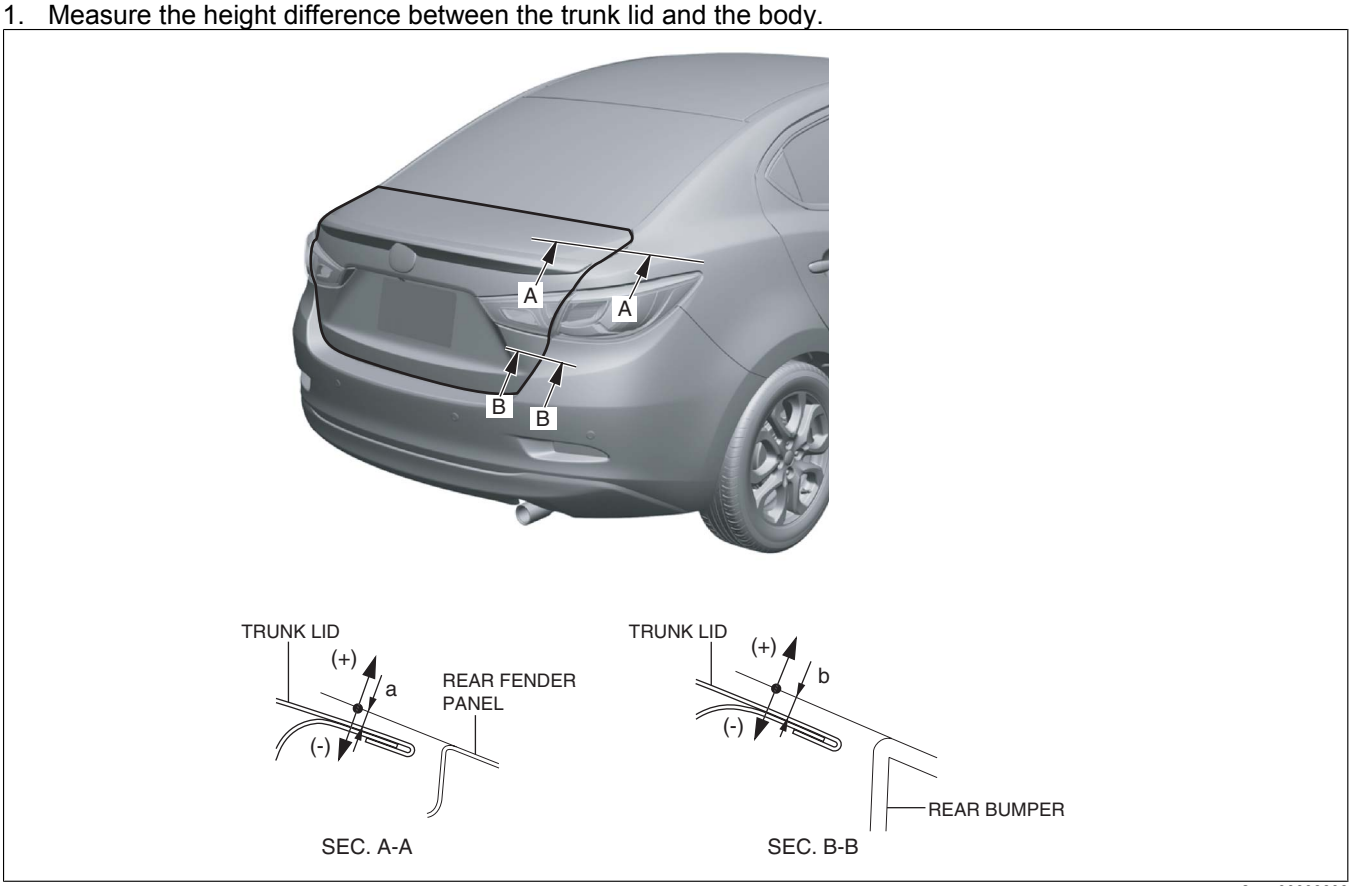


am2zzw00008808

Standard Clearance
a: 1.1-0.9 mm {0.04-0.03 in}
b: -1.5—0.5 mm {–0.05—0.01 in}

- If the measured value exceeds the standard clearance, adjust the trunk lid using the following procedure:
  1. Loosen the bolts, and reposition the trunk lid. (See TRUNK LID REMOVAL/INSTALLATION.)
  2. Tighten the bolts. (See TRUNK LID REMOVAL/INSTALLATION.)
  3. Verify that the height difference between the trunk lid and the body is within the specification.

2. Measure the gap between the trunk lid and the body.

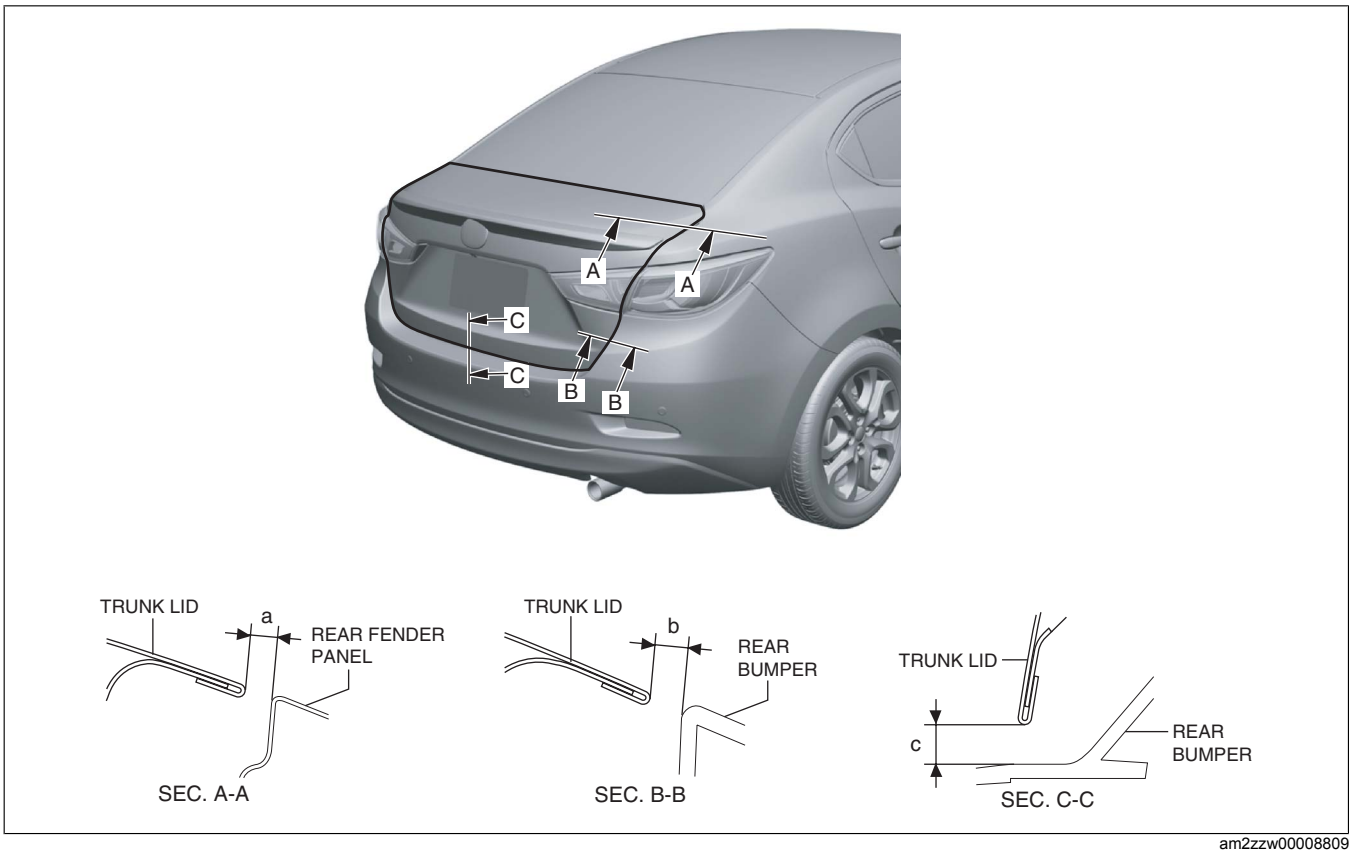

am2zzw00008809

Standard Clearance
a: 2.5—4.5 mm {0.10—0.17 in}
b: 2.7—4.7 mm {0.11—0.18 in}
c: 4.0—8.0 mm {0.16—0.31 in}

- If the gap is out of the standard clearance, adjust the trunk lid using the following procedure:
  1. Loosen the bolts, and reposition the trunk lid lock striker. (See TRUNK LID LOCK STRIKER REMOVAL/INSTALLATION.)
  2. Tighten the bolts. (See TRUNK LID LOCK STRIKER REMOVAL/INSTALLATION.)
  3. Verify that the gap between the trunk lid and the body is within the specification.
  4. Verify that the trunk lid opens/closes smoothly.
     - If the trunk lid does not open/close smoothly, adjust the trunk lid lock striker position. (See TRUNK LID LOCK STRIKER REMOVAL/INSTALLATION.)

3. Spray or pour water on the trunk lid and surrounding area using a hose or high pressure water pressure car wash and verify that there is no water leakage.