
SHROUD PANEL REMOVAL/INSTALLATION

id091000801900


SKYACTIV-G 1.3, SKYACTIV-G 1.5

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Front bumper (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
   (2) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (3) Bumper stiffener lower (See BUMPER STIFFENER LOWER REMOVAL/INSTALLATION.)
   (4) Seal plate (See SEAL PLATE REMOVAL/INSTALLATION.)
   (5) Front under cover No.1 (See FRONT UNDER COVER No.1 REMOVAL/INSTALLATION.)
   (6) Crash zone sensor (See CRASH ZONE SENSOR REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
   (7) Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
   (8) Bonnet latch (See BONNET LATCH REMOVAL/INSTALLATION.)
   (9) Horn (See HORN REMOVAL/INSTALLATION.)
3. While pressing the washer tank bracket tabs in the directions of arrows (1) shown in the figure, pull the washer tank bracket in the direction of arrow (2) and remove it from the shroud panel.
4. Remove the wiring harness clips secured to the shroud panel.

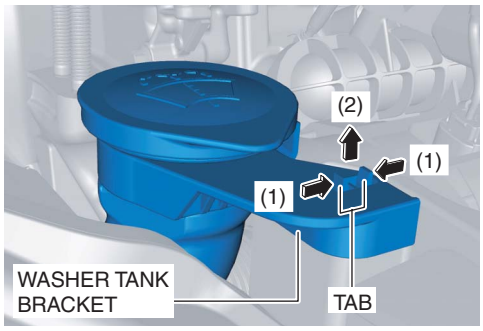

am2zzw00008810

5. Remove the clip in the direction of the arrow shown in the figure and set the cooler pipe aside.

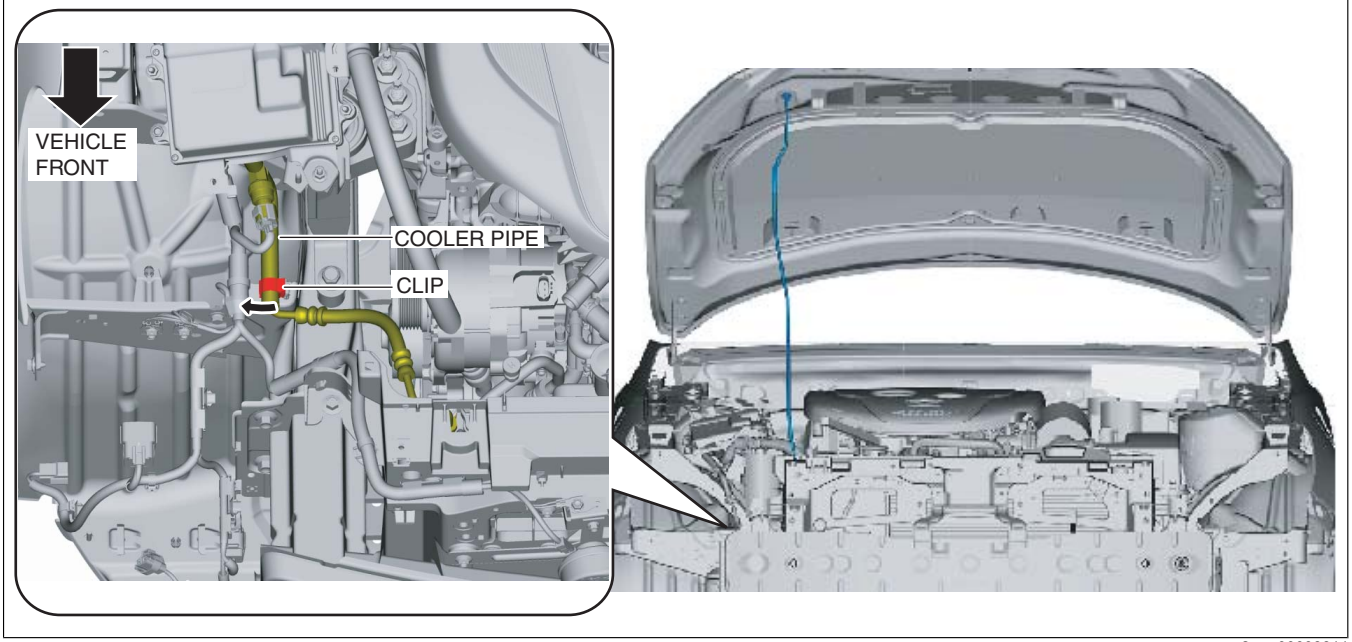


am2zzw00008811

Warning

- **Secure the bonnet stay using packing tape so that it does not detach. Otherwise, the bonnet may fall and cause injury.**

6. Relocate the bonnet stay to the position shown in the figure.

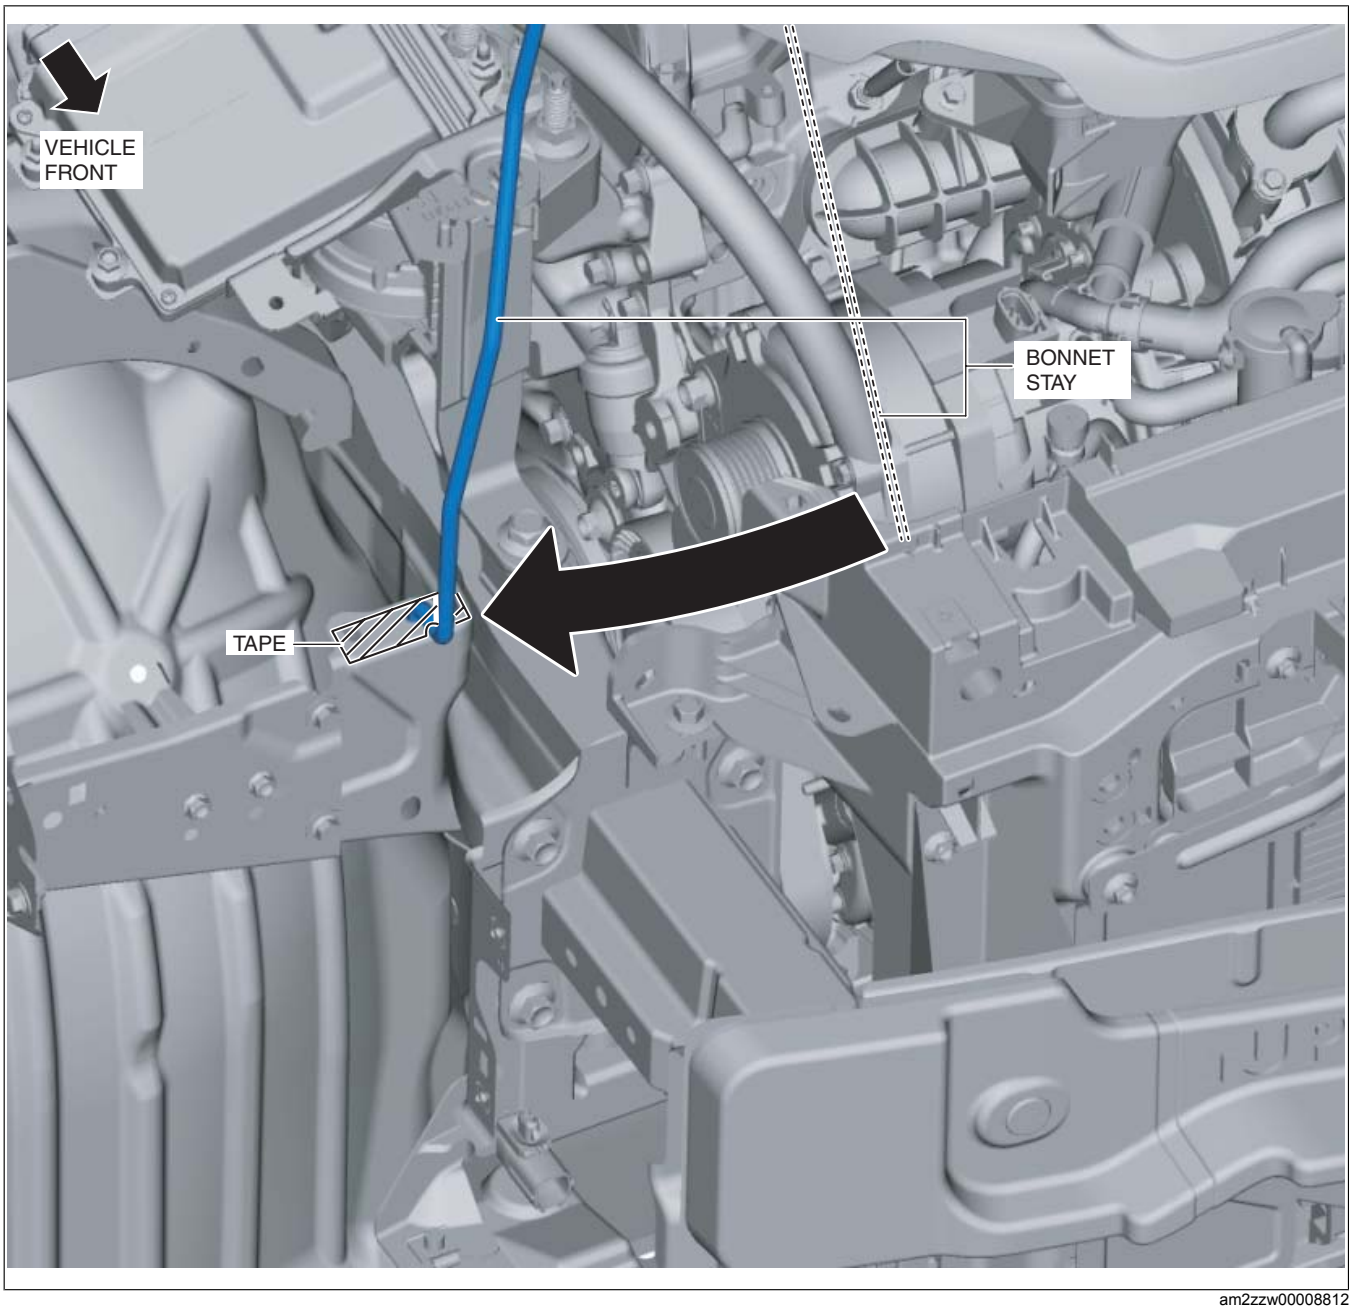


am2zzw00008812

Caution


- **The front bumper reinforcement supports the shroud panel. After removing the front bumper reinforcement, an excessive load applied to the shroud panel could result in damage. When removing the front bumper reinforcement, always use a floor jack to support the shroud panel.**

7. Support the shroud panel using a floor jack.

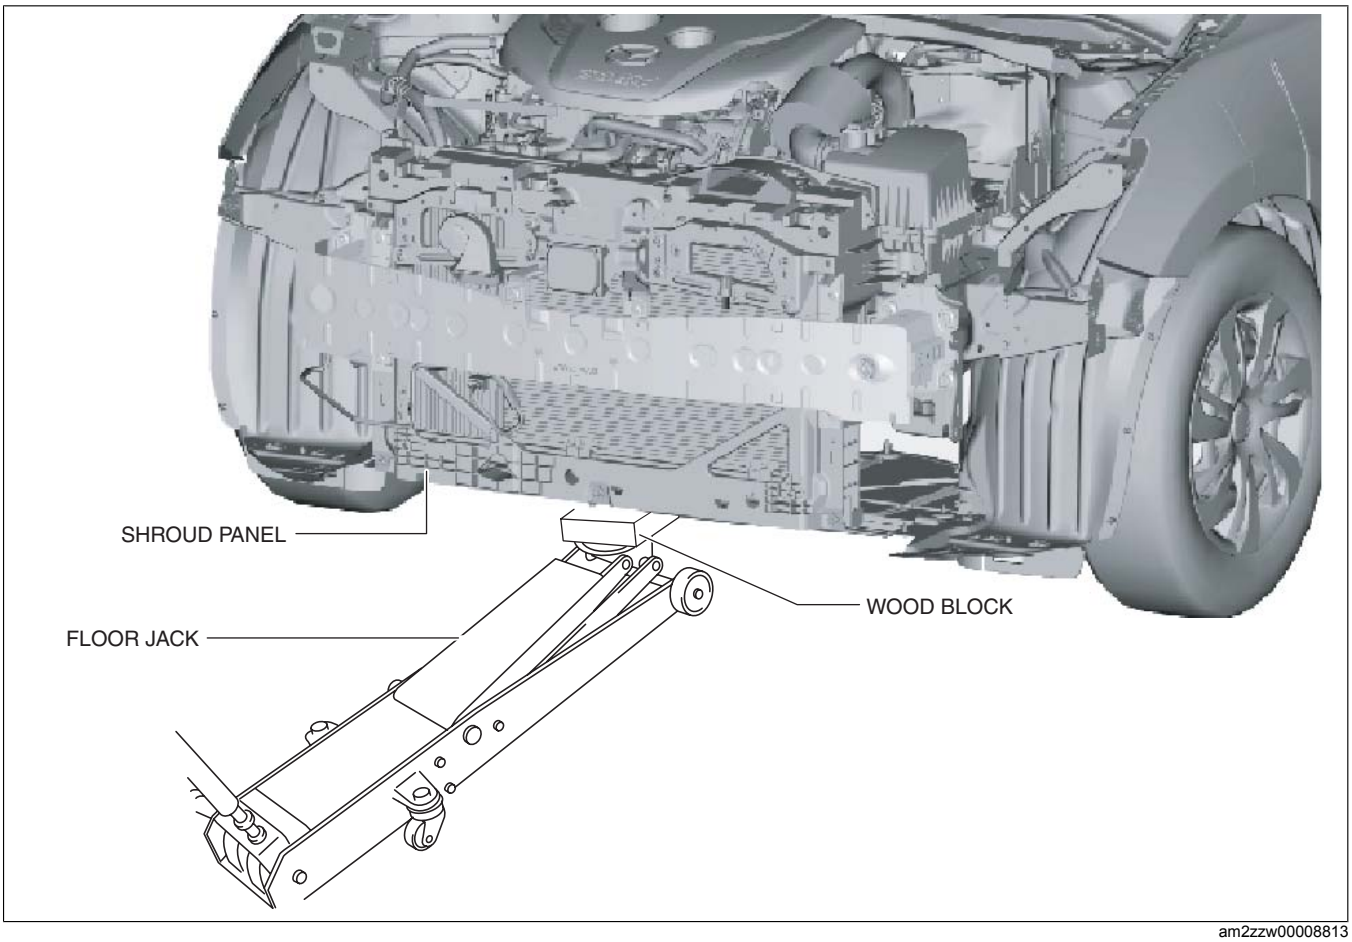

am2zzw00008813

8. Remove the front bumper reinforcement. (See FRONT BUMPER REINFORCEMENT REMOVAL/ INSTALLATION.)
9. Slightly lower the floor jack.
10. Press down the tabs in the direction of the arrow (1) shown in the figure, remove the upper rubber mount bracket in the direction of the arrow (2) shown in the figure.

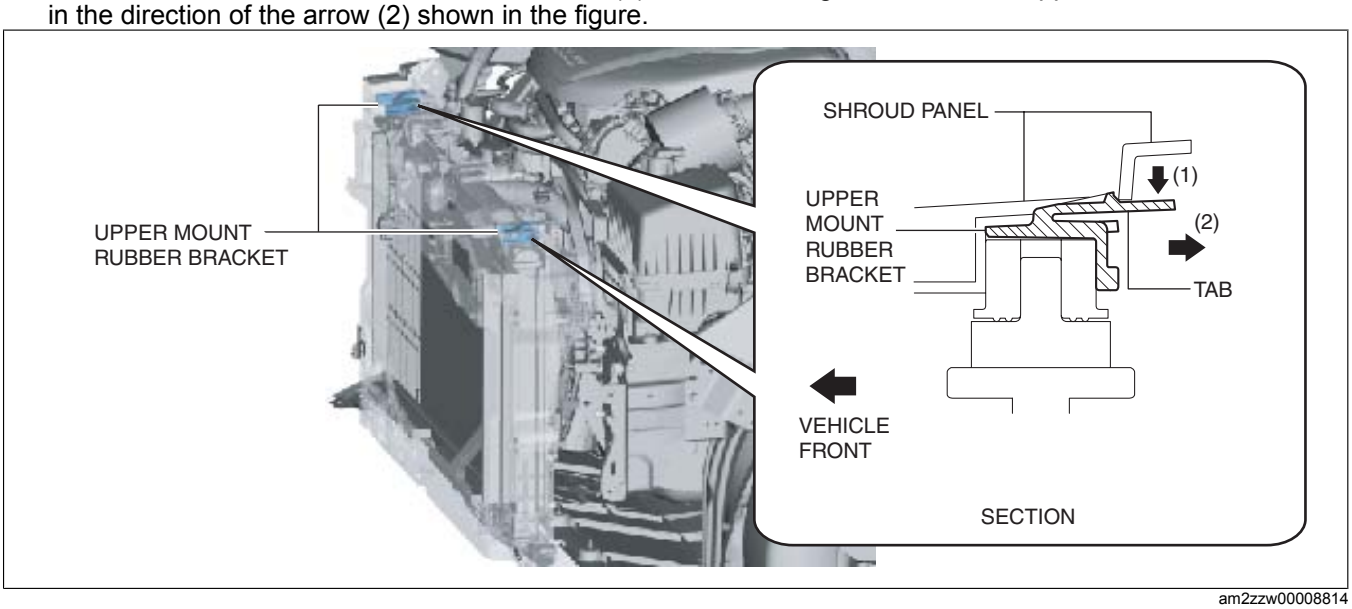


am2zzw00008814

Caution


- **Remove the radiator from the shroud panel using two people. Otherwise, the radiator may fall and cause injury.**

11. Hold the upper part of the radiator by hand and tilt the shroud panel toward the vehicle front.

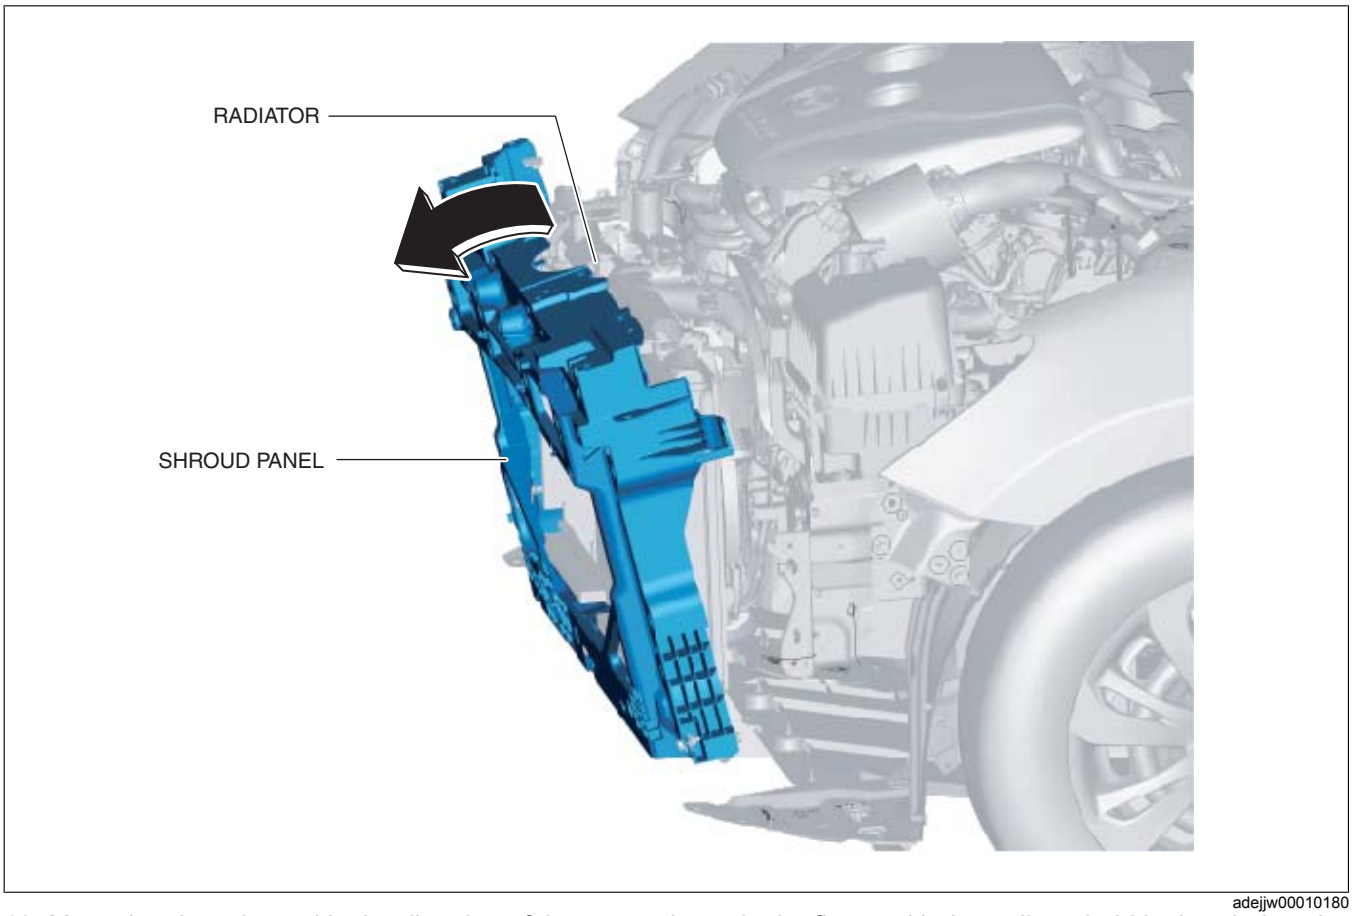


adejjw00010180

12. Move the shroud panel in the direction of the arrow shown in the figure with the radiator held by hand, detach the radiator from the lower rubber mount.

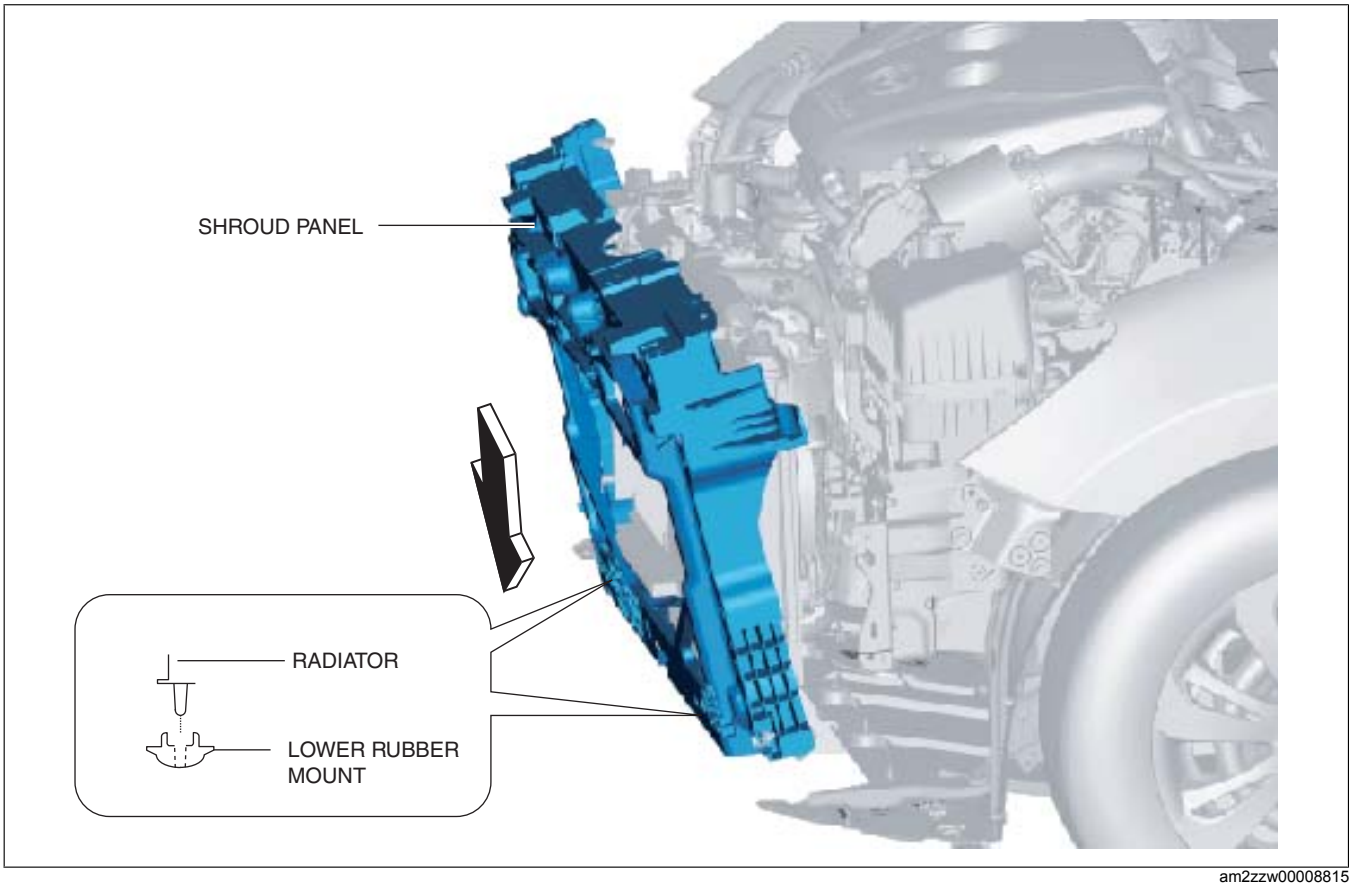

am2zzw00008815

13. Remove the shroud panel.
14. Support the radiator using a floor jack.

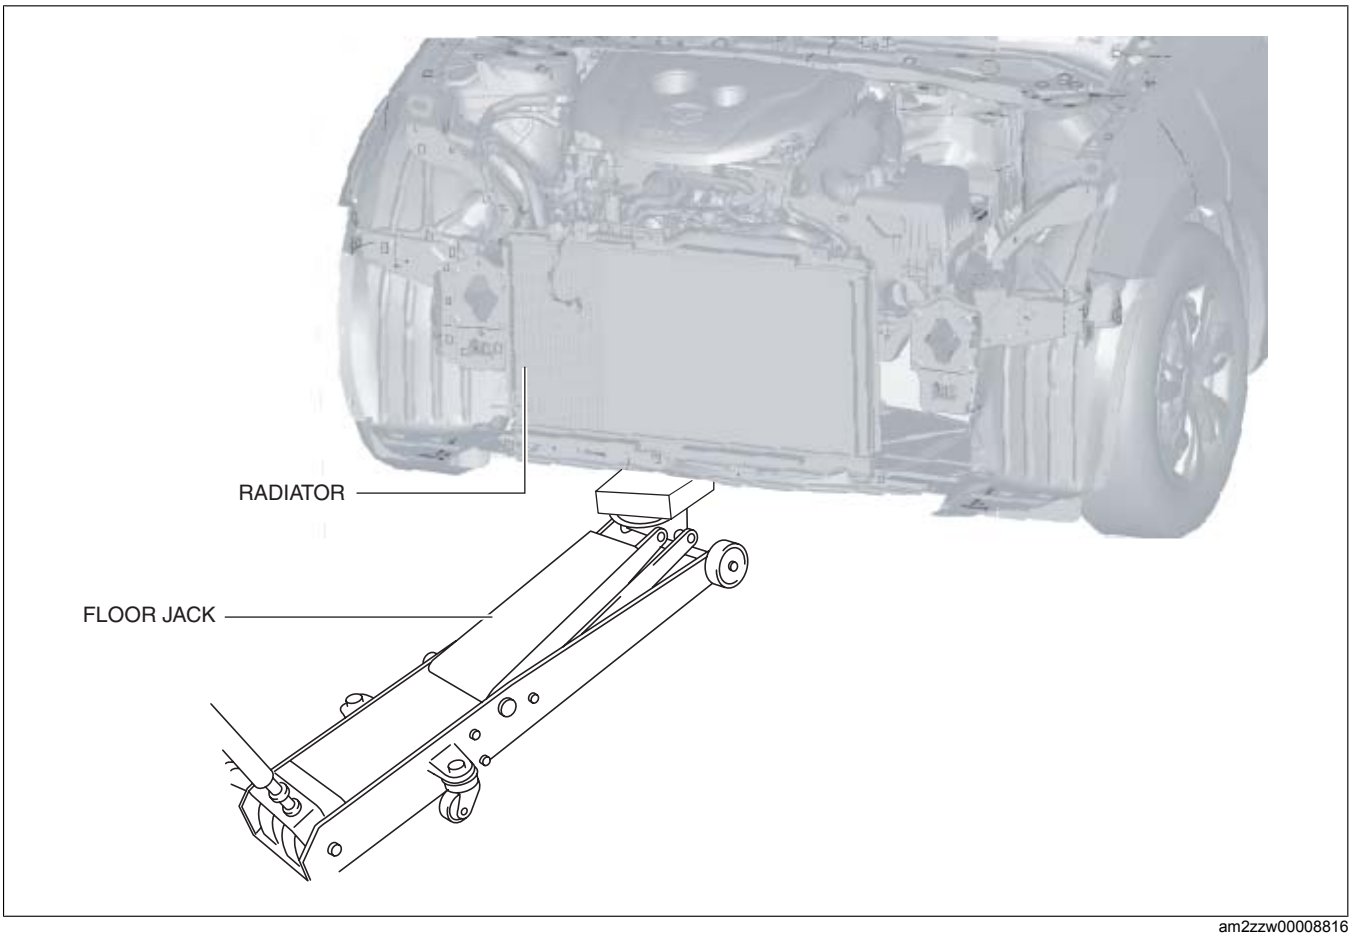


am2zzw00008816

15. Install in the reverse order of removal.
16. Adjust the headlight aiming. (See HEADLIGHT AIMING.)

SKYACTIV-D 1.5

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Discharge the refrigerant. (See REFRIGERANT CHARGING.)
3. Remove the following parts:
   (1) Front bumper (See FRONT BUMPER REMOVAL.)(See FRONT BUMPER INSTALLATION.)
   (2) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (3) Bumper stiffener lower (See BUMPER STIFFENER LOWER REMOVAL/INSTALLATION.)
   (4) Seal plate (See SEAL PLATE REMOVAL/INSTALLATION.)
   (5) Front under cover No.1 (See FRONT UNDER COVER No.1 REMOVAL/INSTALLATION.)
   (6) Crash zone sensor (See CRASH ZONE SENSOR REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
   (7) Ambient temperature senser (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
   (8) Bonnet latch (See BONNET LATCH REMOVAL/INSTALLATION.)
   (9) Horn (See HORN REMOVAL/INSTALLATION.)
   (10)Cooler pipe A (See REFRIGERANT LINE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. While pressing the washer tank bracket tabs in the directions of arrows (1) shown in the figure, pull the washer tank bracket in the direction of arrow (2) and remove it from the shroud panel.
5. Remove the wiring harness clips secured to the shroud panel.

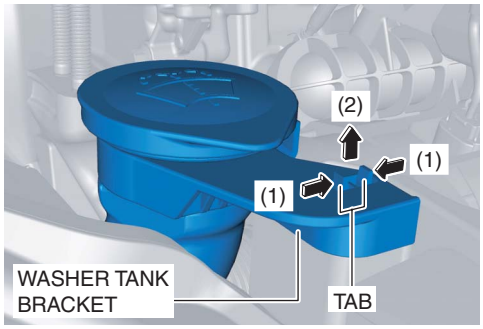


am2zzw00008810

Warning

- **Secure the bonnet stay using packing tape so that it does not detach. Otherwise, the bonnet may fall and cause injury.**

6. Relocate the bonnet stay to the position shown in the figure.

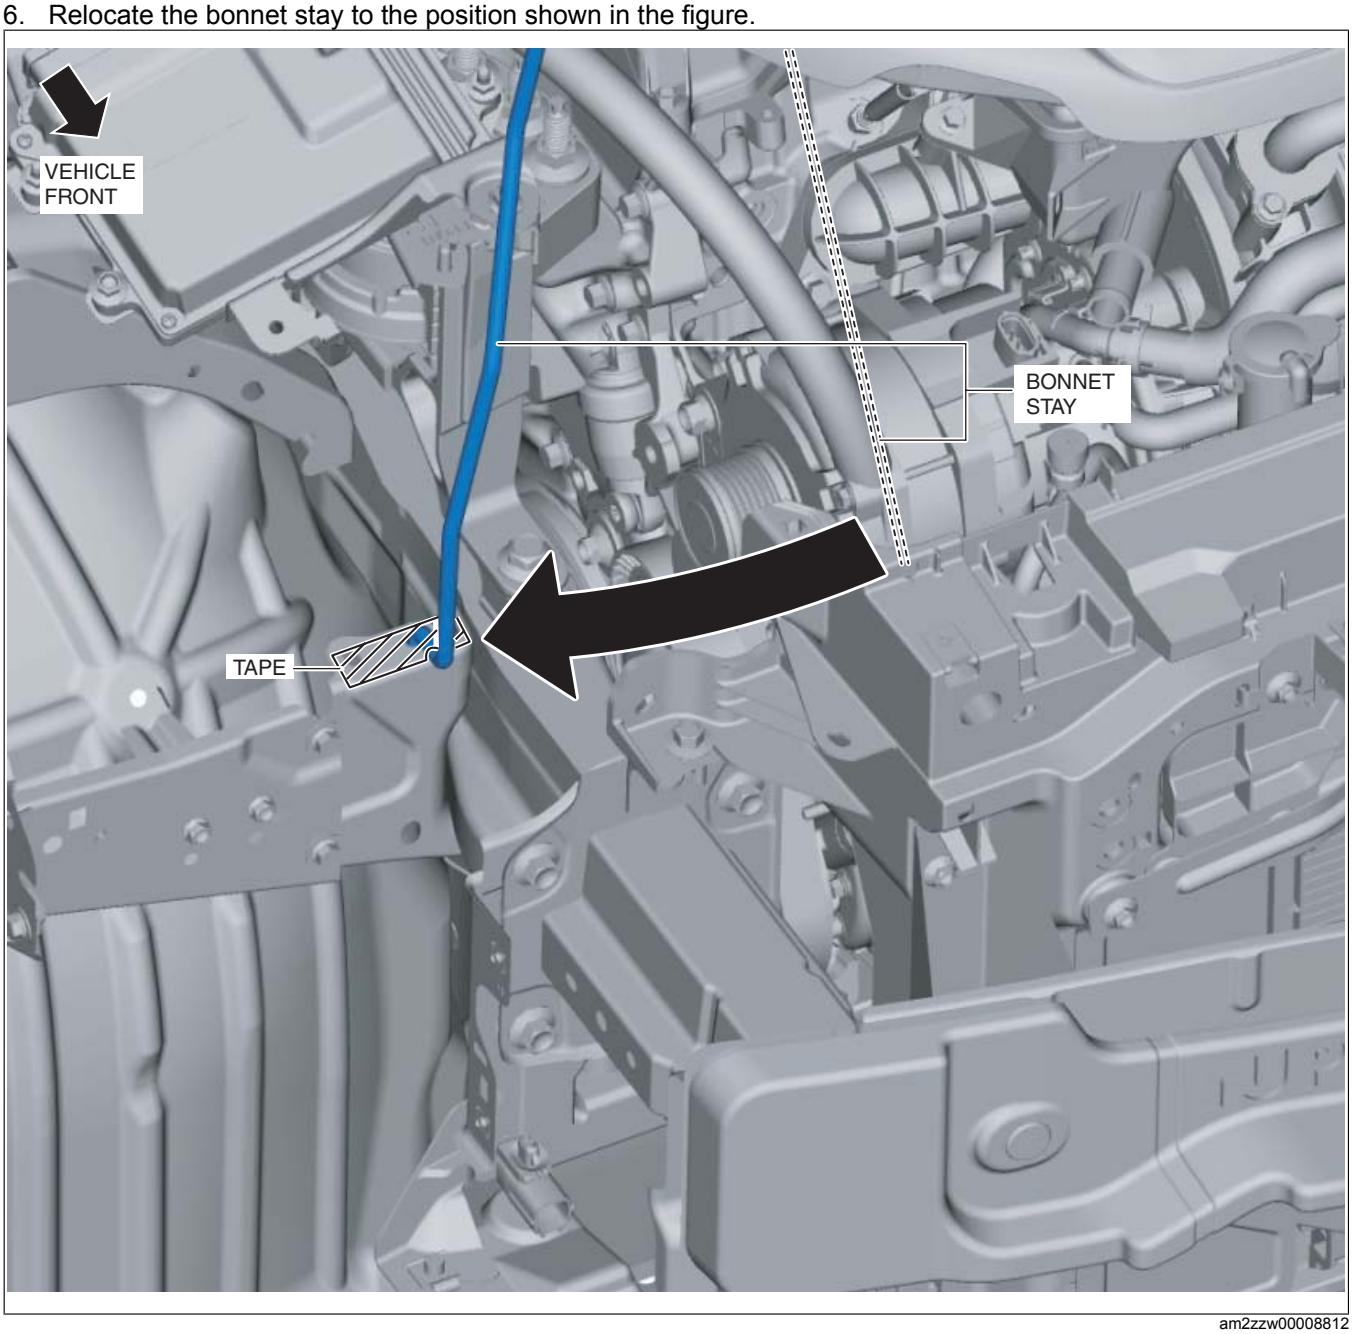


am2zzw00008812

Caution


- **When removing the front bumper reinforcement, always use a floor jack to support the shroud panel. Otherwise, the shroud panel or the radiator may fall and be damaged.**

7. Support the shroud panel using a floor jack.

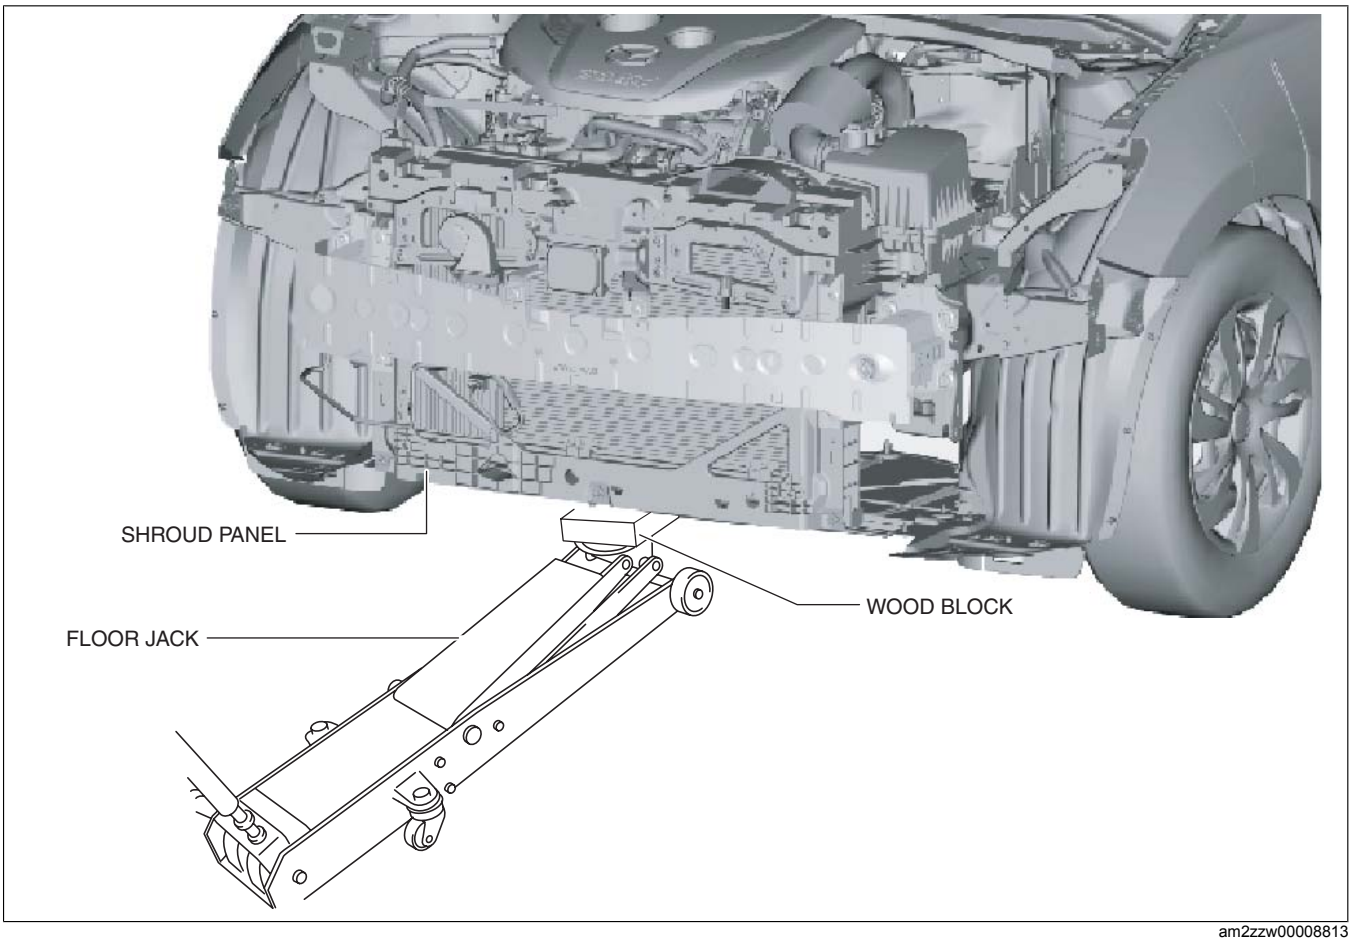

am2zzw00008813

8. Remove the front bumper reinforcement. (See FRONT BUMPER REINFORCEMENT REMOVAL/ INSTALLATION.)
9. Slightly lower the floor jack.
10. Press down the tabs in the direction of the arrow (1) shown in the figure, remove the upper rubber mount bracket in the direction of the arrow (2) shown in the figure.

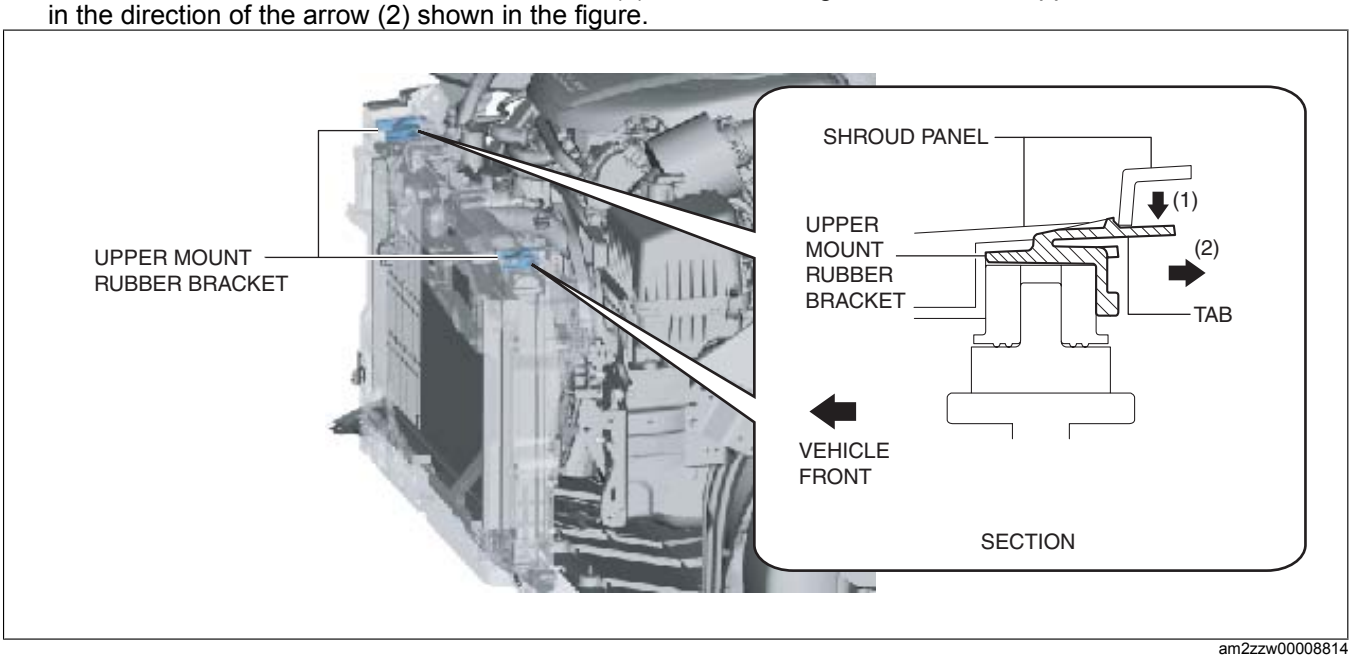


am2zzw00008814

Caution


- **Remove the radiator from the shroud panel using two people. Otherwise, the radiator may fall and be damaged.**

11. Hold the upper part of the radiator by hand and tilt the shroud panel toward the vehicle front.

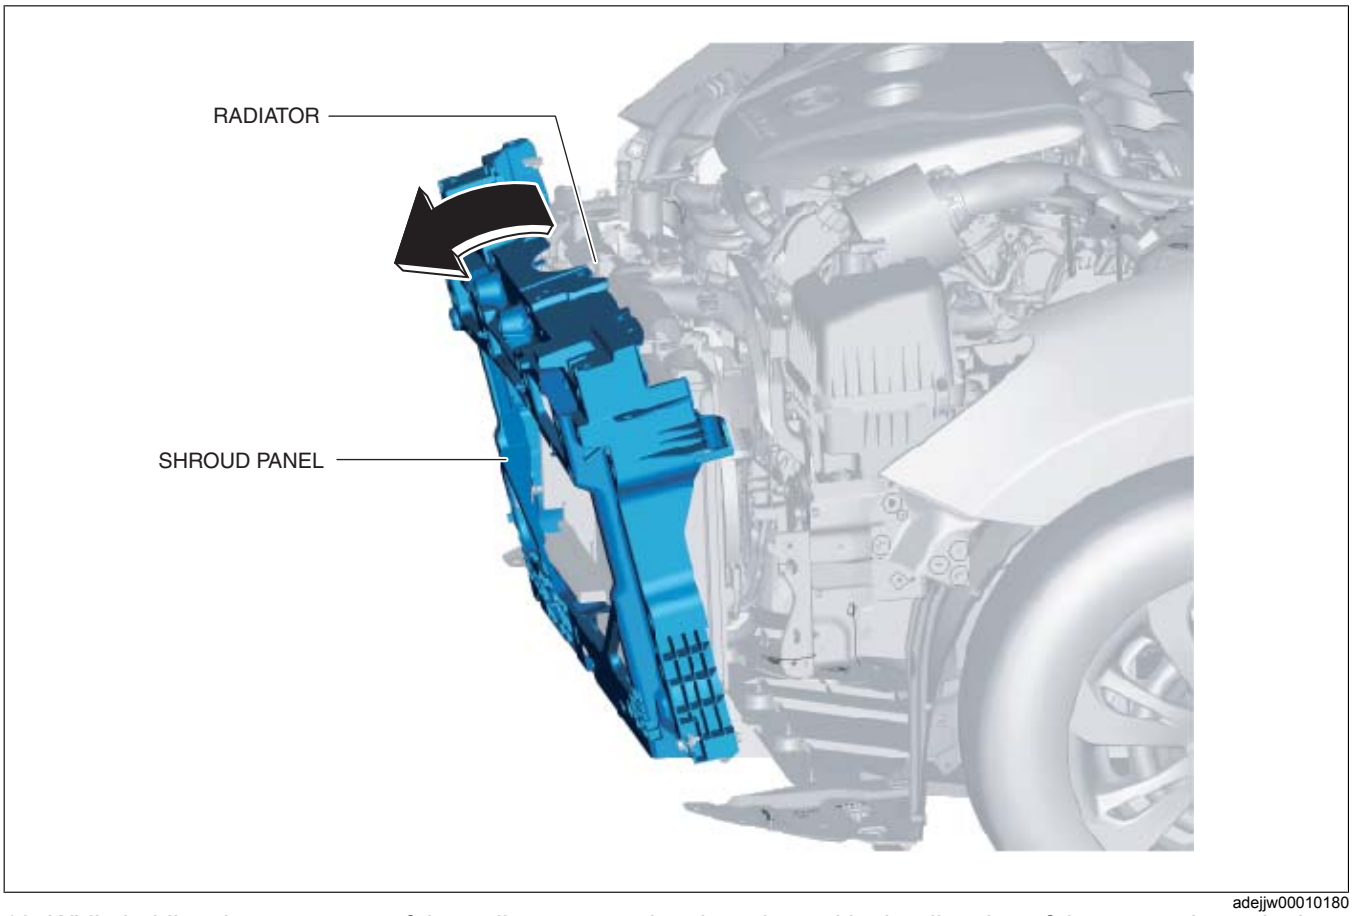


adejjw00010180

12. While holding the upper part of the radiator, move the shroud panel in the direction of the arrow shown in the figure and detach the lower rubber mount from the radiator.

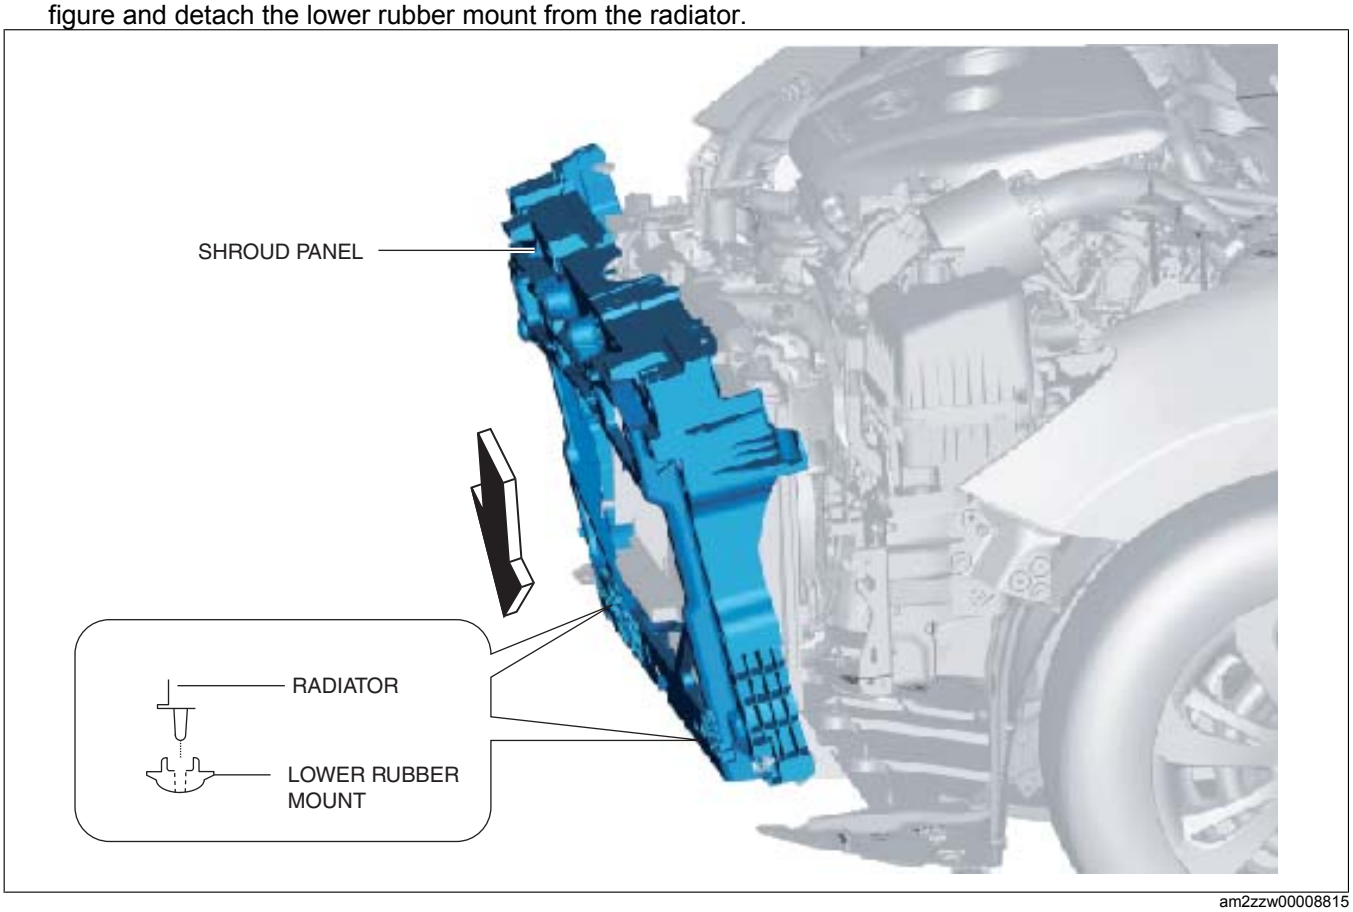

am2zzw00008815

13. Remove the shroud panel.
14. Support the radiator using a floor jack.

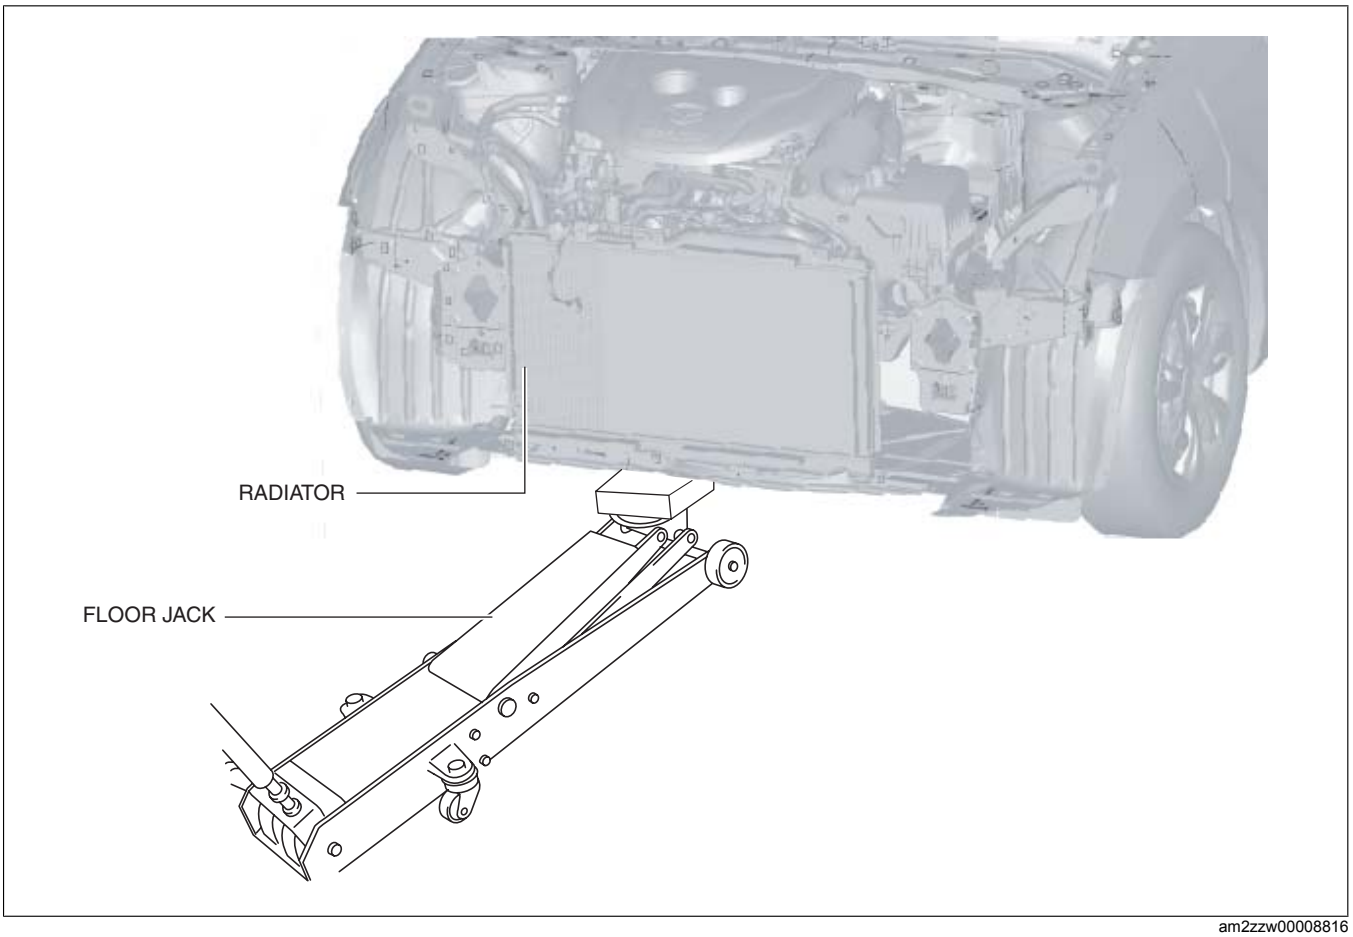

am2zzw00008816

15. Install in the reverse order of removal.
16. Adjust the headlight aiming. (See HEADLIGHT AIMING.)