COWL PANEL REMOVAL/INSTALLATION

id091000802000


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
   (2) Cowl grille (See COWL GRILLE REMOVAL/INSTALLATION.)
   (3) Windshield wiper motor and link (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
   (4) Keyless beeper (with advanced keyless entry system) (See KEYLESS BEEPER REMOVAL/INSTALLATION.)

Caution

- **Before removing the cowl panel, secure the side cowl grille.**


3. Secure the side cowl grille to the windshield using adhesive tapes.

L.H.D.

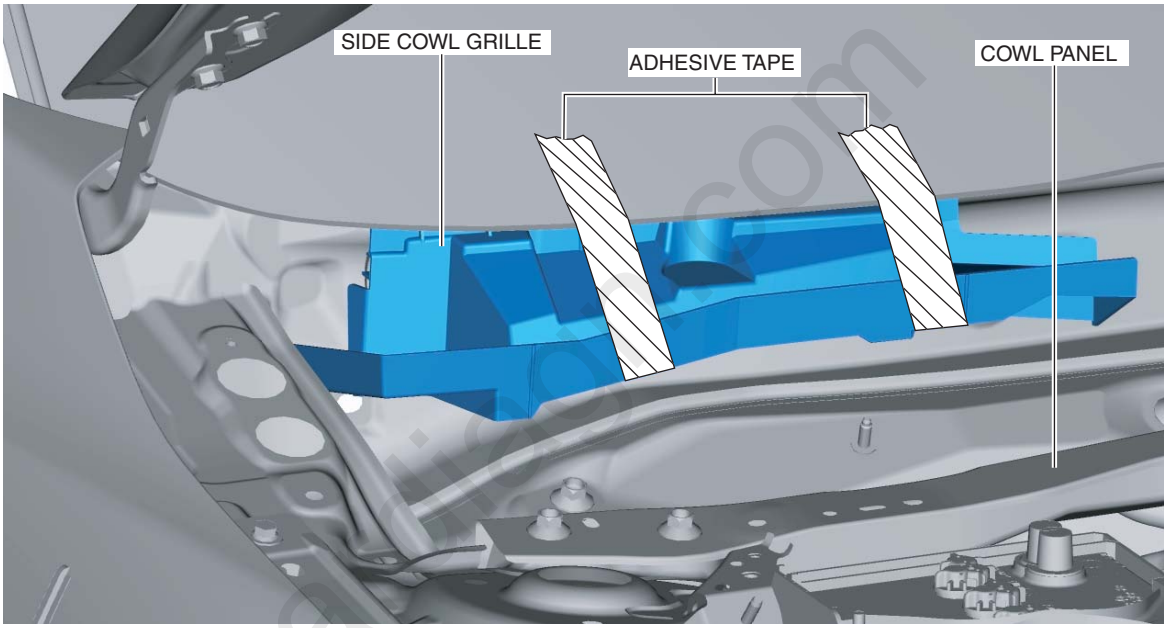

am2zzw00008817


R.H.D.

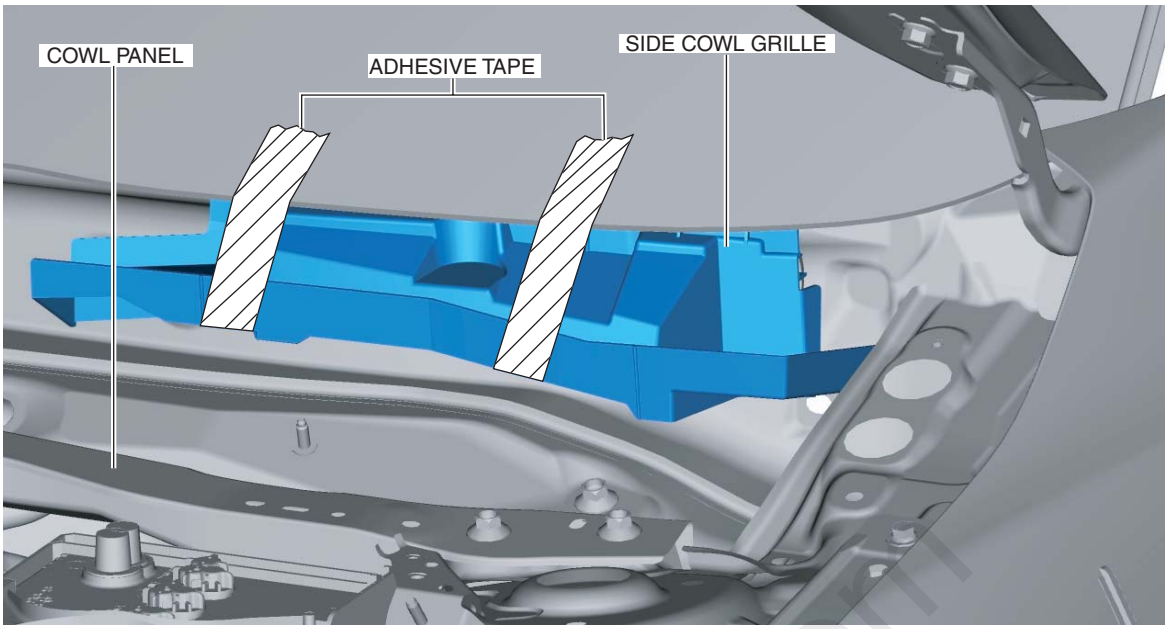

am2zzw00008818


4. Remove the wiring harness clips secured to the cowl panel.
5. Detach the vacuum hose clip from the cowl panel. (See VACUUM HOSE REMOVAL/INSTALLATION [L.H.D.].) (See VACUUM HOSE REMOVAL/INSTALLATION [R.H.D.].)
6. Remove the bolts.

L.H.D.

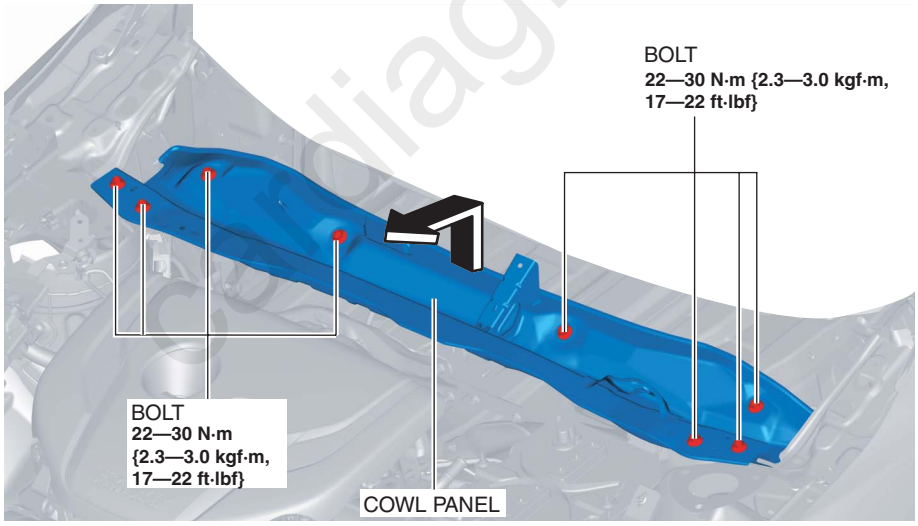

am2zzw00008819

R.H.D.

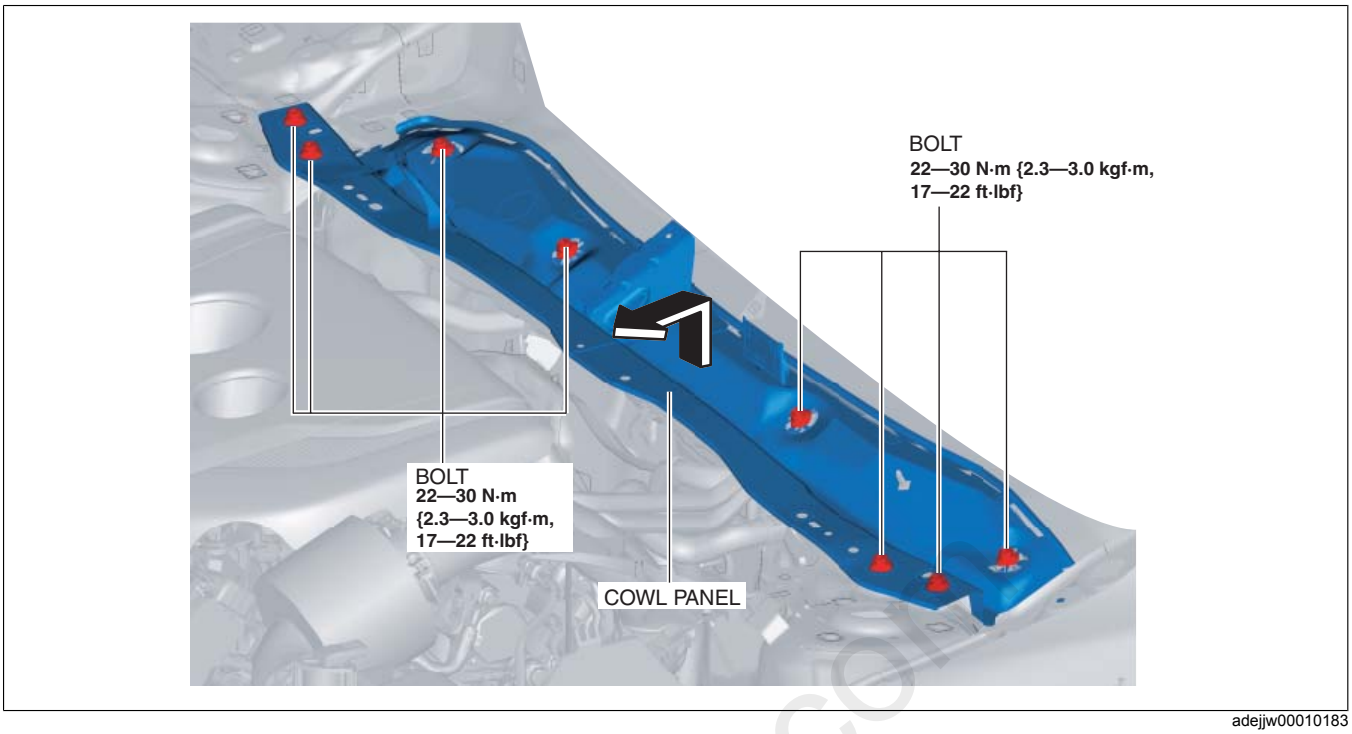

adejjw00010183

7. Remove the cowl panel in the direction of the arrow shown in the figure.
8. Install in the reverse order of removal.

cardiagn.com