
BODY PANELS LOCATION INDEX

id091000802600

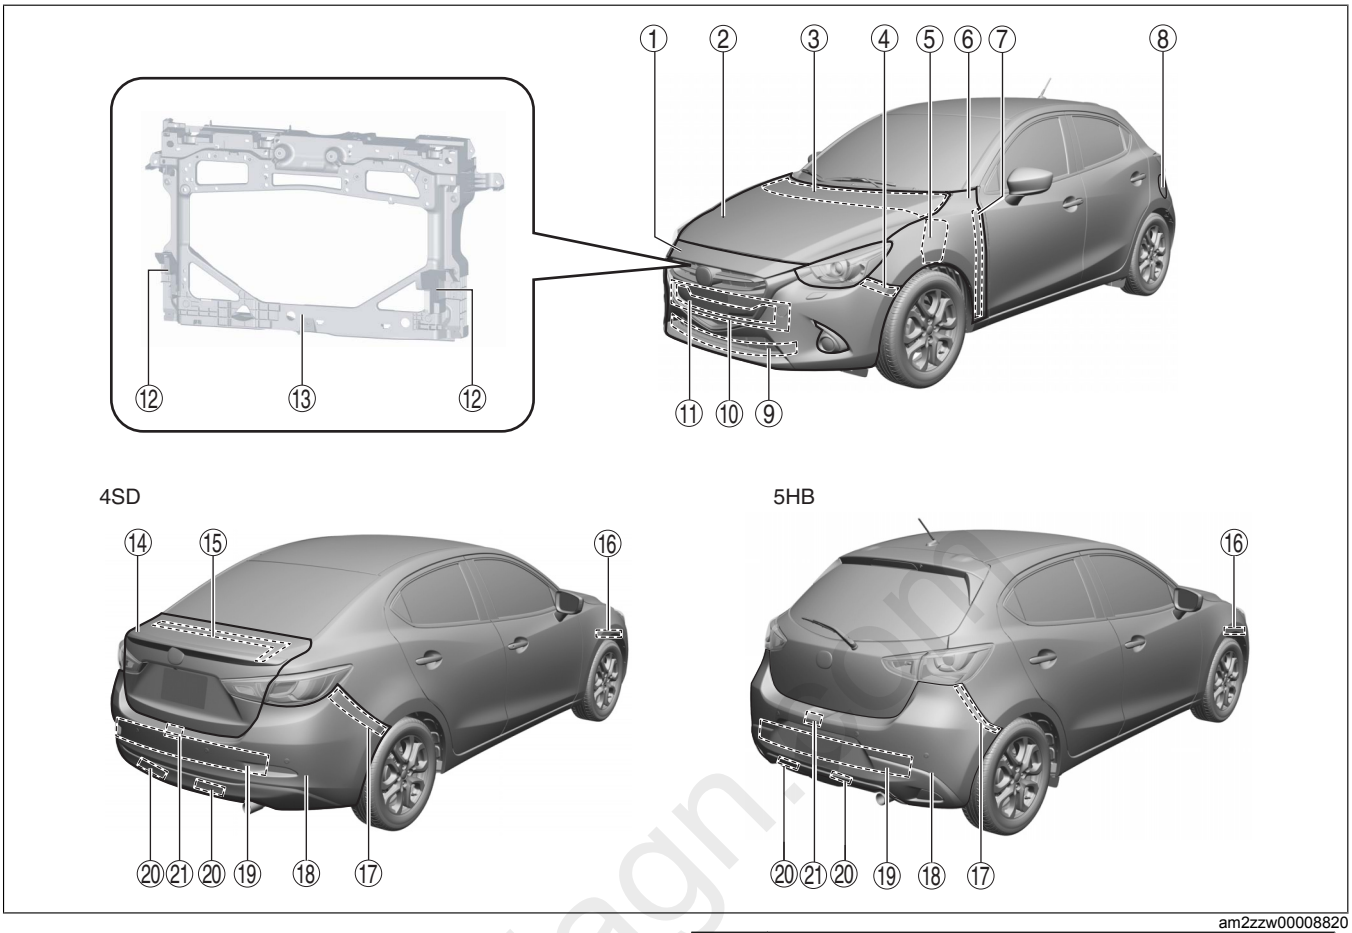

am2zzw00008820

1	Front bumper (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.) (See FRONT BUMPER DISASSEMBLY/ ASSEMBLY.)
2	Bonnet (See BONNET REMOVAL/INSTALLATION.) (See BONNET DISASSEMBLY/ASSEMBLY.) (See BONNET ADJUSTMENT.)
3	Cowl panel (See COWL PANEL REMOVAL/INSTALLATION.)
4	Front bumper slider (See BUMPER SLIDER REMOVAL/ INSTALLATION.)
5	Front fender insulator No.1 (See FRONT FENDER INSULATOR No.1 REMOVAL/INSTALLATION.)
6	Front fender panel (See FRONT FENDER PANEL REMOVAL/ INSTALLATION.)
7	Front fender insulator No.2 (See FRONT FENDER INSULATOR No.2 REMOVAL/INSTALLATION.)
8	Fuel-filler lid (See FUEL-FILLER LID REMOVAL/ INSTALLATION.) (See FUEL-FILLER LID ADJUSTMENT.)
9	Bumper stiffener lower (See BUMPER STIFFENER LOWER REMOVAL/ INSTALLATION.)

10	Front bumper reinforcement (See FRONT BUMPER REINFORCEMENT REMOVAL/INSTALLATION.)
11	Energy-absorbing form (See ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION.)
12	Seal plate (See SEAL PLATE REMOVAL/INSTALLATION.)
13	Shroud panel (See SHROUD PANEL REMOVAL/ INSTALLATION.)
14	Trunk lid (See TRUNK LID REMOVAL/INSTALLATION.) (See TRUNK LID ADJUSTMENT.)
15	Balance spring (See BALANCE SPRING REMOVAL/ INSTALLATION.)
16	Front fender stay (See FRONT FENDER STAY REMOVAL/ INSTALLATION.)
17	Rear bumper slider (See BUMPER SLIDER REMOVAL/ INSTALLATION.)
18	Rear bumper (See REAR BUMPER REMOVAL.) (See REAR BUMPER INSTALLATION.) (See REAR BUMPER DISASSEMBLY/ ASSEMBLY.)
19	Rear bumper reinforcement (See REAR BUMPER REINFORCEMENT REMOVAL/INSTALLATION.)

cardiagn.com

20	Rear bumper stay (See REAR BUMPER STAY REMOVAL/ INSTALLATION.)

21	Rear bumper bracket (See REAR BUMPER BRACKET REMOVAL/ INSTALLATION.)

cardiagn.com