
BUMPER STIFFENER LOWER REMOVAL/INSTALLATION


id091000888900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper.(See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Remove the bolts.

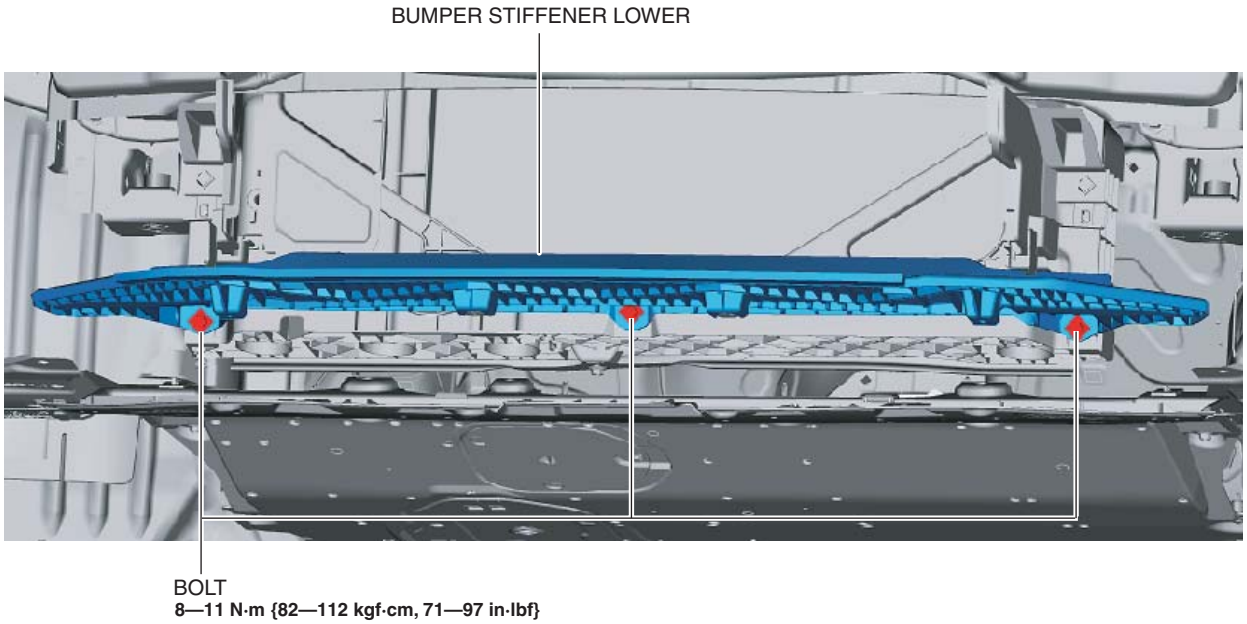

am2zzw00008868

4. Move the bumper stiffener lower in the direction of the arrow shown in the figure, while remove the hooks from the shroud panel.

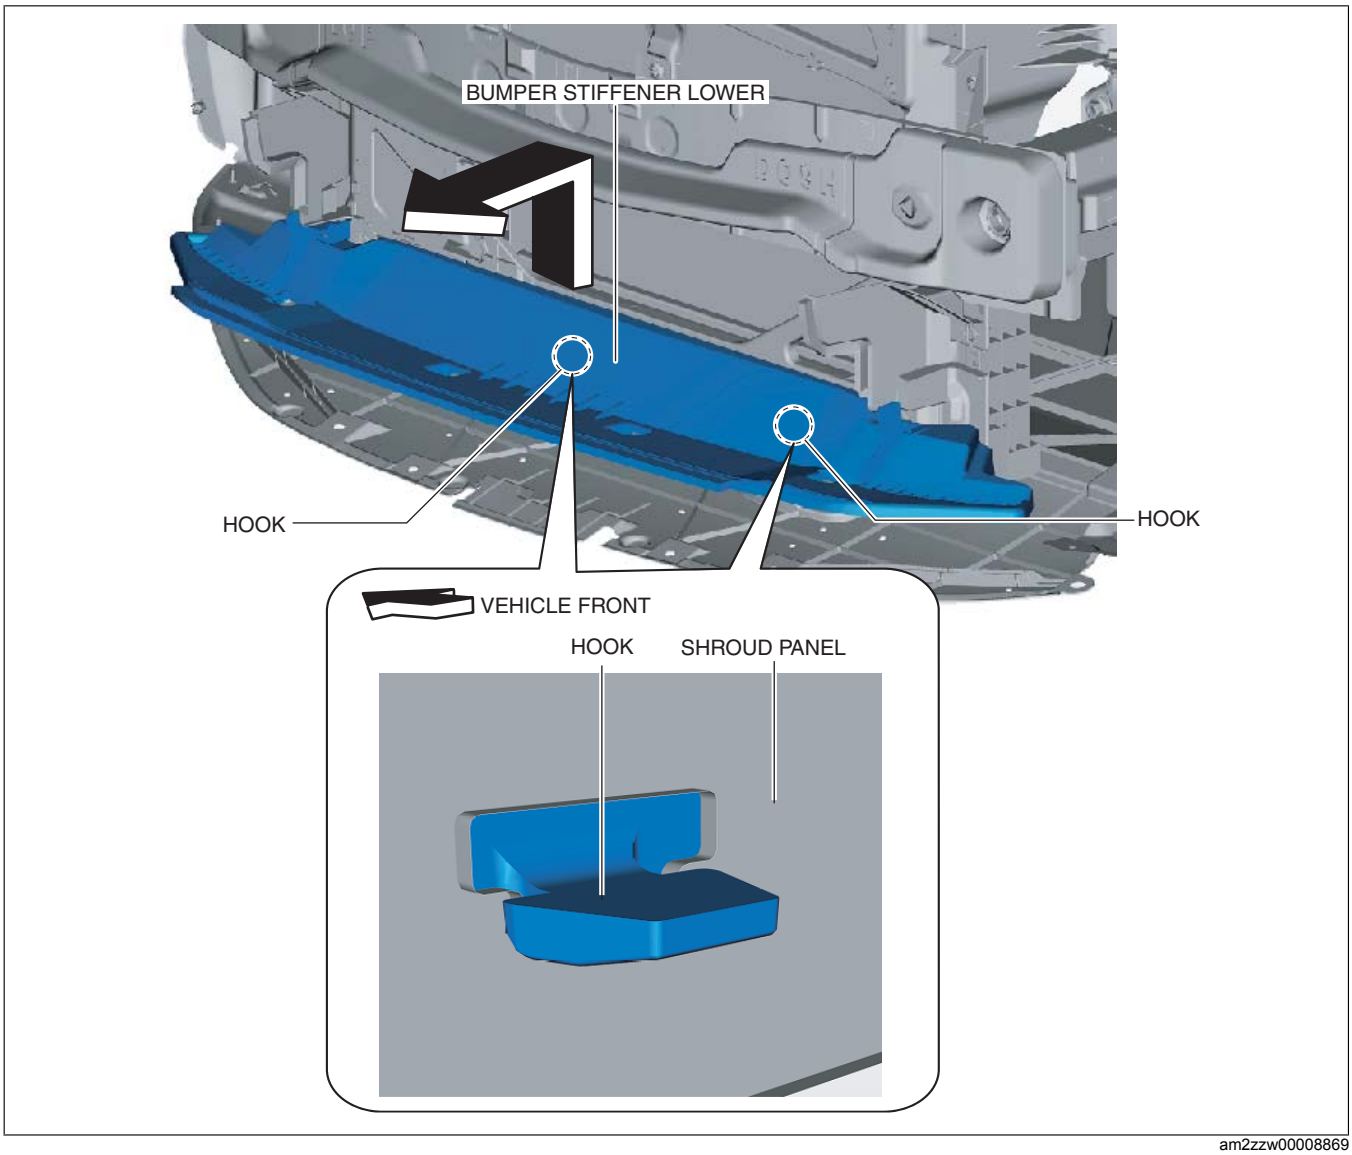

am2zzw00008869

5. Remove the bumper stiffener lower.
6. Install in the reverse order of removal.