
SEAL PLATE REMOVAL/INSTALLATION


id091000889000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Remove the bumper stiffener lower. (See BUMPER STIFFENER LOWER REMOVAL/INSTALLATION.)
4. Remove the fasteners.

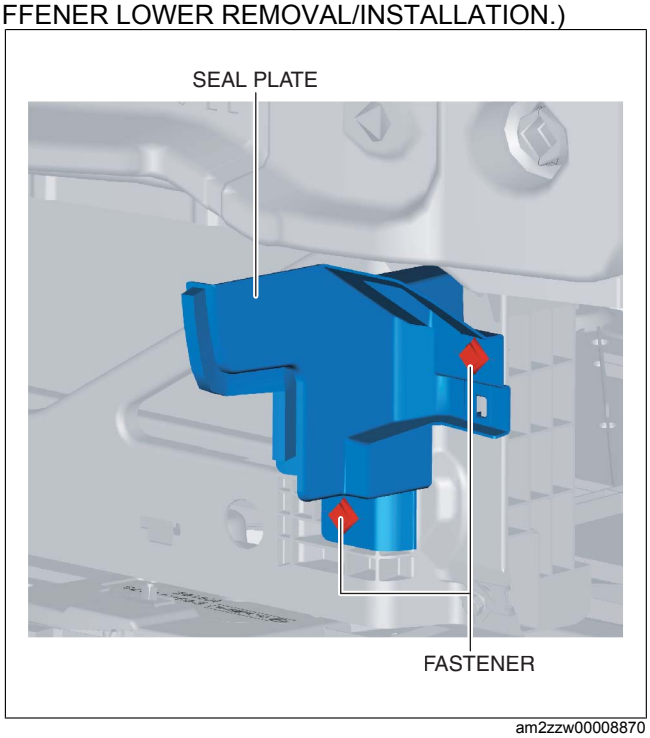

am2zzw00008870

5. While pressing tab in the direction of arrow (1), remove the seal plate in the direction of arrow (2).

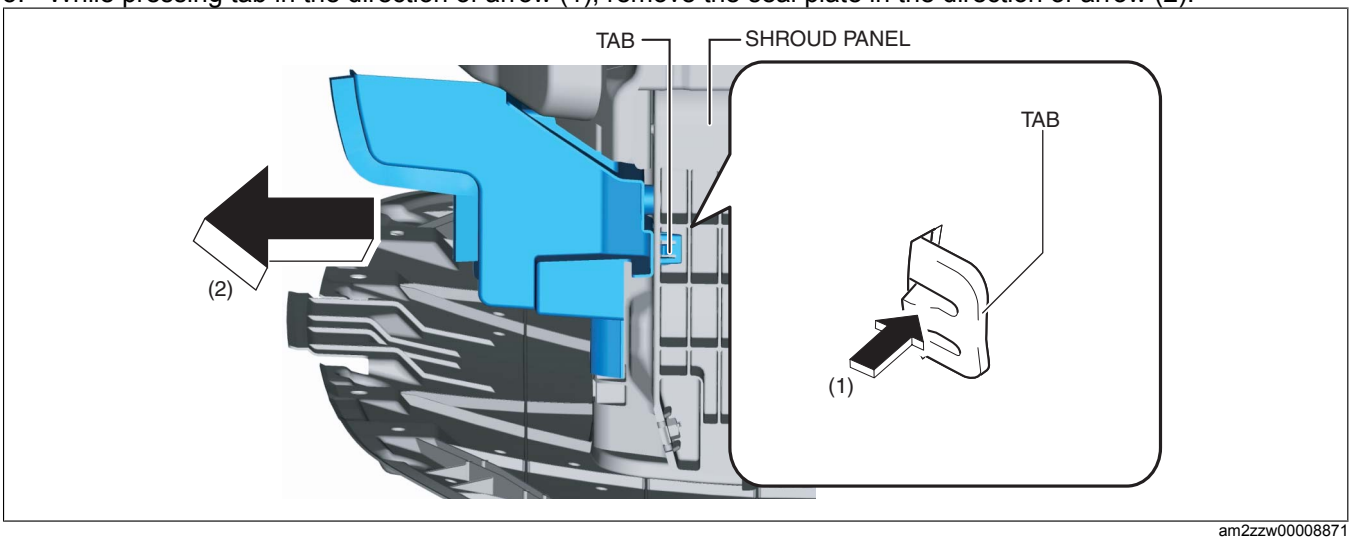

am2zzw00008871

6. Install in the reverse order of removal.