
BONNET DISASSEMBLY/ASSEMBLY

id091000899800

1. Disassemble in the order indicated in the table.

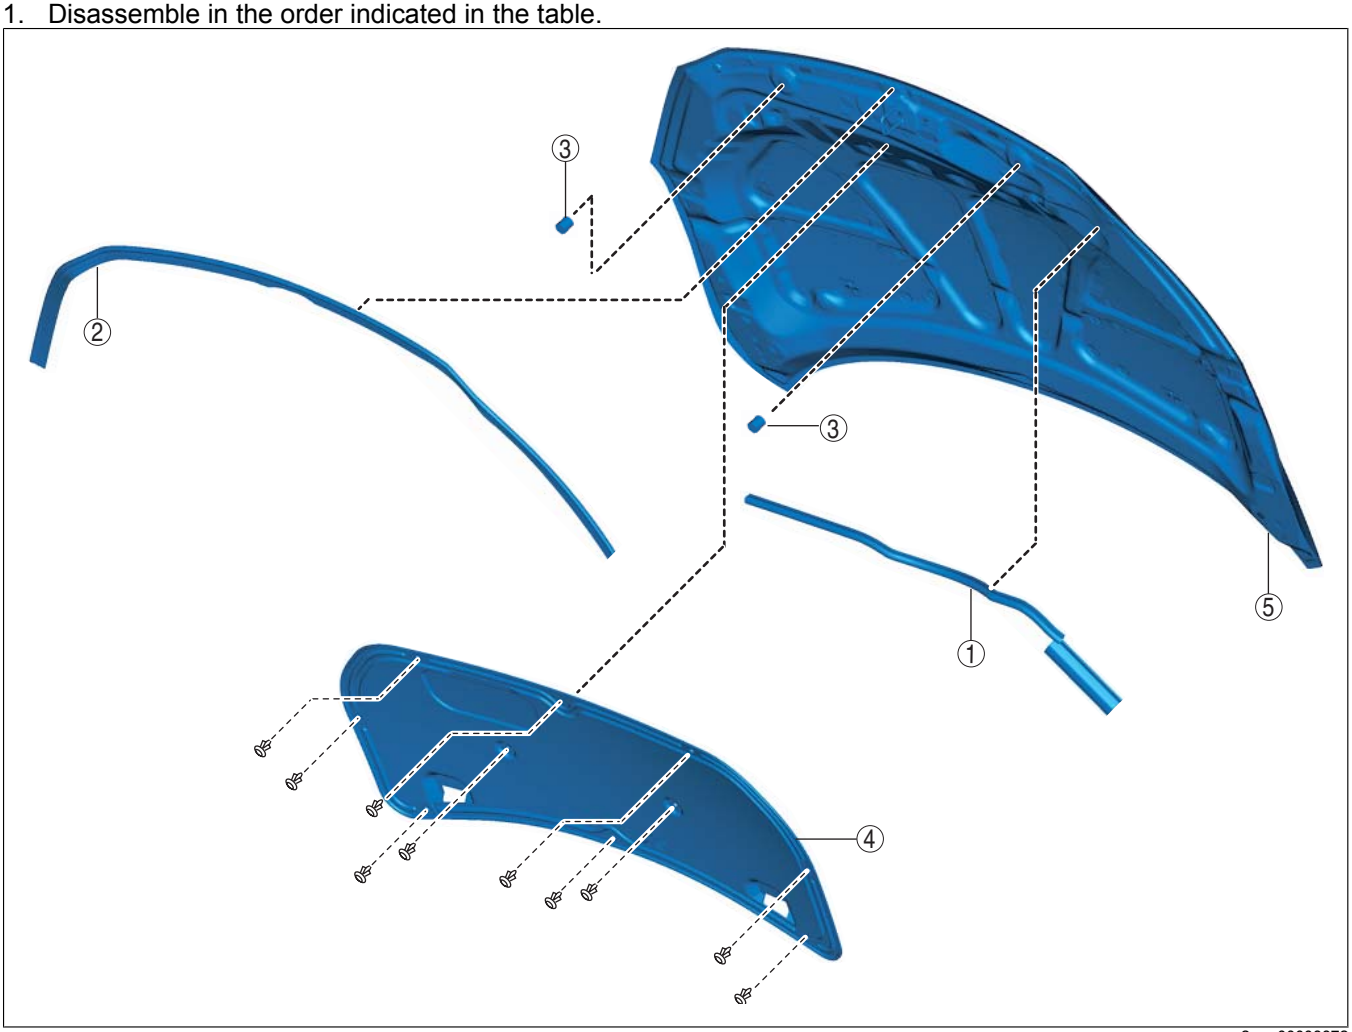

am2zzw00008872

1	Shroud seal weatherstrip
2	Parting seal weatherstrip
3	Stopper rubber
4	Bonnet insulator (with bonnet insulator)
5	Bonnet

2. Assemble in the reverse order of disassembly.