
DOOR AND LIFTGATE LOCATION INDEX

id091100520000

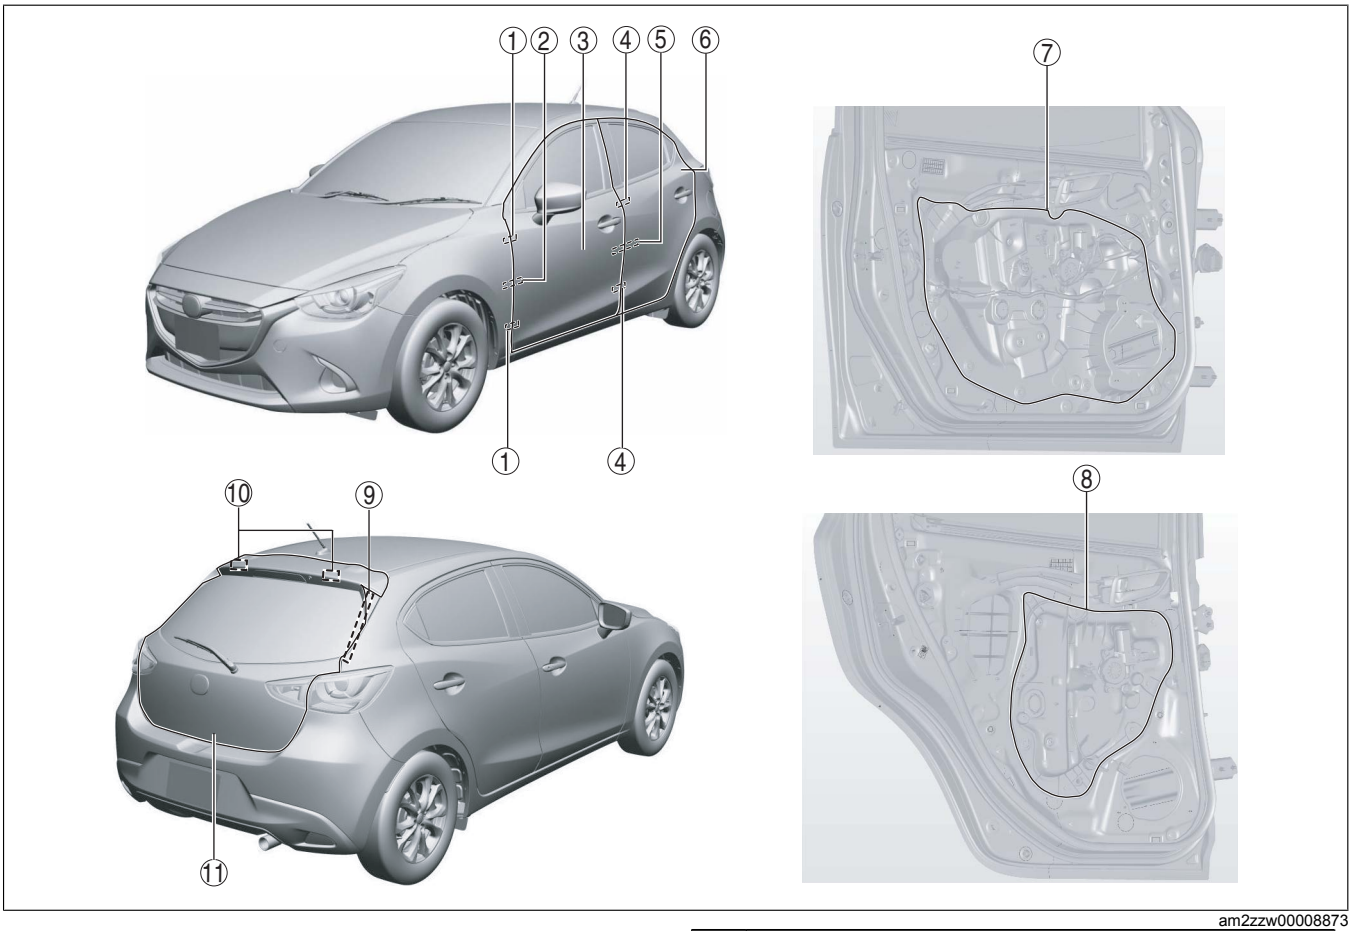

am2zzw00008873

1	Front door hinge (See FRONT DOOR HINGE REMOVAL/INSTALLATION.)
2	Front door checker (See FRONT DOOR CHECKER REMOVAL/INSTALLATION.)
3	Front door (See FRONT DOOR REMOVAL/INSTALLATION.) (See DOOR ADJUSTMENT.)
4	Rear door hinge (See REAR DOOR HINGE REMOVAL/INSTALLATION.)
5	Rear door checker (See REAR DOOR CHECKER REMOVAL/INSTALLATION.)
6	Rear door (See REAR DOOR REMOVAL/INSTALLATION.) (See DOOR ADJUSTMENT.)

7	Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
8	Rear door module panel (See REAR DOOR MODULE PANEL REMOVAL/INSTALLATION.)
9	Stay damper (See LIFTGATE REMOVAL/INSTALLATION.) (See STAY DAMPER DISPOSAL.)
10	Liftgate hinge (See LIFTGATE HINGE REMOVAL/INSTALLATION.)
11	Liftgate (See LIFTGATE REMOVAL/INSTALLATION.) (See LIFTGATE ADJUSTMENT.)