
FRONT DOOR HINGE REMOVAL/INSTALLATION

id091100520500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Front bumper (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
   (2) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (3) Front bumper slider (See BUMPER SLIDER REMOVAL/INSTALLATION.)
   (4) Front fender molding (See FRONT FENDER MOLDING REMOVAL/INSTALLATION.)
   (5) Front fender panel (See FRONT FENDER PANEL REMOVAL/INSTALLATION.)
   (6) Front door (See FRONT DOOR REMOVAL/INSTALLATION.)
3. Remove the bolts.
4. Remove the front door hinge.
5. Install in the reverse order of removal.
6. Adjust the front door. (See DOOR ADJUSTMENT.)

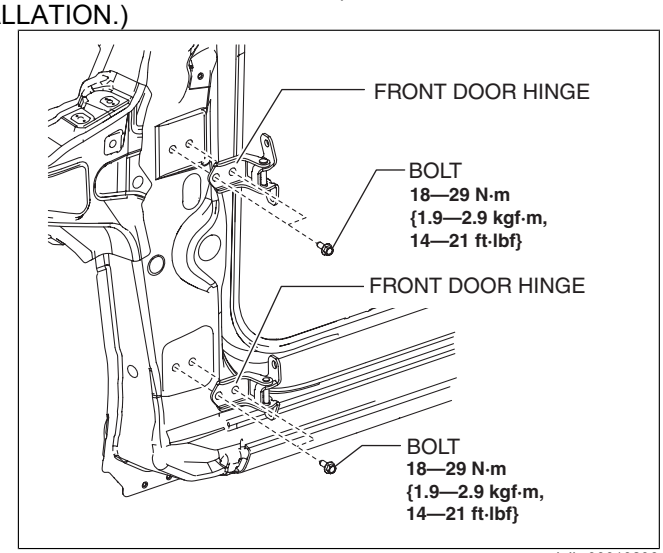

adejjw00010296