
REAR DOOR HINGE REMOVAL/INSTALLATION

id091100520800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Rear door (See REAR DOOR REMOVAL/INSTALLATION.)
   (2) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (4) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
3. Remove the bolts and nut.
4. Remove the rear door hinge.
5. Install in the reverse order of removal.
6. Adjust the rear door. (See DOOR ADJUSTMENT.)

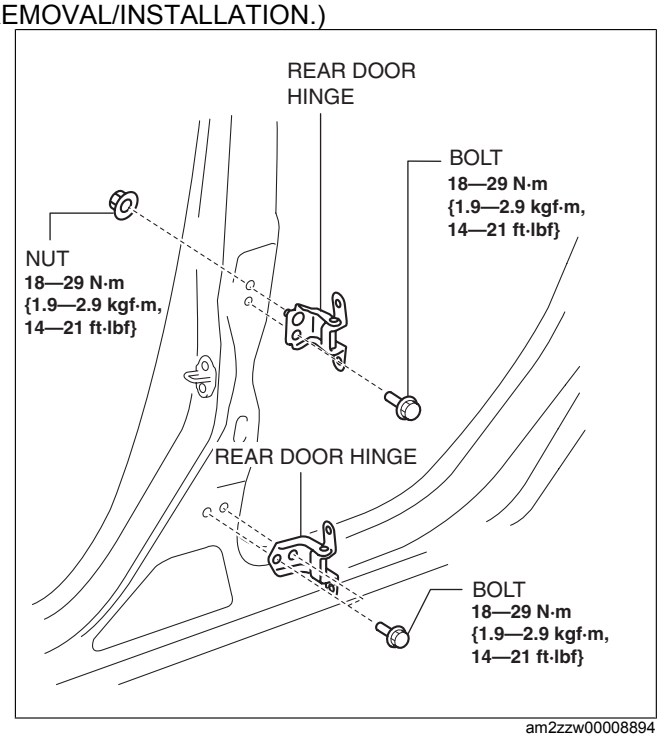

am2zzw00008894