
DOOR ADJUSTMENT

id091100521100

1. Measure the gap and height difference between the door and the body.

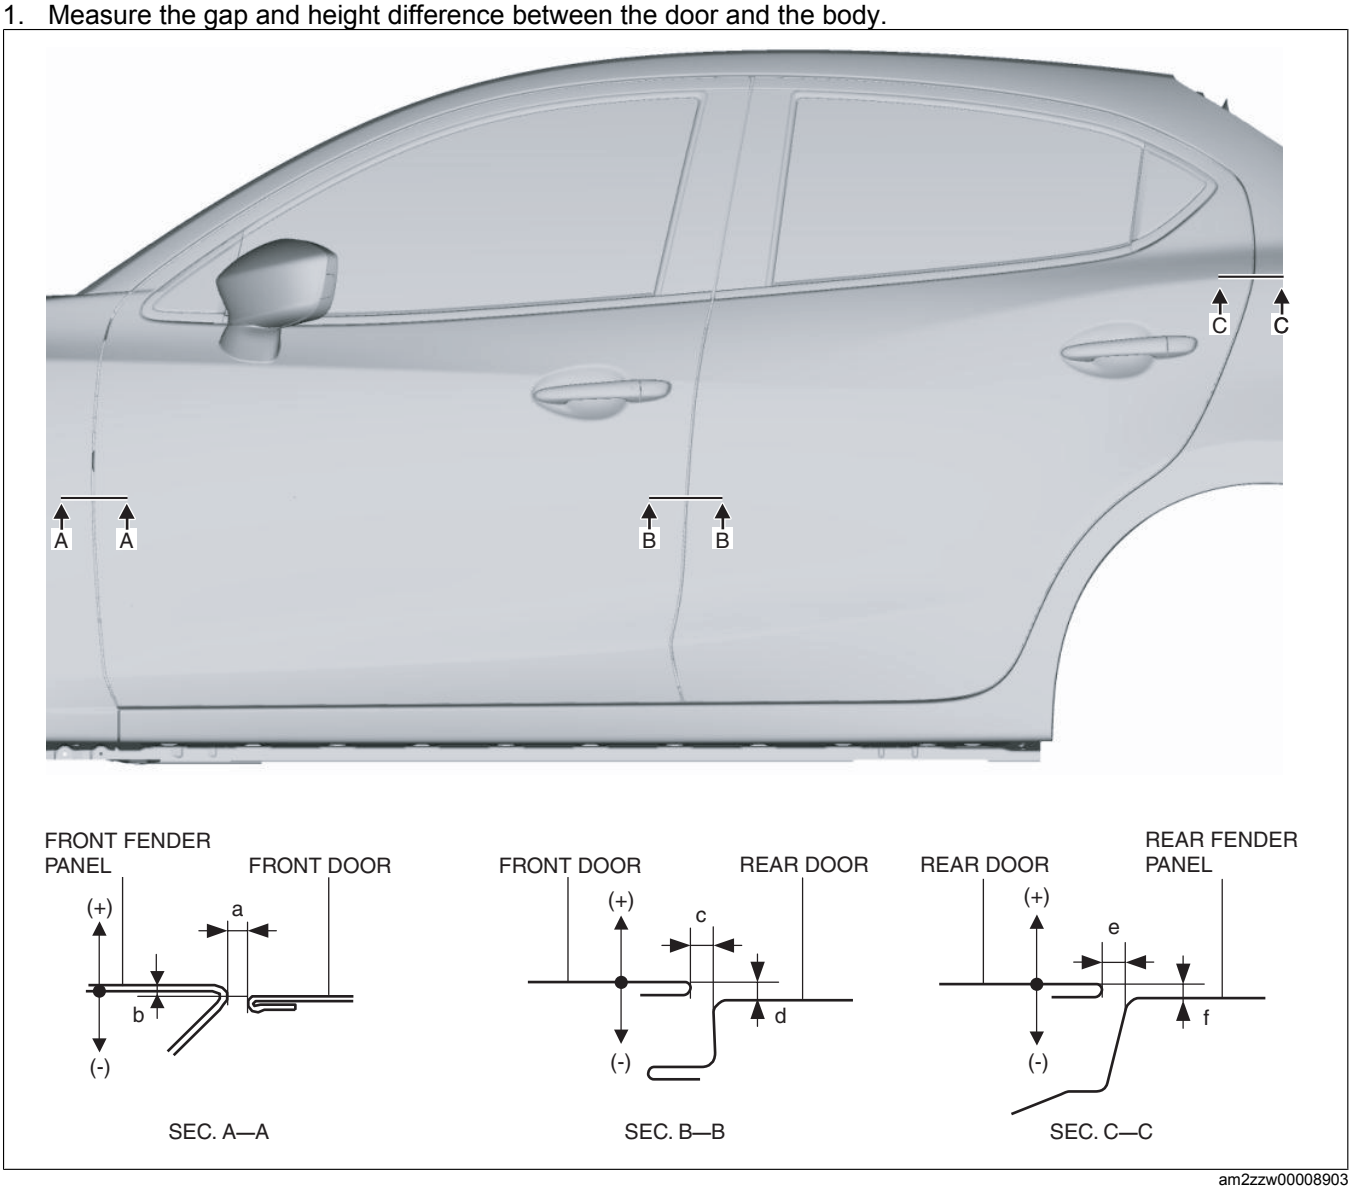


am2zzw00008903

Standard clearance
a: 2.7—4.5 mm {0.11—0.17 in}
b: –1.0—1.0 mm {–0.039—0.039 in}
c: 2.7—4.5 mm {0.11—0.17 in}
d: –1.0—1.0 mm {–0.039—0.039 in}
e: 2.5—4.5 mm {0.10—0.17 in}
f: –1.1—0.9 mm {–0.043—0.035 in}

- If the measured value exceeds the standard clearance, adjust the door using the following procedure:
  1. Loosen the door hinge installation bolts, and reposition the door. (See FRONT DOOR REMOVAL/INSTALLATION.) (See REAR DOOR REMOVAL/INSTALLATION.)
  2. Tighten the door hinge installation bolts and nut. (See FRONT DOOR REMOVAL/INSTALLATION.) (See REAR DOOR REMOVAL/INSTALLATION.)
  3. Verify that the gap and height difference between the door and the body is within the specification.
  4. If the door does not open/close smoothly, adjust it by loosening the door lock striker installation screw. (See DOOR LOCK STRIKER REMOVAL/INSTALLATION.)

Note
- To prevent paint from peeling off due to chipping, the shapes on the front lower side of the front door outer panel and the rear door outer panel are as shown in the figure.

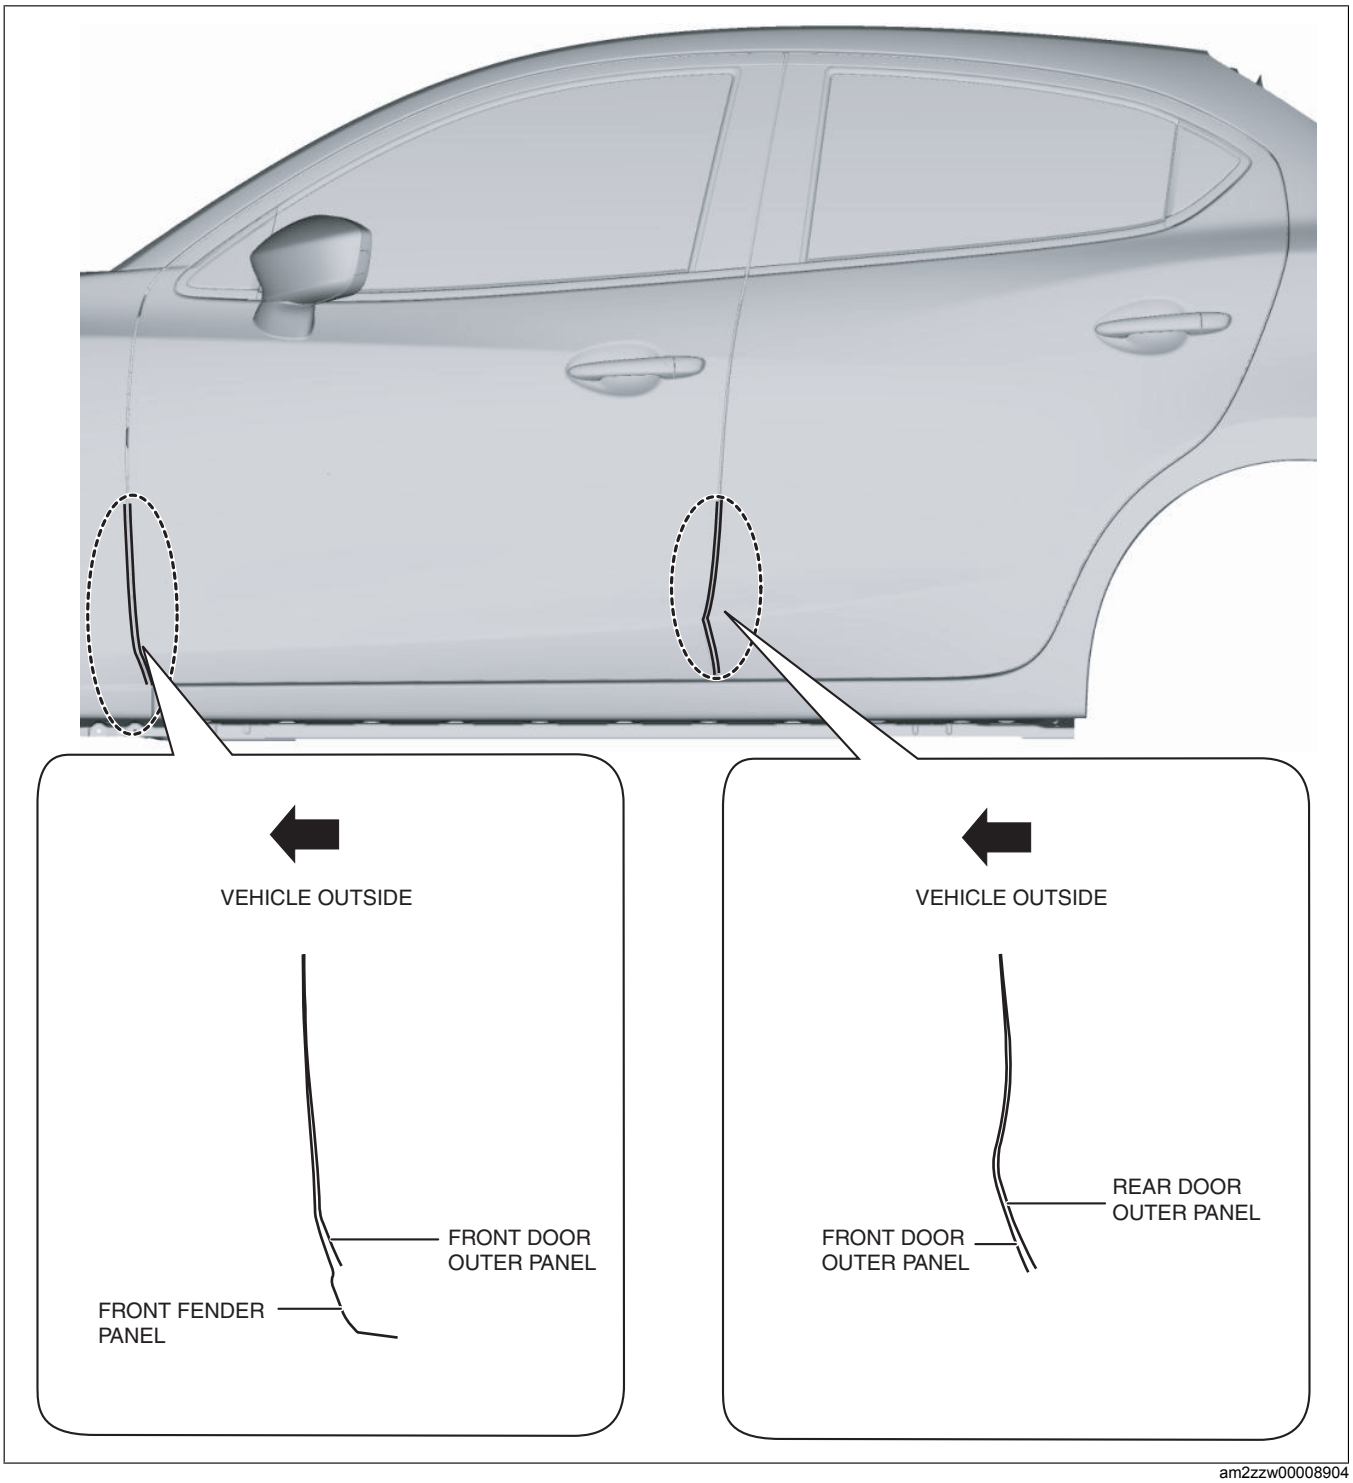

am2zzw00008904

2. Verify that the door opens/closes smoothly.
3. Spray or pour water on the door and surrounding area using a hose or high pressure water pressure car wash and verify that there is no water leakage.