
LIFTGATE REMOVAL/INSTALLATION

id091100521200

Caution

- **Removing the stay damper, liftgate hinge securing bolt, or liftgate without supporting the liftgate may cause the liftgate to fall off and injure you. When removing the stay damper, liftgate hinge, or liftgate, always use two persons to perform the work.**


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the dad antenna amplifier. (See DAB ANTENNA AMPLIFIER REMOVAL/INSTALLATION.)
3. Remove the liftgate upper trim. (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
4. Disconnect the rear defogger connector and the high-mount brake light connectors.

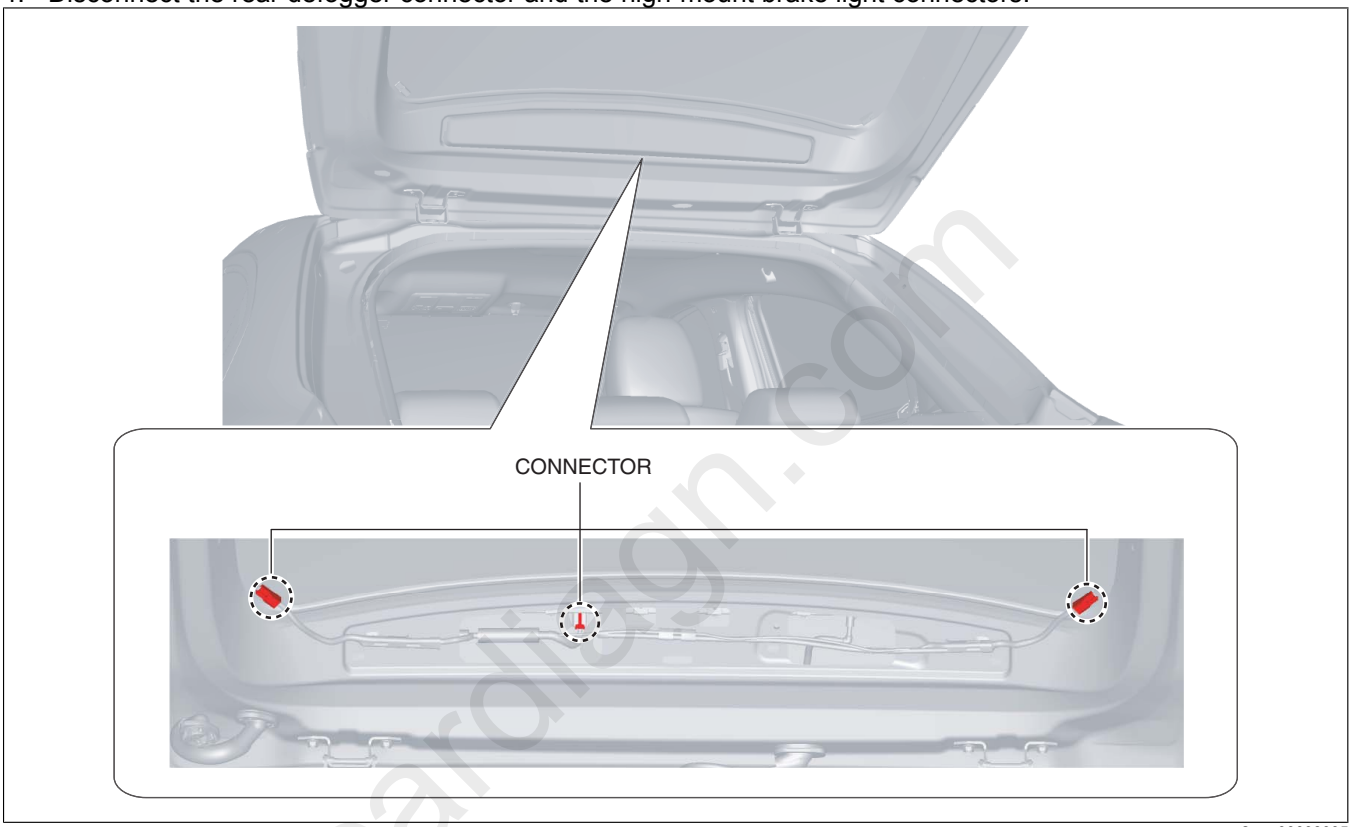

am2zzw00008905


5. Remove the clips from the liftgate.

cardiagn.com

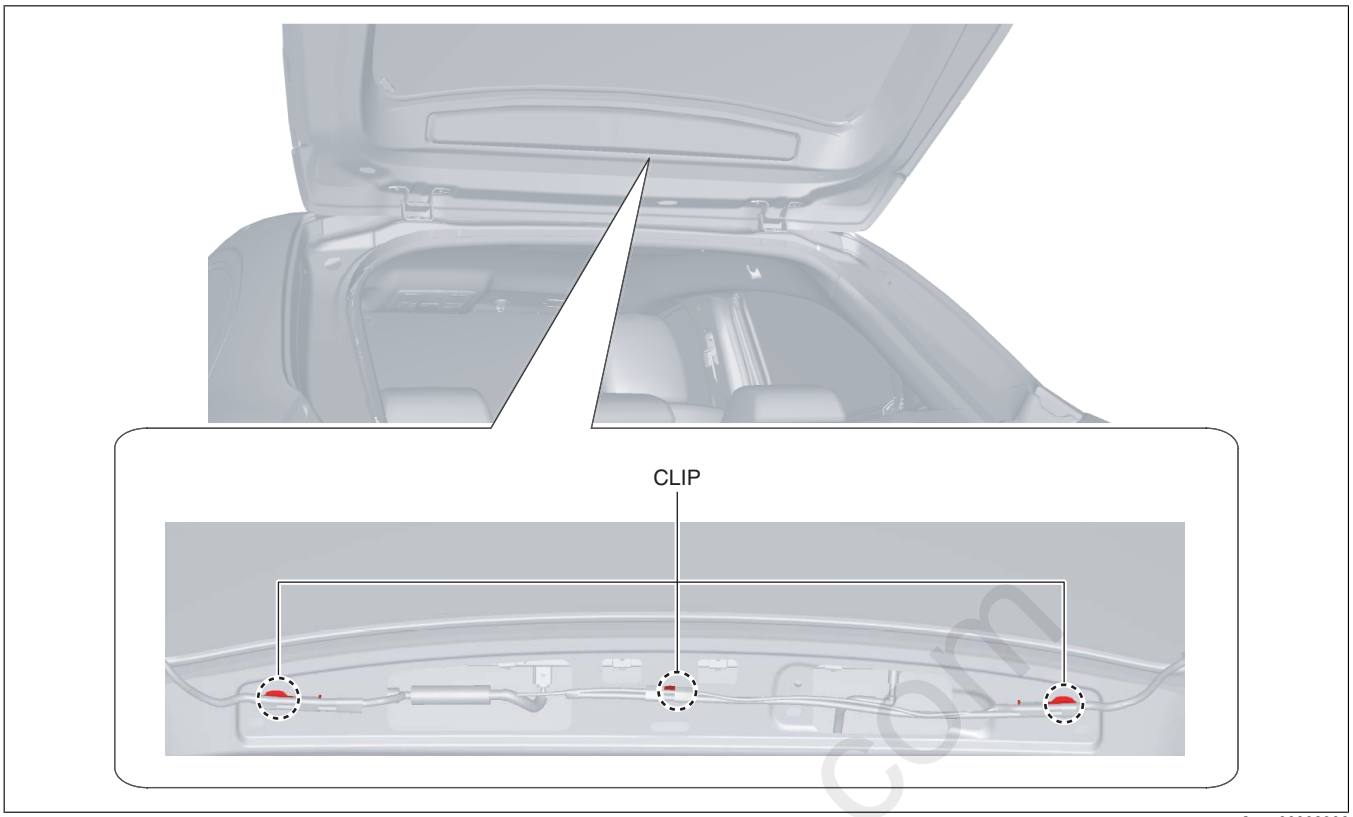

am2zzw00008906


6. Disconnect the rear washer hose.

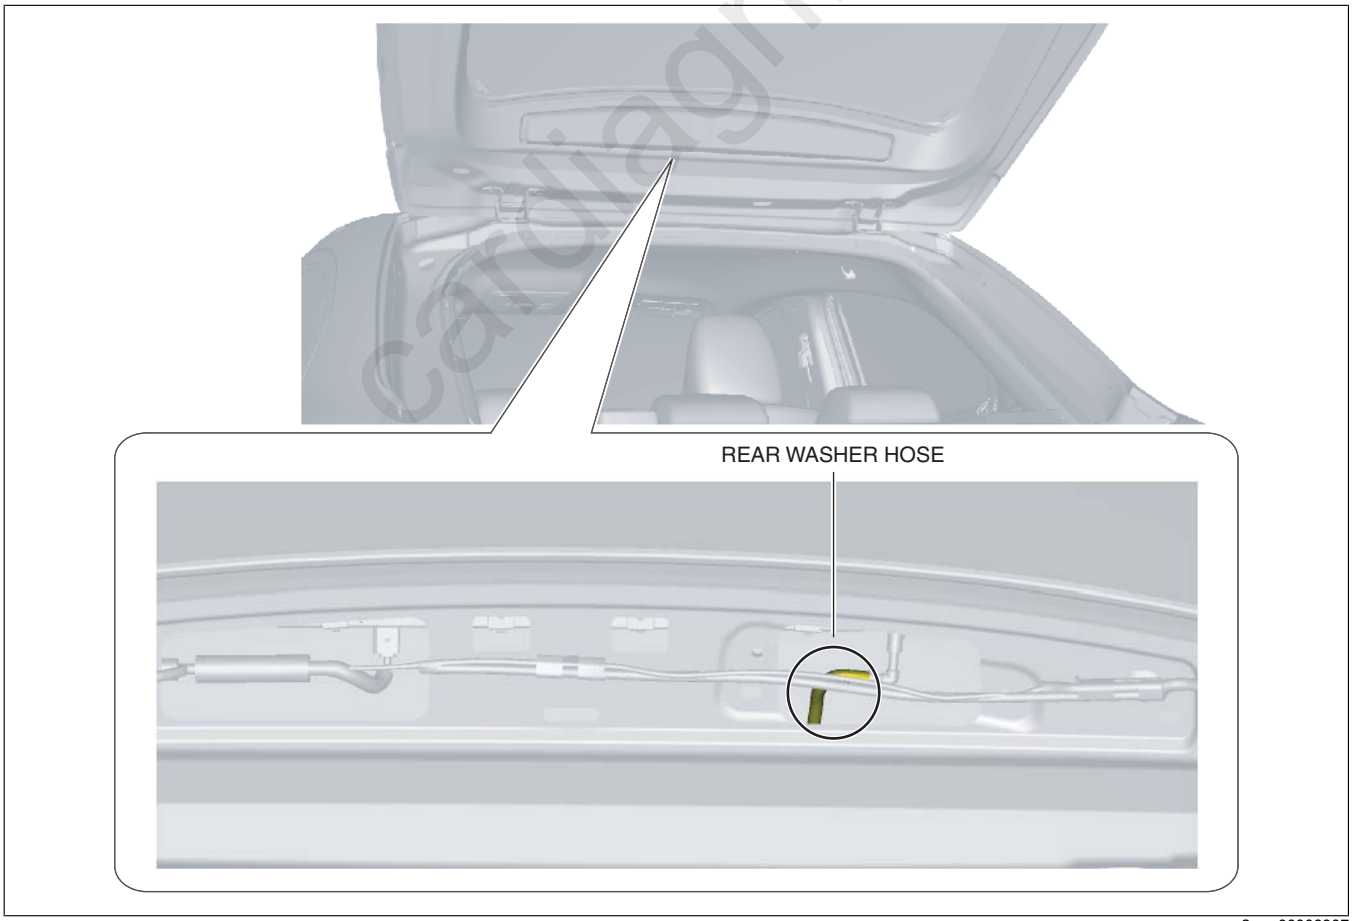

am2zzw00008907


7. Remove the liftgate lower trim. (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
8. Disconnect the short-cord connector.

carmanualsonline.com

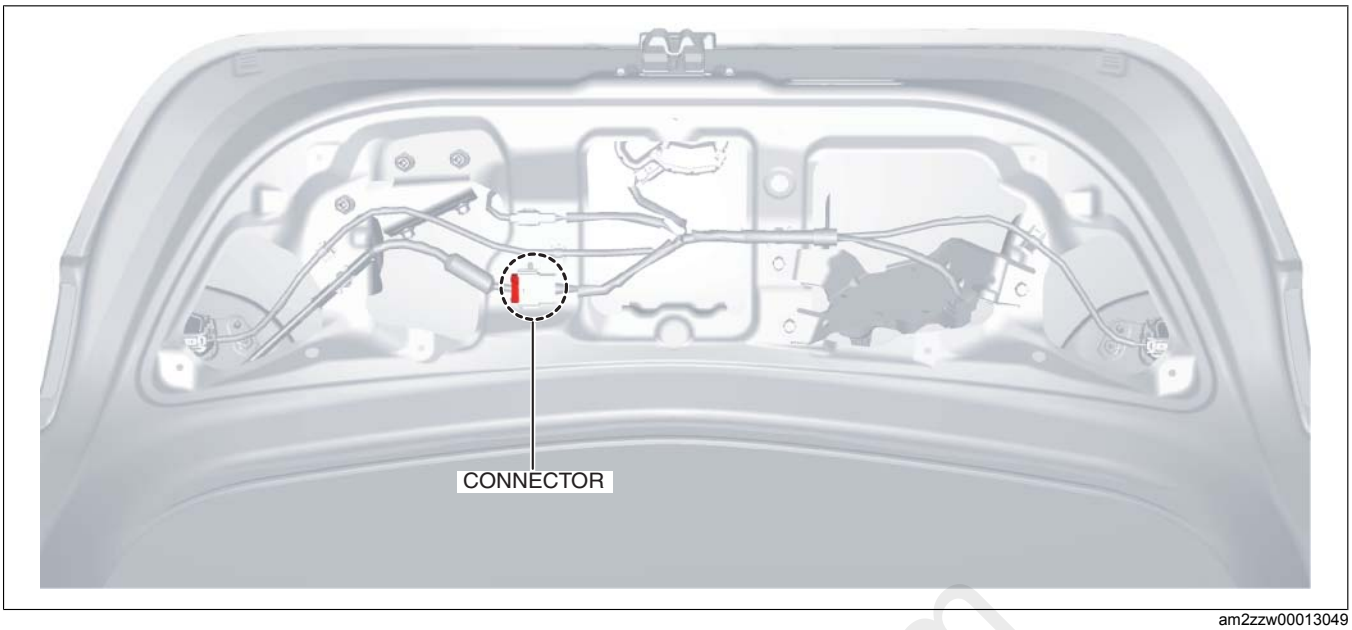

am2zzw00013049


9. Remove the clip from the liftgate.

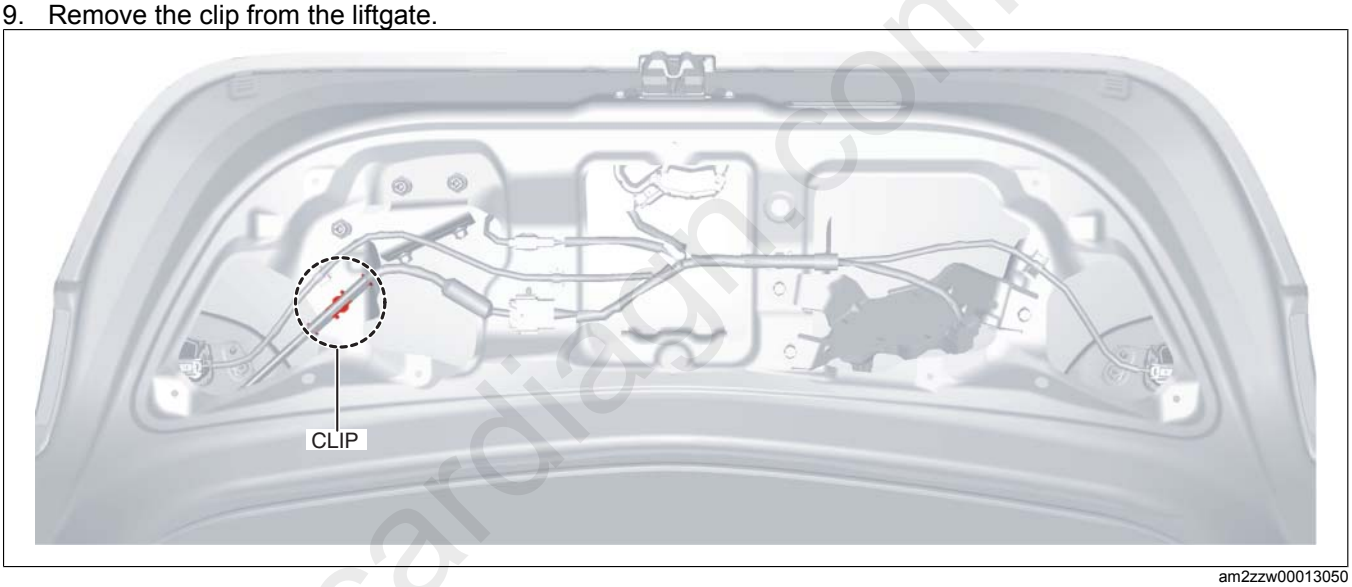

am2zzw00013050

10. Partially peel the liftgate grommet in the direction of the arrow shown in the figure.


cardiagn.com

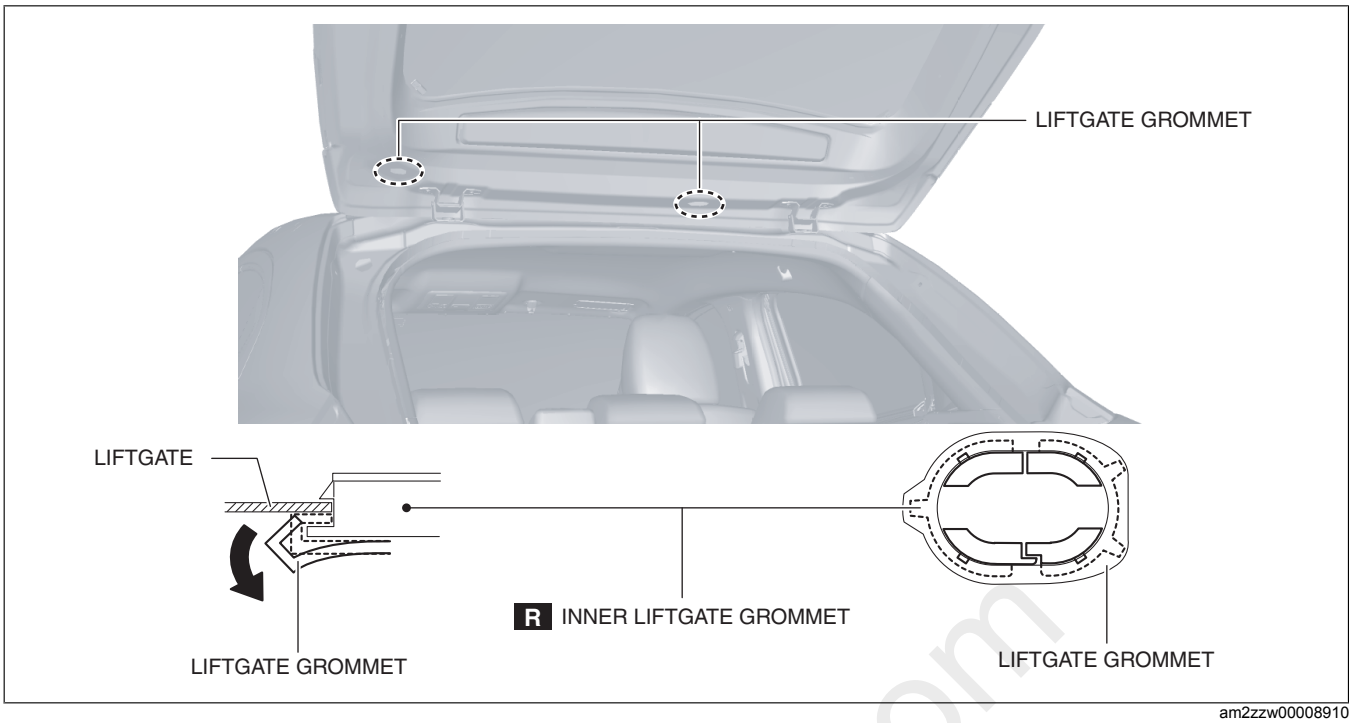

am2zzw00008910

11. While pressing the tab of the inner liftgate grommet in the direction of arrow (1) shown in the figure using the remover tool, pull the inner liftgate grommet in the direction of arrow (2) shown in the figure to detach the tab of the inner liftgate grommet from the liftgate.

cardiagn.com

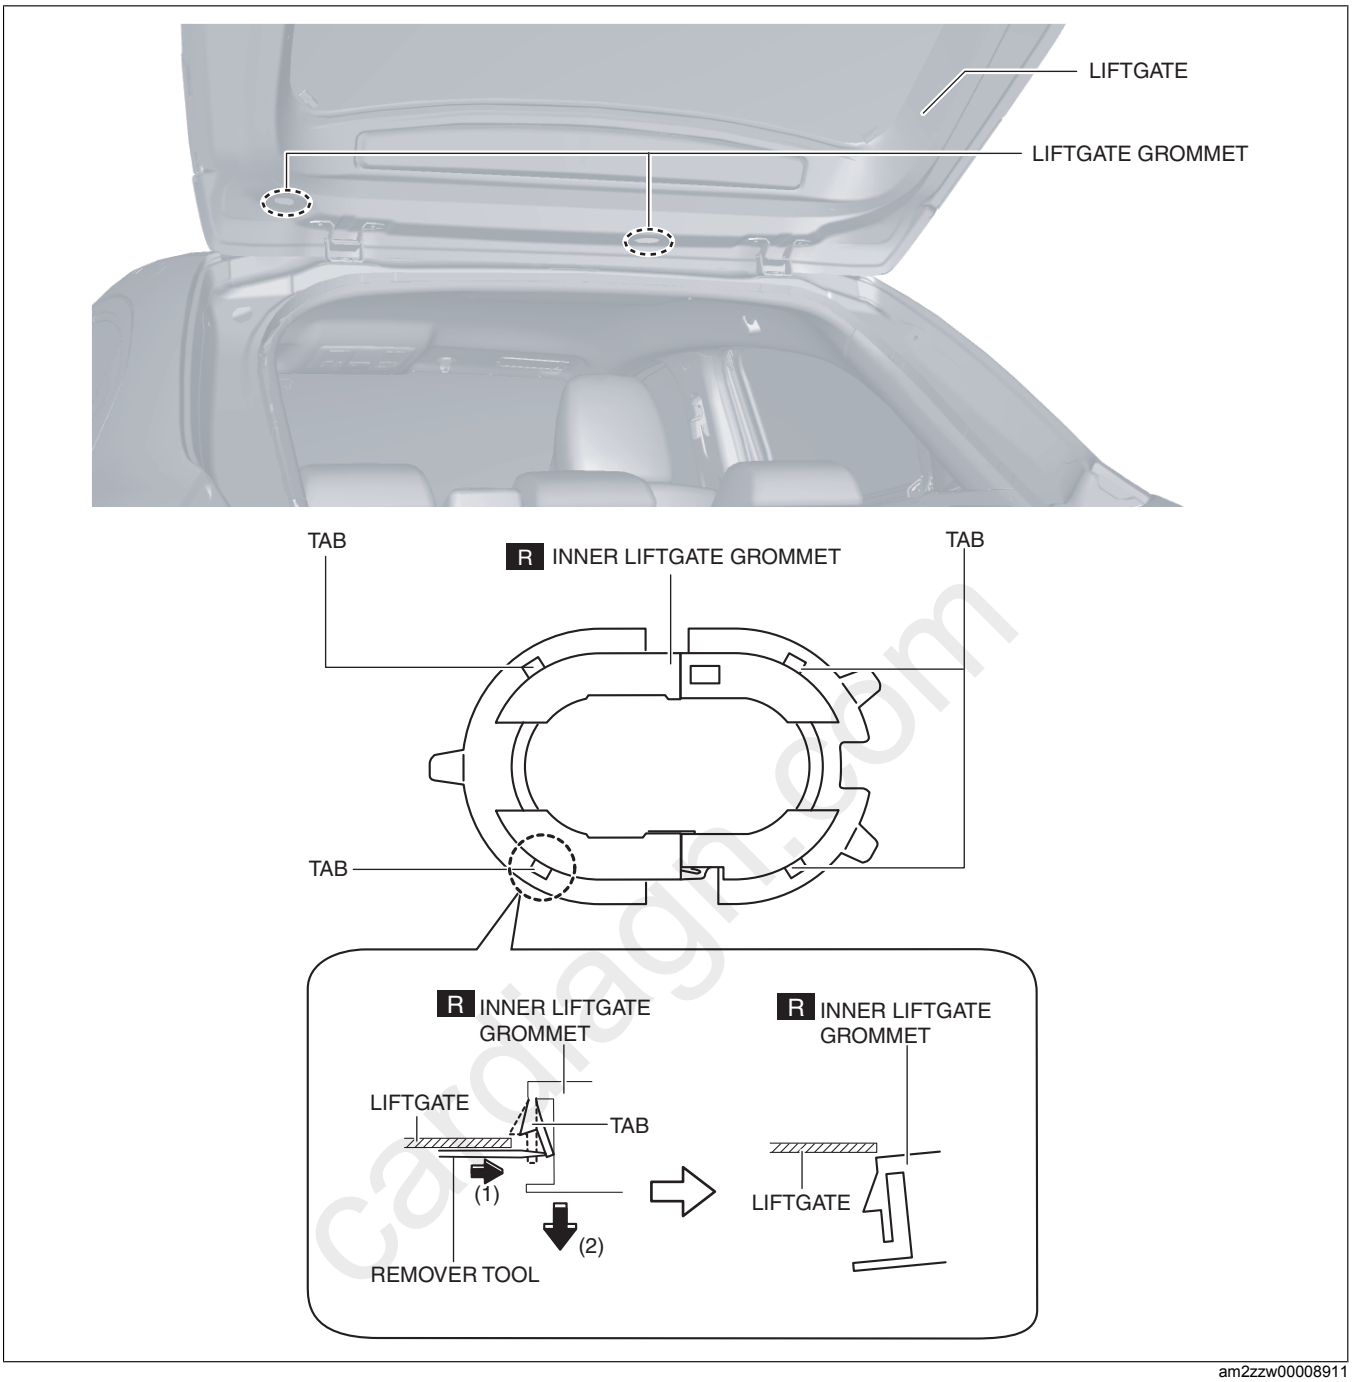


am2zzw00008911

12. Detach all the tabs of the inner liftgate grommet from the liftgate and remove the inner liftgate grommet.

Note

- If the liftgate is to be replaced with a new one, remove the liftgate without tying a string to the wiring harness.

13. Tie a string to the wiring harness.

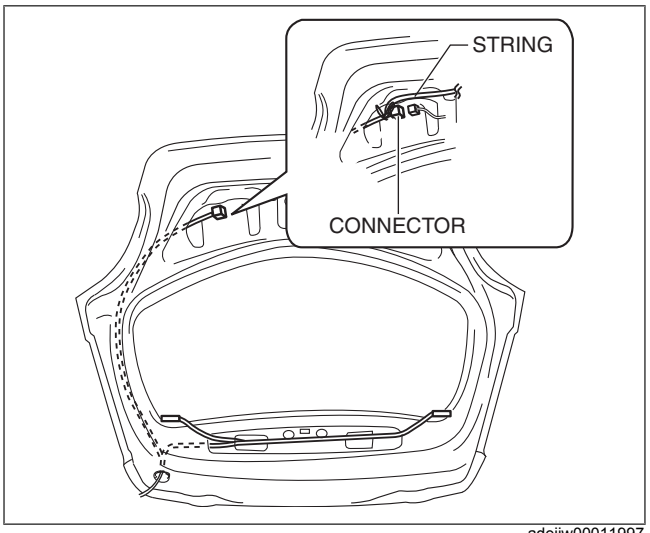


adejjw00011997


14. Pull out the liftgate wiring harness while grasping the end of the string so that the end of the string does not enter the liftgate.
15. Untie the string from wiring harness.
16. Pull out the rear washer hose from the liftgate.

Warning
- **When removing the stay damper securing band, serious injury may occur if the stay damper is removed without supporting the liftgate. Always perform the procedure with at least another person.**

17. Insert the remover tool in the position shown in the figure.

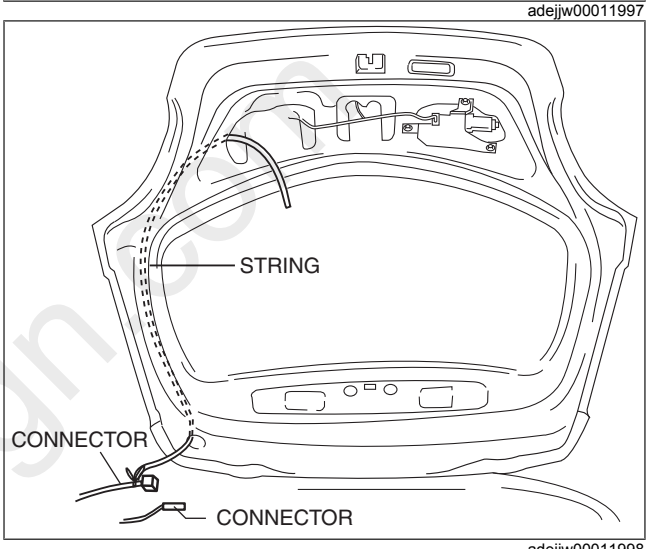


adejjw00011998

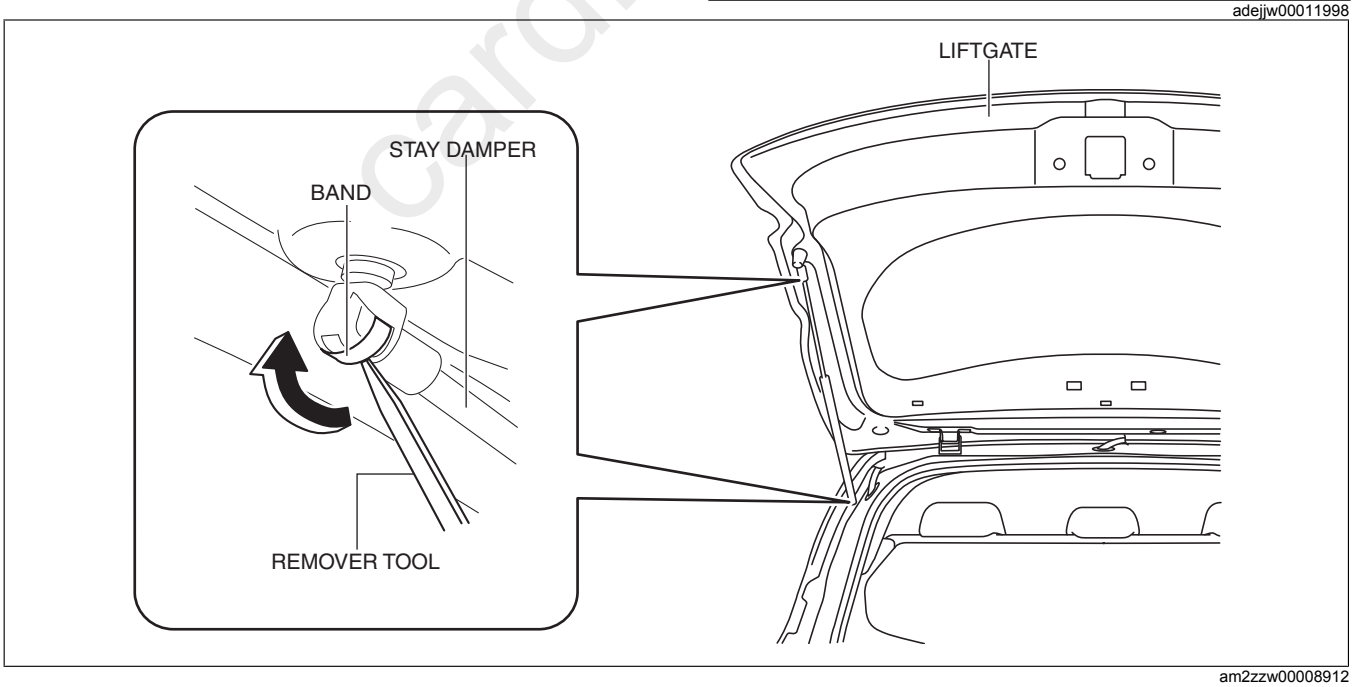

am2zzw00008912


18. Move the remover tool in the direction of the arrow shown in the figure and remove the band.
19. Remove the stay damper.
20. Remove the bolts.

cardiagn.com

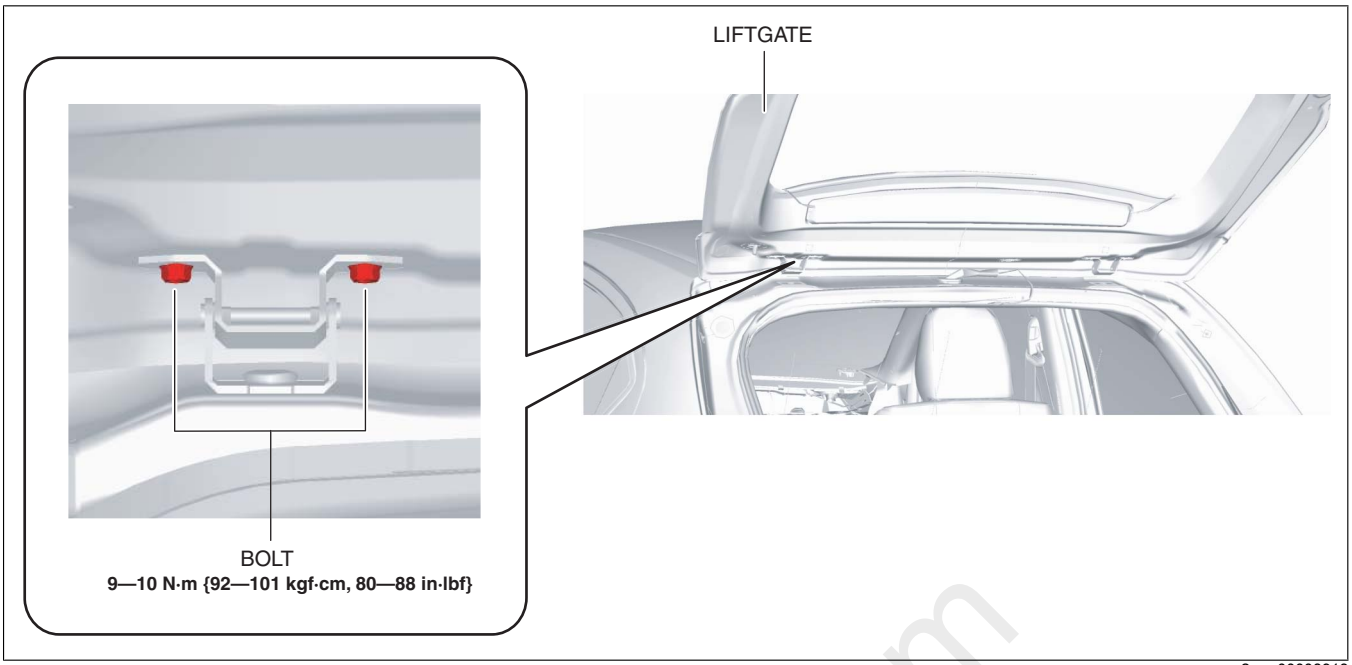

am2zzw00008913

21. Remove the liftgate.
22. Remove the stud balls.

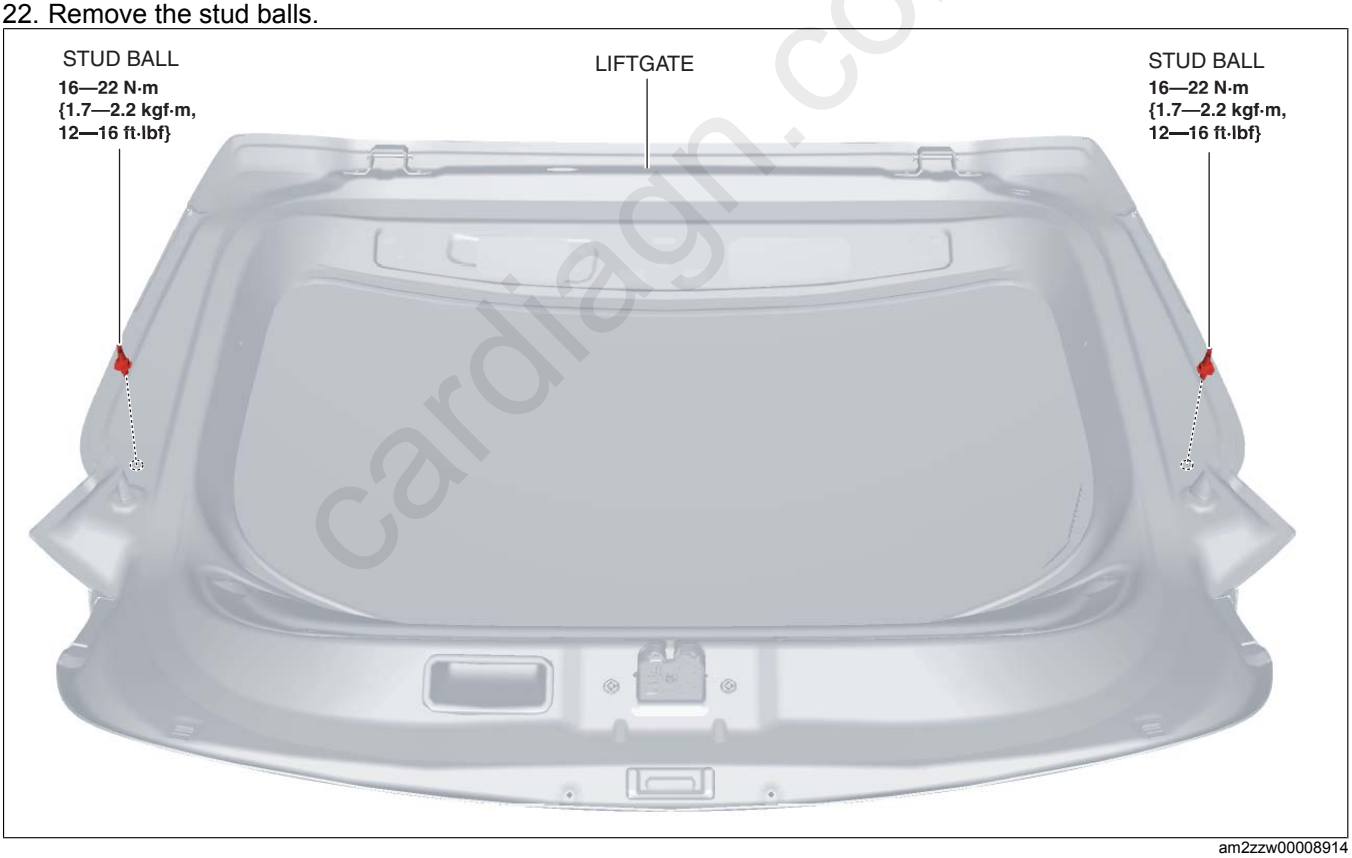

am2zzw00008914

23. Install in the reverse order of removal. (See Liftgate Grommet Installation Note.)
24. Adjust the liftgate. (See LIFTGATE ADJUSTMENT.)

Liftgate Grommet Installation Note


Caution

- **Install the inner liftgate grommet so that there is no gap between the liftgate grommet and the inner liftgate grommet. Otherwise, it may cause water leakage.**
- **After installing the liftgate, shake the inner liftgate grommet to verify that the tabs are securely engaged. If there is gap between the liftgate grommet and the liftgate, it may cause water leakage.**

1. Install the liftgate grommet using the following procedure:


cardiagn.com

(1) Engage a new inner liftgate grommet.

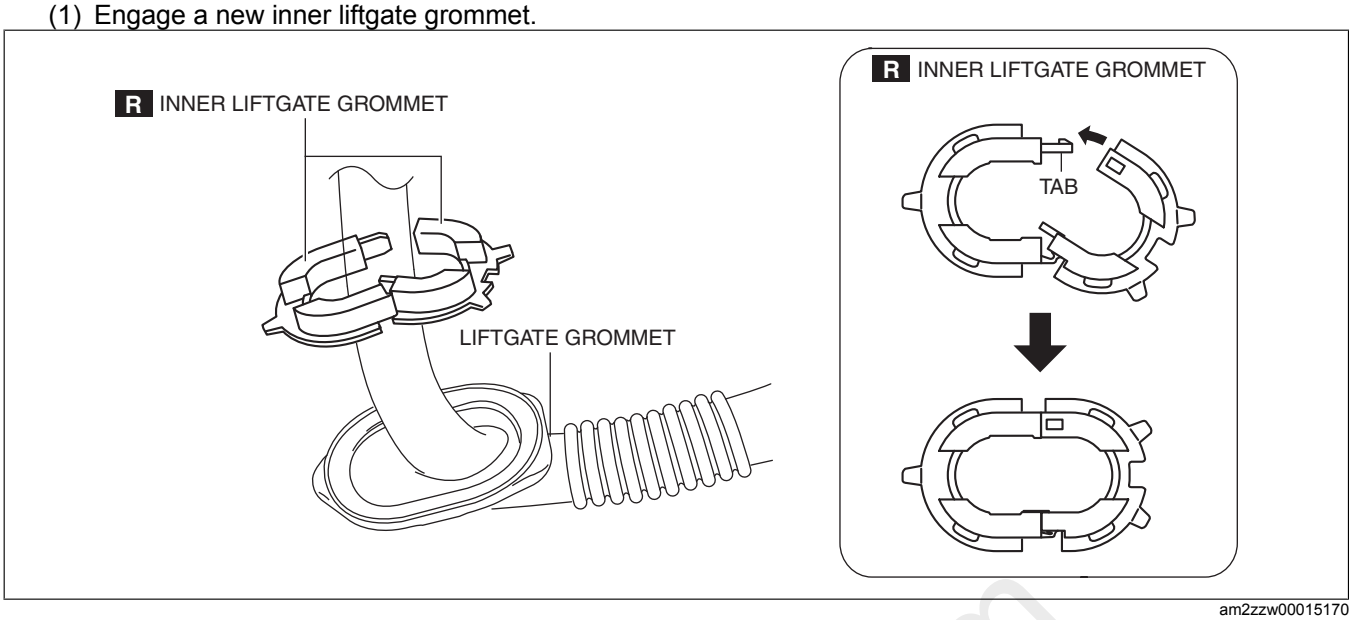

am2zzw00015170


(2) Install the inner liftgate grommet to the liftgate grommet.

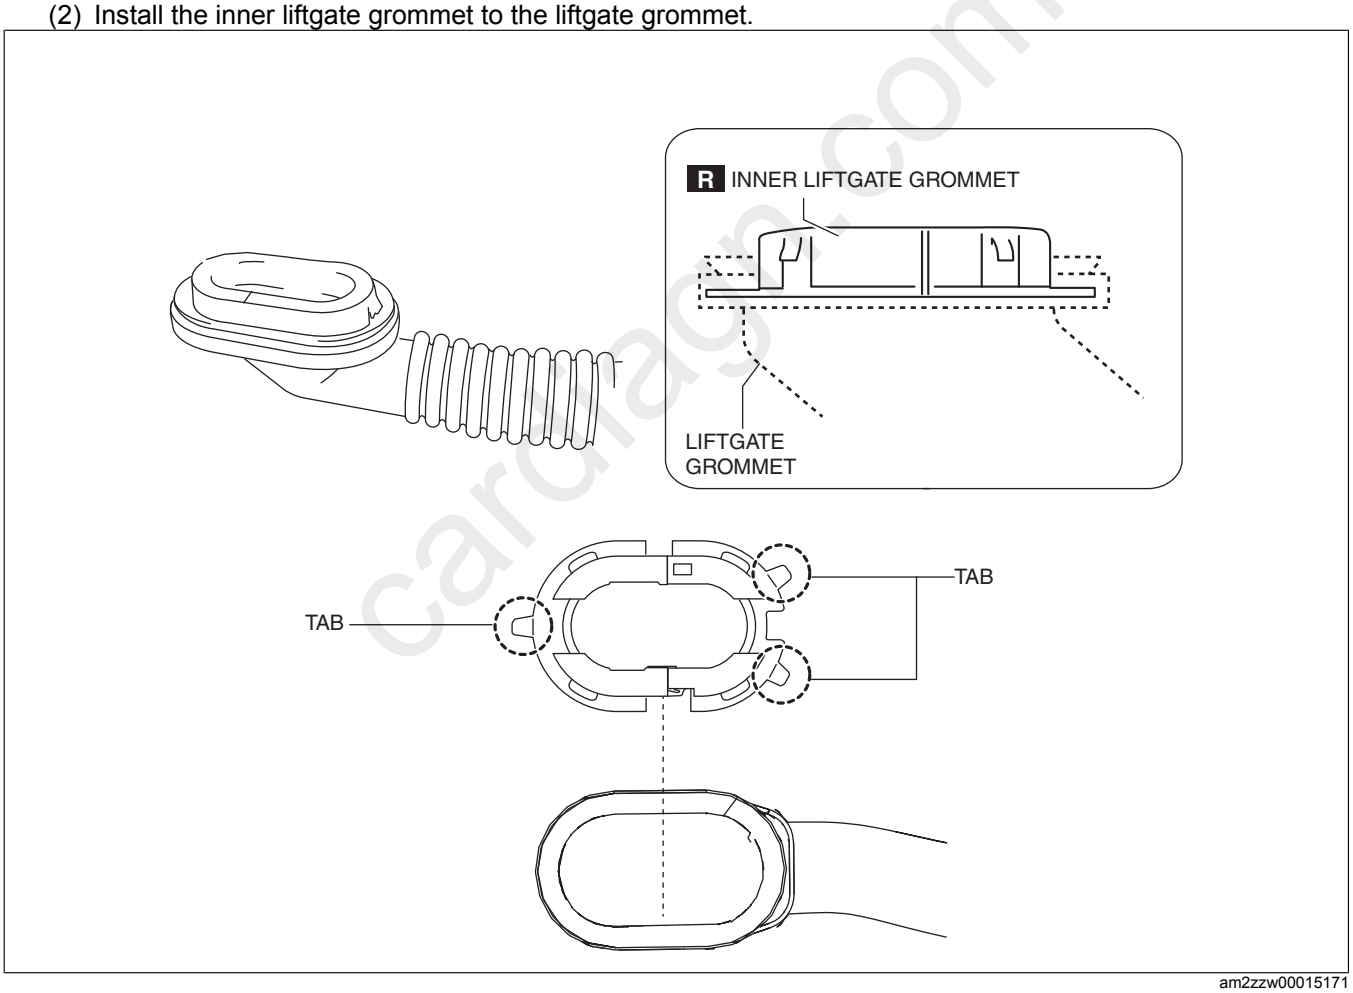

am2zzw00015171

(3) Press the inner liftgate grommet into the liftgate side and engage the tabs of the inner liftgate grommet with the liftgate side.

cardiagn.com

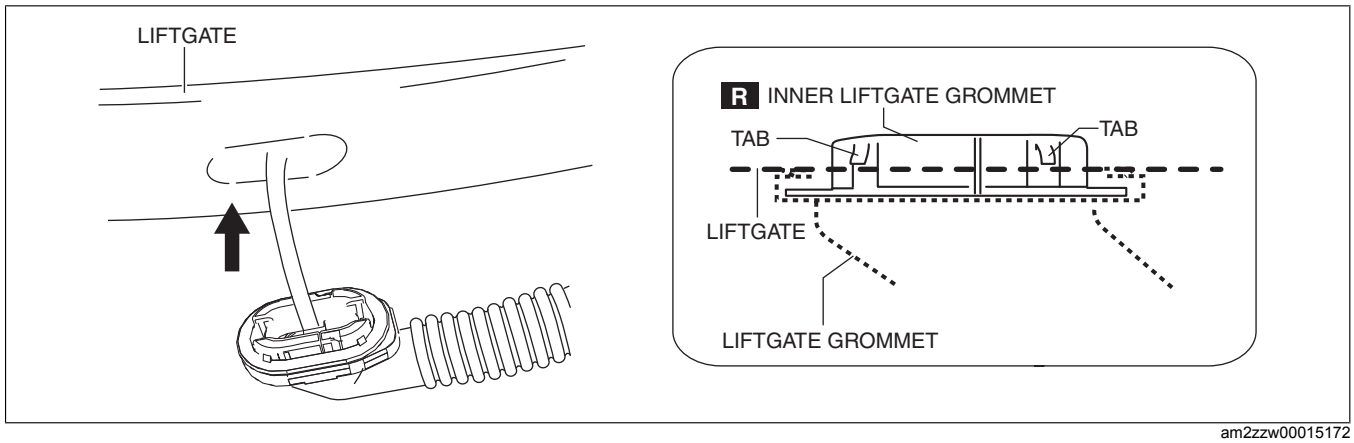

am2zzw00015172

cardiagn.com